

# service bulletin

TO: SERVICE MANAGER ☐ PARTS MANAGER ☐

MECHANICS □

▲ Revised 10-6-93

No. 93-24

## A. BRAVO THREE BEARING CARRIER OIL SEALS

### **Models**

**BRAVO THREE DRIVES (ONLY)** 

#### **Problem**

Bearing carrier oil seal, The rubber seal may be loose in the steel casing and could cause oil to leak from the outer propeller shaft area and also may allow water to leak into the drive unit, In either case this could cause damage to the drive unit, and they should be replaced.

#### SERIAL NUMBER GROUPS THAT REQUIRE SEAL REPLACEMENT

0F050478 THRU 0F050480
0F050496 THRU 0F050499
0F125725 THRU 0F125728
0F125732 THRU 0F125735
0F186271 THRU 0F186272
0F186296 ONLY
0F112243 THRU 0F112274
0F186073 THRU 0F186078
0F186099 THRU 0F186101
0F186105 THRU 0F186107
0F186111 THRU 0F186147
0F125500 THRU 0F125502
0F050312 ONLY
0F050269 ONLY
0F050383 ONLY

# **Tools Required**

(1) 91-805374--1 Bearing Carrier Tool




(1) 91-805372 Oil Seal Installation Tool

# **Parts Required**

(2) 26-805080 Oil Seals

(Shown in the illustration below)

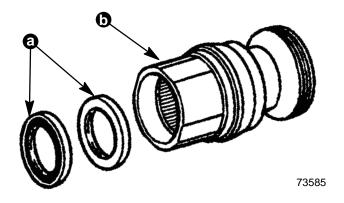

- a Oil Seals (2)
- b Bearing Carrier

# Repair

Follow the repair procedures in service manual Number (11) section (3D) Gear Housing Repair.

# Warranty

Fill out a warranty claim and send to your normal warranty processing center.

Labor code: MD27

Labor: 2.8 hrs