





MERC 200

SERIAL NUMBER

200	USA	3537531	THRU	4709592
200	CAN	7012358	THRU	7098522
200		8006265	THRU	8045198
200	BEL	9016254	THRU	9157229

TABLE OF CONTENTS:

BOTTOM COWL ASSEMBLY 4	46
	20
CARBURETOR ASSEMBLY, COMPLETE	14
CLAMP AND SWIVEL BRACKET ASSEMBLY !	50
CRANKSHAFT AND CENTER MAIN BEARING ASSEMBLY	40
	32
	56
ELECTRIC COMPONENTS	70
	8
FLYWHEEL, IGNITION COIL, STATOR AND SWITCH BOX(GROUP NO. 15)	68
	60
	64
MISCELLANEOUS PARTS/ACCESSORIES	1
	76
PISTON AND CONNECTING ROD ASSEMBLY	42
	24
• · · · · · · = · · · · · • • = · · · ·	4
STEERING HANDLE ASSEMBLY	44
	28
TOP COWL, WRAP AROUND COWL AND FRONT COVER	
VOLTAGE REGULATOR (SERIAL GROUP NO. 16)	74

NOTE: Indented description indicate that these parts are included in preceeding assembly.

AR = As Required **NSS** = Not Sold Separate


OPT = Optional **NS** = Not Shown

THESE PARTS BOOKS/FICHE CARD ARE COPYRIGHTED AND MAY NOT BE DISTRIBUTED OR REPRODUCED IN ANY OTHER FORMAT BY ANYONE OTHER THAN MERCURY MARINE WITHOUT THE PRIOR WRITTEN CONSENT OF MERCURY MARINE.

MISCELLANEOUS PARTS/ACCESSORIES


		• •		CELANEOUS I ANTO/ACCESSONIES
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
-	90-65145		0	MERC 200 PARTS LIST
-	27-45088A73		0	GASKET SET
-	37-61000A73		0	DECAL SET (ENGINE) UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9032083 AND BELOW CANADA 7024647 AND BELOW
-	37-65840A74		0	DECAL SET (ENGINE) UNITED STATES 3755885 THRU 4102789 AUSTRALIA 8013705 THRU 8026164 BELGIUM 9032084 THRU 9070128 CANADA 7024648 THRU 7044782
-	37-70165A75		0	DECAL SET (ENGINE) UNITED STATES 4102790 THRU 4351589 AUSTRALIA 8026165 THRU 8036049 BELGIUM 9070129 THRU 9104813 CANADA 7044783 THRU 7067847
-	37-73933A76		0	DECAL SET (ENGINE) UNITED STATES 4351590 THRU 4580036 AUSTRALIA 8036050 THRU 8043124 BELGIUM 9104814 THRU 9137349 CANADA 7067848 THRU 7089697
-	37-73933A77		0	DECAL SET(ENGINE) UNITED STATES 4580037 AND UP AUSTRALIA 8043125 AND UP BELGIUM 9137350 AND UP CANADA 7089698 AND UP
-	48755A1		0	FLUSHING ASSEMBLY
-	46-48749A5		0	HEAVY DUTY WATER PUMP ASSEMBLY

TOP COWL, WRAP AROUND COWL AND FRONT COVER

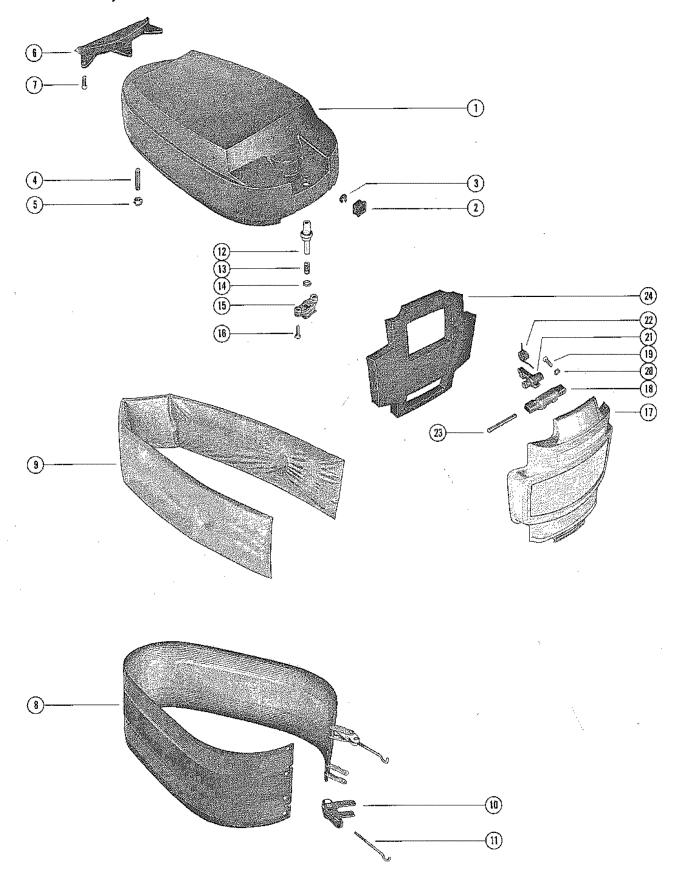


TOP COWL, WRAP AROUND COWL AND FRONT COVER


		, ••••		ANODIAD COVIL AND I NOIVI COVEN
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	2130-4361A2		1	TOP COWL ASSEMBLY
2	73537		1	INSERT,ROPE GUIDE-TOP COWL
3	53-58656		1	RING,RETAINING-ROPE GUIDE TO TOP COWL UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
4	16-21553		3	STUD, TOP COWL TO MOUNTING BRACKETS (1 1/2") UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
3	53-72168		1	RING,RETAINING-ROPE GUIDE TO TOP COWL UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
4	16-72166		3	STUD,TOP COWL TO MOUNTING BRACKETS (1 1/2") UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
5	11-35814		3	NUT,TOP COWL STUD
6	39400		1	SHIELD,REAR-TOP COWL
7	10-3737		3	SCREW,REAR SHIELD TO TOP COWL (5/8)
8	2133-2706A5		1	WRAP AROUND COWL ASSEMBLY,CO,PLETE
9	39606		1	BLANKET,WRAP AROUND COWL (EARLY MODELS)
10	46785A1		2	,COWL LATCH ASSEMBLY
11	30413		2	HOOK, COWL LATCH FASTENING
12	39628		1	BUTTON,FRONT COVER RELEASE-TOP COWL
13	24-20099		1	SPRING-COMPRESSION-FRONT COVER RELEASE BUTTON
14	12-29245		1	WASHER, FRONT COVER RELEASE BUTTON
15	60865		1	CATCH,FRONT COVER-TOP COWL
16	10-37978		2	SCREW,FRONT COVER LATCH TO TOP COWL (3/4")
17	2127-2666A8		1	FRONT COVER ASSEMBLY,COMPLETE UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
	2127-5669A2		1	FRONT COVER ASSEMBLY, COMPLETE UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
18	60867A1		1	BASE ASSEMBLY,FRONT COVER LATCH
19	10-48409		2	SCREW,LATCH BASE TO FRONT COVER (5/8")
20	12-26014		AR	WASHER,LATCH BASE SCREW
21	60866		1	HOOK,FRONT COVER LATCH
22	24-39598		1	SPRING,TORISON-FRONT COVER LATCH HOOK
23	17-39599		1	PIN,PIVOT-FRONT COVER LATCH HOOK
24	39936		1	BLANKET,SOUND ABSORBING-FRONT COVER

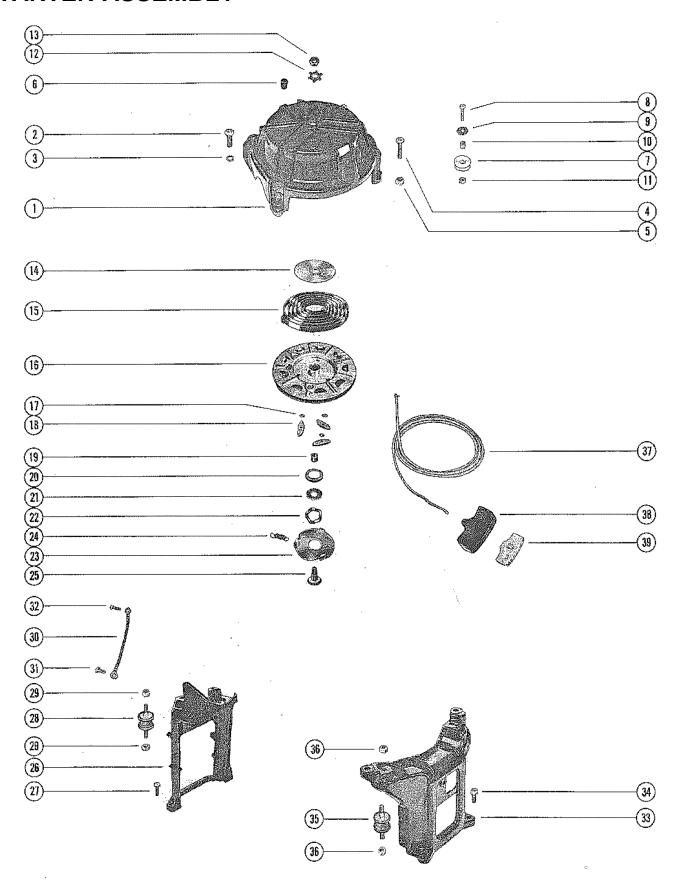


				STARTER ASSEMBLT
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	57031A2		1	HOUSING ASSEMBLY,STARTER
2	10-37562		1	SCREW,STARTER HOUSING TO CYLINDER BLOCK (1")
3	13-26993		1	LOCKWASHER,STARTER HOUSING TO CYLINDER BLOCK SCREW
4	10-20653		1	SCREW,STARTER HOUSING TO CRANKCASE (1 3/8") UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	10-22659		1	SCREW,STARTER HOUSING TO CRANKCASE (1 5/8") UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
5	11-46887		2	NUT,STARTER HOUSING TO CRANKCASE SCREW UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
4	10-36137		1	SCREW,STARTER HOUSING TO CRANKCASE (1") UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
	10-72754		1	SCREW,STARTER HOUSING TO CRANKCASE (1 5/8") UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
5	11-35888		2	NUT,STARTER HOUSING TO CRANKCASE SCREW
6	47430		1	BUMPER,RUBBER-STARTER HOUSING
7	55860		1	PULLEY,STARTER CABLE
8	10-37892		1	SCREW,PULLEY TO STARTER HOUSING (1")
9	53111		1	RETAINER,PULLEY SCREW
10	23-30977		1	SPACER,PULLEY SCREW
11	11-20110		1	NUT,PULLEY SCREW
12	14-20165		1	TAB WASHER, SHEAVE SHAFT NUT UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9035128 AND BELOW CANADA 7024647 AND BELOW
-	14-61004		1	TAB WASHER, SHEAVE SHAFT NUT UNITED STATES 3755885 AND UP AUSTRALIA 8013705 AND UP BELGIUM 9035129 AND UP CANADA 7024648 AND UP
13	11-20166		1	NUT,SHEAVE SHAFT (LEFT HAND THREAD)
14	20155		1	RETAINER STARTER SPRING UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9035128 AND BELOW CANADA 7024647 AND BELOW
	65890		1	RETAINER, STARTER SPRING UNITED STATES 3755885 AND UP AUSTRALIA 8013705 AND UP BELGIUM 9035129 AND UP CANADA 7024648 AND UP
15	24-29340A1		1	SPRING,STARTER REWIND
16	50-64008A1		1	STARTER SHEAVE ASSEMBLY
17	13-29720	1	3	WASHER,WAVE-STARTER PAWL
18	20162	1	3	PAWL,STARTER
19	23-65720		1	SPACER,SHEAVE SHAFT(PART OF A-50-64008A1 SHEAVE ASSEMBLY)
20	26179		1	RETAINER, STARTER SHEAVE TO PLATE

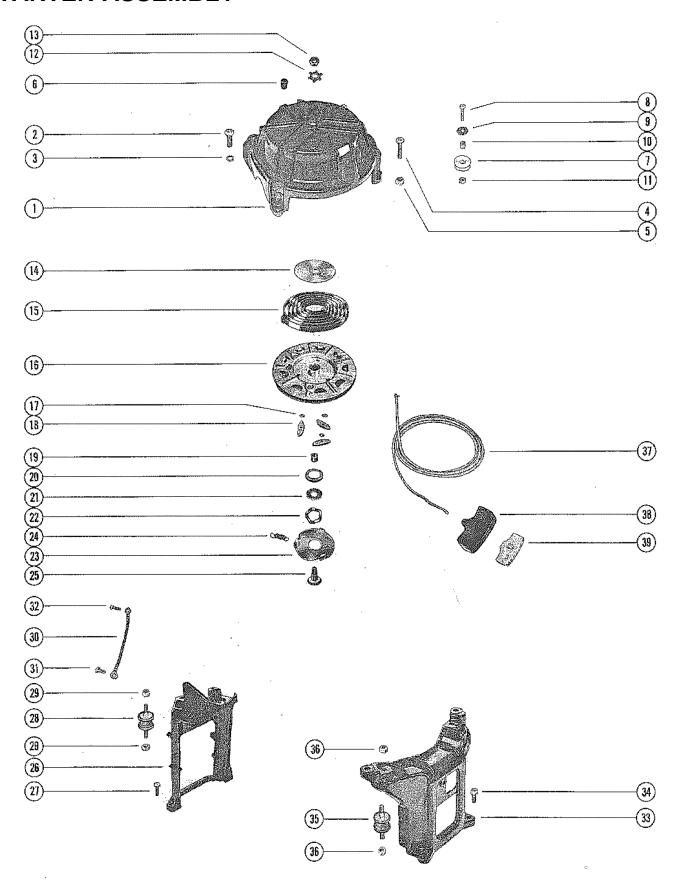


		1		STARTER ASSEMBLT
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
21	12-35559		1	WASHER,STARTER SHEAVE RETAINER
22	13-20160		1	WASHER,WAVE-STARTER SHEAVE TENSION
23	20164		1	PLATE,RETAINER-STARTER PAWL
24	24-45823		1	SPRING,PAWL RETAINER PLATE
25	45481		1	SHAFT, SHEAVE UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9035128 AND BELOW CANADA 7024647 AND BELOW
	65869A1		1	SHAFT ASSEMBLY, SHEAVE UNITED STATES 3755885 AND UP AUSTRALIA 8013705 AND UP BELGIUM 9035129 AND UP CANADA 7024648 AND UP
26	64887		1	BRACKET,MOUNTING-TOP COWL (REAR) UNITED STATES 4403786 AND BELOW AUSTRALIA 8039074 AND BELOW BELGIUM 9122764 AND BELOW CANADA 7077247 AND BELOW
	74325		1	BRACKET,MOUNTING-TOP COWL (REAR) UNITED STATES 4403787 AND UP AUSTRALIA 8039075 AND UP BELGIUM 9122765 AND UP CANADA 7077248 AND UP
27	10-37562		2	SCREW,REAR MOUNTING BRACKET TO BOTTOM COWL (1")
28	57927		1	MOUNT,RUBBER-REAR MOUNTING BRACKET TO CYLINDER BLOCK
29	11-20361		2	NUT,RUBBER MOUNT TO BRACKET AND CYLINDER BLOCK
30	84-60466A8		1	GROUND WIRE ASS'Y, REAR BRACKET UNITED STATES 4403786 AND BELOW AUSTRALIA 8039074 AND BELOW BELGIUM 9122764 AND BELOW CANADA 7077247 AND BELOW
	84-76180		1	GROUND WIRE ASS'Y REAR BRACKET UNITED STATES 4403787 AND UP AUSTRALIA 8039075 AND UP BELGIUM 9122765 AND UP CANADA 7077248 AND UP
	84-76181		1	GROUND WIRE ASS'Y REAR BRACKET UNITED STATES 4403787 AND UP AUSTRALIA 8039075 AND UP BELGIUM 9122765 AND UP CANADA 7077248 AND UP
31	10-30663		1	SCREW,GROUND WIRE TO CYLINDER BLOCK (3/8")
32	10-35519		1	SCREW,GROUND WIRE TO CYLINDER BLOCK
33	64674		1	BRACKET,MOUNTING-TOP COWL (FRONT)
34	10-37562		2	SCREW,FRONT MOUNTING BRACKET TO BOTTOM COWL (1")
35	57927		2	MOUNT,RUBBER-FRONT MOUNTING BRACKET TO CRANKCASE
36	11-20361		4	NUT,RUBBER MOUNT TO BRACKET AND CRANKCASE
37	50-22791A1		1	STARTER CABLE ASSEMBLY
38	30782		1	HANDLE,STARTER CABLE
39	28748		1	RETAINER,STARTER CABLE AND HANDLE

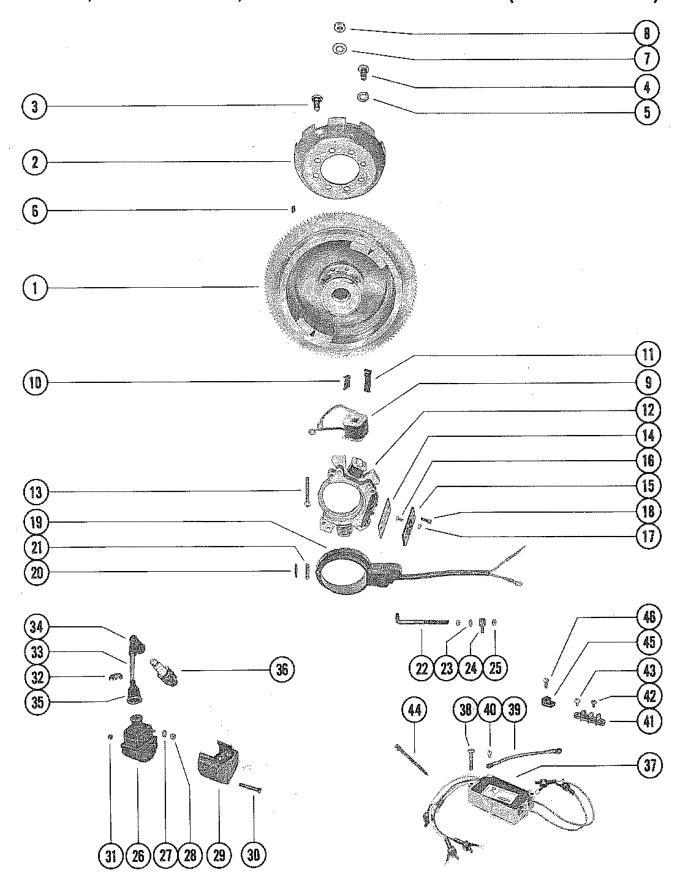


REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	244-5043A3		1	FLYWHEEL ASSEMBLY UNITED STATES 3667342 AND BELOW AUSTRALIA 8010124 AND BELOW BELGIUM 9032083 AND BELOW CANADA 7020682 AND BELOW
	244-5043A7		1	FLYWHEEL ASSEMBLY UNITED STATES 3667343 THRU 3755884 AUSTRALIA 8010125 THRU 8013704 BELGIUM 9032084 THRU 9035128 CANADA 7020683 THRU 7024647
	244-5358A2		1	FLYWHEEL ASSEMBLY UNITED STATES 3755885 AND UP AUSTRALIA 8013705 AND UP BELGIUM 9035129 AND UP CANADA 7024648 AND UP
2	50-65721		1	RATCHET ASSEMBLY, FLYWHEEL UNITED STATES 3667343 THRU 4102789 AUSTRALIA 8010125 THRU 8026164 BELGIUM 9032084 THRU 9070128 CANADA 7020683 THRU 7044782
	50-33000A1		1	RATCHET ASSEMBLY, FLYWHEEL UNITED STATES 3667342 AND BELOW AUSTRALIA 8010124 AND BELOW BELGIUM 9032083 AND BELOW CANADA 7020682 AND BELOW
3	10-35563		8	SCREW,RATCHET TO FLYWHEEL (9/16") UNITED STATES 3667342 AND BELOW AUSTRALIA 8010124 AND BELOW BELGIUM 9032083 AND BELOW CANADA 7020682 AND BELOW
4	10-46467		6	SCREW,RATCHET TO FLYWHEEL (1/2") UNITED STATES 3667342 AND BELOW AUSTRALIA 8010124 AND BELOW BELGIUM 9032083 AND BELOW CANADA 7020682 AND BELOW
5	13-26992		2	LOCKWASHER,RATCHET SCREW UNITED STATES 3667342 AND BELOW AUSTRALIA 8010124 AND BELOW BELGIUM 9032083 AND BELOW CANADA 7020682 AND BELOW
6	28-20094		1	KEY,FLYWHEEL DRIVE
7	12-36281		1	WHEEL NUT UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9035128 AND BELOW CANADA 7024647 AND BELOW
	12-65891		1	WASHER, FLYWHEEL NUT UNITED STATES 3755885 AND UP AUSTRALIA 8013705 AND UP BELGIUM 9035129 AND UP CANADA 7024648 AND UP
8	11-22339		1	NUT,FLYWHEEL
9	338-4992A1		1	COIL,HIGH SPEED
	338-4991A1		1	COIL,LOW SPEED
10	54-59538		2	CLIP,COIL RETAINING
11	54-59539		2	CLIP,COIL RETAINING
12	64638A1		1	STATOR ASSEMBLY
13	10-48637		3	SCREW,STATOR TO UPPER END CAP (1 1/8")
14	85-64844		1	INSULATOR, TERMINAL BLOCK TO STATOR ASSEMBLY
15	86-64845		1	TERMINAL BLOCK,STATOR ASSEMBLY
16 17	10-64843 11-45076		2	SCREW,SWITCH BOX LEADS TO TERMINAL BLOCK (7/16") NUT,SWITCH BOX LEADS TO TERMINAL BLOCK SCREW
18	10-48409		2	SCREW,TERMINAL BLOCK TO STATOR ASSEMBLY (5/8")
19	338-4996A1		1	TRIGGER ASSEMBLY,IGNITION (Serial No. 4403786 and Below)
20	17-62768		1	PIN,IGNITION TRIGGER

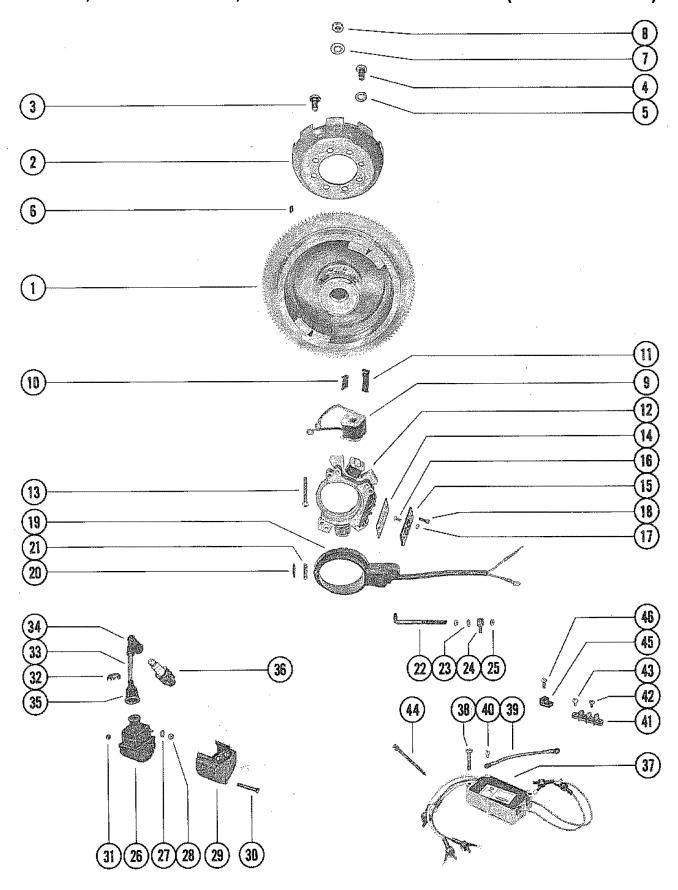


┌┷┺	I WIILLE, IGIN	IIIION	COIL	., STATOR AND SWITCH BOX(GROUP NO. 14)
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
21	24-62095		1	SPRING,COMPRESSION-IGNITION TRIGGER
22	59783		1	LINK,THROTTLE-STATOR ASSEMBLY
23	12-30164		1	WASHER,THROTTLE LINK
24	33973		1	SWIVEL, THROTTLE LINK
25	11-45812		2	NUT,THROTTLE LINK
26	338-4995A1		2	COIL ASSEMBLY,IGNITION UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9035128 AND BELOW CANADA 7024647 AND BELOW
	339-5288A2		2	COIL ASSEMBLY, IGNITION UNITED STATES 3755885 THRU 4351589 AUSTRALIA 8013705 THRU 8036049 BELGIUM 9035129 THRU 9104813 CANADA 7024648 THRU 7067847
	339-5748A2		2	COIL ASSEMBLY,IGNITION UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
27	13-26996		4	LOCKWASHER, IGNITION COIL TERMINAL
28	11-45076		4	NUT,IGNITION COIL TERMINAL
29	66355		2	COVER,IGNITION COIL
30	10-72073		3	SCREW,COIL COVER TO REAR SUPPORT BRACKET(3 3/4")
31	11-20110		3	NUT,SOIL COVER SCREW
32	54676		1	RETAINER,HIGH TENSION LEAD
33	84-63212A2		2	LEAD ASSEMBLY,HIGH TENSION
34	47604A1		2	PROTECTOR ASSEMBLY,SPARK PLUG
35	332-2854		2	NIPPLE,IGNITION COIL
36	33-58194		2	SPARK PLUG (ACV#40FFK)
37	332-4911A2		1	SWITCH BOX ASSEMBLY
38	10-20784		2	SCREW,SWITCH BOX CYLINDER BLOCK (1 1/2') UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	10-72167		2	SCREW,SWITCH BOX TO CYLINDER BLOCK (1 1/2") UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
39	84-60466A10		1	GROUND WIRE ASSEMBLY,SWITCH BOX
40	10-48591		1	SCREW,GROUND WIRE TO SWITCH BOX (1/2") UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	10-37655		1	SCREW,GROUND WIRE TO SWITCH BOX (1/2") UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
41	86-63813		1	TERMINAL BLOCK
42	10-34222		3	SCREW,TERMINAL BLOCK TO FRONT SUPPORT BRACKET (1/2") SERIAL GROUP #11
	10-72169		3	SCREW,TERMINAL BLOCK TO FRONT SUPPORT (1/2") SERIAL GROUP #12
43	10-30663		2	SCREW,LEADS TO TERMINAL BLOCK UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW

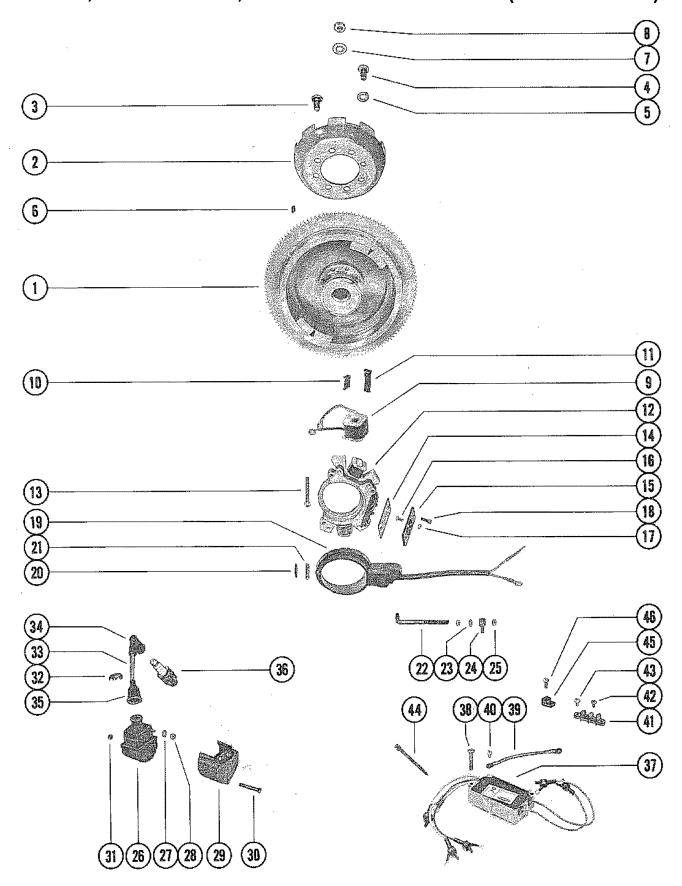

REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
43	10-62568		3	SCREW,LEADS TO TERMINAL BLOCK (3/8") UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
44	61990		1	STA-STRAP,SWITCH BOX LEADS
45	45915		1	TERMINAL BLOCK UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
46	10-69013		1	SCREW,LEAD TO BLOCK (7/8") UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP

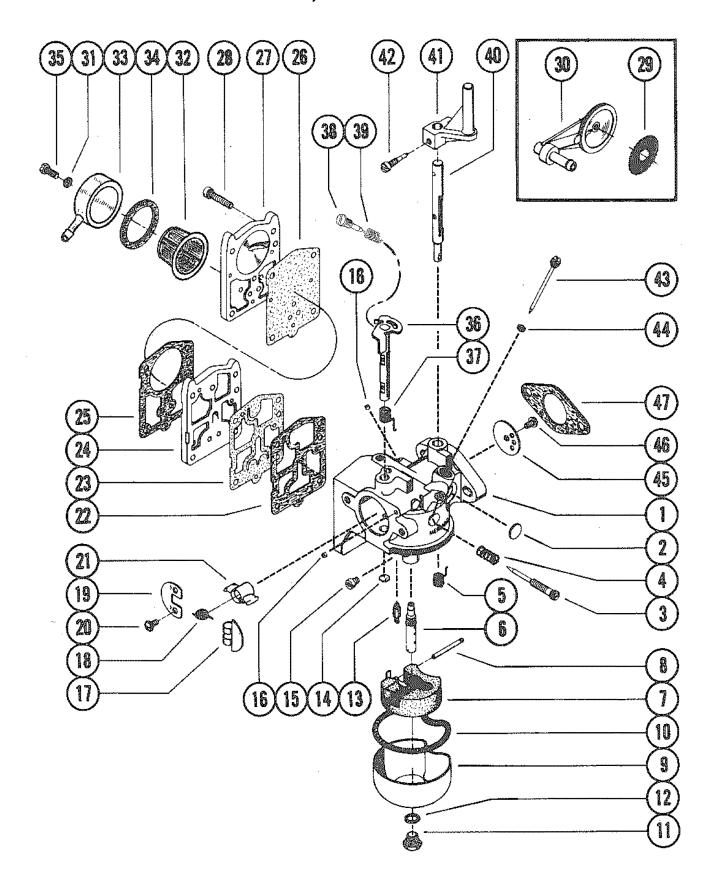


		1		REURETUR ASSEMBLT, CUMPLETE
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	1367-4977A1		1	CARBURETOR ASSEMBLY, COMPLETE UNITED STATES 3667342 AND BELOW AUSTRALIA 8010124 AND BELOW BELGIUM 9032083 AND BELOW CANADA 7020682 AND BELOW
	1367-5193A3		1	CARBURETOR ASSEMBLY, COMPLETE UNITED STATES 3667343 THRU 4102789 AUSTRALIA 8010125 THRU 8026164 BELGIUM 9032084 THRU 9070128 CANADA 7020683 THRU 7044782
	1367-5678A2		1	CARBURETOR ASSEMBLY, COMPLETE UNITED STATES 4102790 THRU 4351589 AUSTRALIA 8026165 THRU 8036049 BELGIUM 9070129 THRU 9104813 CANADA 7044783 THRU 7067847
	1369-6063A2		1	CARBURETOR ASSEMBLY,CO,PLETE UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
2			1	WELCH PLUG,BODY CHANNEL (LARGE)
3	1399-1713		1	SCREW,IDLE MIXTURE
4	24-27160		1	SPRING, IDLE MIXTURE SCREW
5			1	SPRING,RETURN-THROTTLE SHAFT
6			1	MAIN NOZZLE
7	1399-5126		1	FLOAT
8			1	PIN,FLOAT RETAINING
9	1399-5127		1	FUEL BOWL
10			1	GASKET,FUEL BOWL
11	1399-5128		1	SCREW,FUEL BOWL TO CARBURETOR UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
	1399-5415		1	SCREW, FUEL BOWL TO CARBURETOR UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
12			2	GASKET, FUEL BOWL SCREW
13	1399-5130		1	INLET NEEDLE AND SEAT UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
	1399-5757		1	INLET NEEDLE AND SEAT UNITED STATES 4102790 THRU 4351589 AUSTRALIA 8026165 THRU 8036049 BELGIUM 9070129 THRU 9104813 CANADA 7044783 THRU 7067847
	1399-6224		1	INLET NEEDLE AND SEAT UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
14			1	WELCH PLUG, BODY CHANNEL(SMALL)
15	1399-1457		1	JET, MAIN FUEL (.057) UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
	1399-1655		1	JET,MAIN FUEL(.055) UNITED STATES 4102790 THRU 4351589 AUSTRALIA 8026165 THRU 8036049 BELGIUM 9070129 THRU 9104813 CANADA 7044783 THRU 7067847
16			2	PLUG,BODY CHANNEL

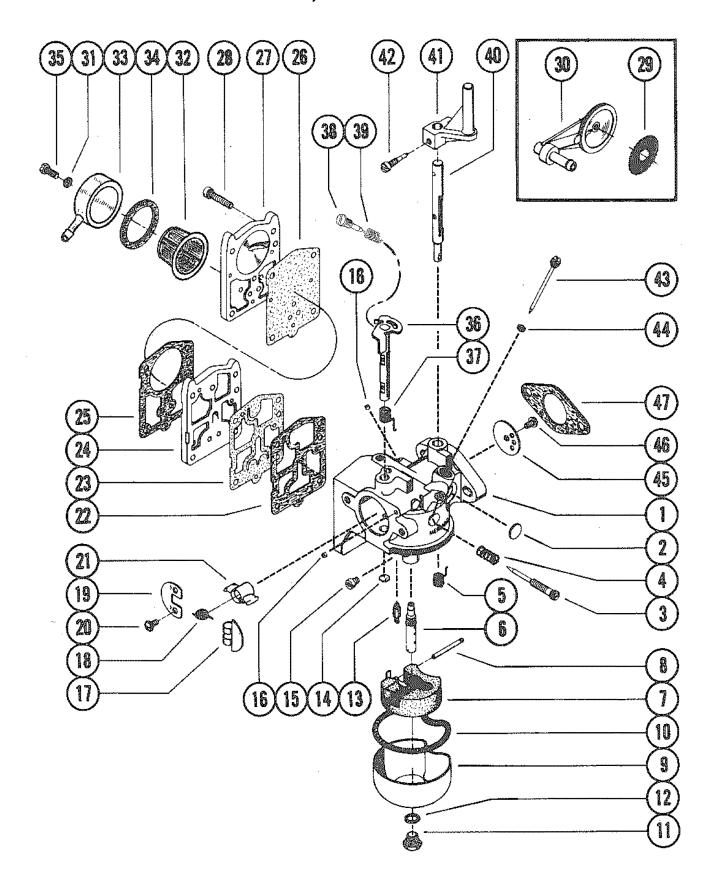


			<u> </u>	ROURETUR ASSEMBLT, COMPLETE
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
17	1399-5194		1	VALVE,CHOKE RELIEF UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
18	1399-5195		1	SPRING,CHOKE RELIEF VALVE UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
19	1399-5197		1	CHOKE SHUTTER UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
	1399-5810		1	CHOKE SHUTTER UNITED STATES 4102790 THRU 4351589 AUSTRALIA 8026165 THRU 8036049 BELGIUM 9070129 THRU 9104813 CANADA 7044783 THRU 7067847
	1399-2577		1	CHOKE SHUTTER UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
20	10-23035		2	SCREW,CHOKE SHUTTER TO CHOKE SHAFT
21	64677		1	VENTURI UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
	69692		1	VENTURI UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
22			1	GASKET,FUEL PUMP DIAPHRAGM
23			1	DIAPHRAGM,FUEL PUMP
24	1399-5129		1	BODY,FUEL PUMP
25			1	GASKET,FUEL PUMP DIAPHRAGM
26			1	DIAPHRAGM,FUEL PUMP
27	1399-5131		1	BODY,STRAINER UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
	1364-5585		1	BODY STRAINER United States 4102790 and up Australia 8026165 and up Belgium 9070129 and up Canada 7044783 and up
28	1399-5132		1	SCREW, STAINER BODY TO CARBURETOR
29	1399-4235		1	SCREEN STAINER UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
30	64194A1		1	COVER ASSEMBLY,STRAINER (INLET) UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
31			1	GASKET,STAINER COVER SCREW UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
32	35-70349		1	FILTER,PUMP UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
33	59071		1	COVER INLET
34			1	GASKET,STAINER COVER
35	10-25822		1	SCREW,STAINER COVER TO BODY


CONTINUED ON NEXT PAGE →

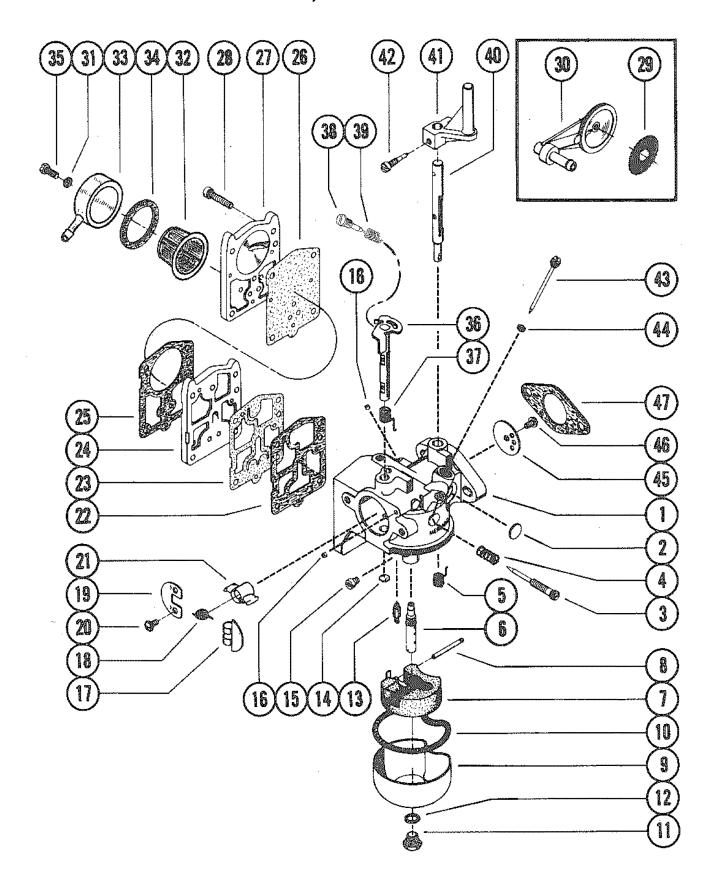


				COMPLETE
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
36	1399-5196		1	CHOKE SHAFT UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
	1399-5809		1	CHOKE SHAFT UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
37			1	SPRING,RETURN CHOKE SHAFT
38			1	SCREW,CHOKE ADJUSTMENT UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
39			1	SPRING,CHOKE ADJUSTMENT UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
40	1399-2012		1	THROTTLE SHAFT
41	46387		1	LEVER,THROTTLE
42	10-20847		1	SCRWE,THROTTLE LEVER ATTACHING
43			1	IDA TUBE
44			1	GASKET,IDLE TUBE
45	1399-3032		1	THROTTLE SHUTTER UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
	1399-5812		1	THROTTLE SHUTTER UNITED STATES 4102790 THRU 4351589 AUSTRALIA 8026165 THRU 8036049 BELGIUM 9070129 THRU 9104813 CANADA 7044783 THRU 7067847
	1399-6225		1	THROTTLE SHUTTER UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
46			2	SCREW,THROTTLE SHUTTER TO THROTTLE SHAFT
47	27-64659		1	GASKET,CARBURETOR FLANGE
-	1399-5198		1	GASKET SET
-	1399-5199		1	REPAIR PARTS KIT UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
-	1399-5813		1	REPAIR PARTS KIT UNITED STATES 4102790 THRU 4351589 AUSTRALIA 8026165 THRU 8036049 BELGIUM 9070129 THRU 9104813 CANADA 7044783 THRU 7067847
-	1399-6226		1	REPAIR PARTS KIT UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
-	1399-5137		1	DIAPHRAGM AND GASKET KIT

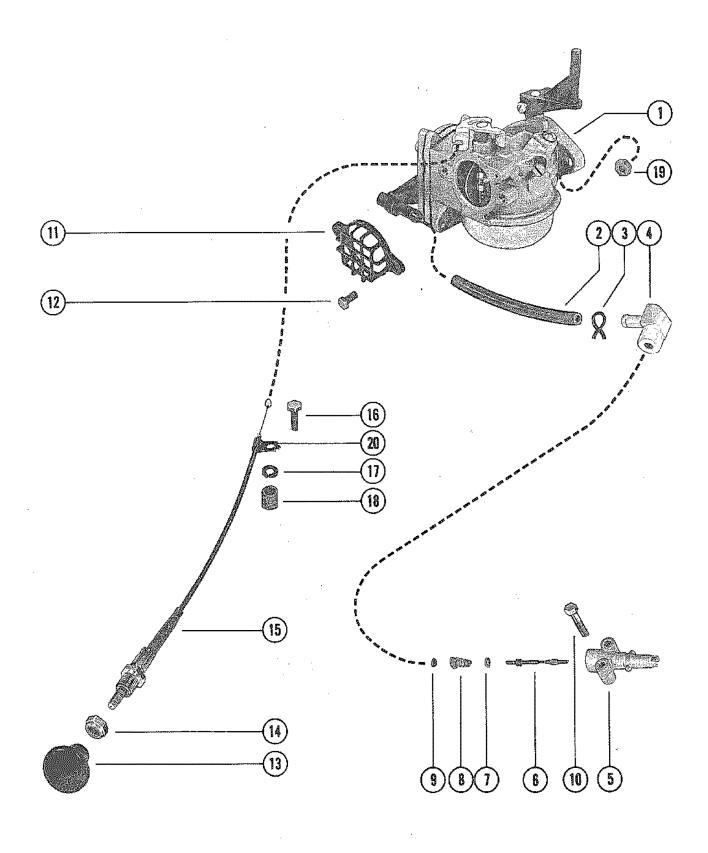

				CONTINUE ASSEMBLY
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	1367-4977A1		1	CARBURETOR ASSEMBLY COMPLETE UNITED STATES 3667342 AND BELOW AUSTRALIA 8010124 AND BELOW BELGIUM 9032083 AND BELOW CANADA 7020682 AND BELOW
	1367-5193A3		1	CARBURETOR ASSEMBLY, COMPLETE UNITED STATES 3667343 THRU 4102789 AUSTRALIA 8010125 THRU 8026164 BELGIUM 9032084 THRU 9070128 CANADA 7020683 THRU 7044782
	1367-5678A2		1	CARBURETOR ASSEMBLY, COMPLETE UNITED STATES 4102790 THRU 4351589 AUSTRALIA 8026165 THRU 8036049 BELGIUM 9070129 THRU 9104813 CANADA 7044783 THRU 7067847
	1367-6063A2		1	CARBURETOR ASSEMBLY, COMPLETE UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
2	32-63146		1	FUEL LINE,ADAPTOR TO CARBURETOR (3 1/4")
3	54-64916		2	CLAMP, FUEL HOSE ATTACHING UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	54-68424		2	CLAMP, FUEL HOSE ATTACHING UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
4	22-63981		1	FITTING,FUEL LINE TO ADAPTOR
5	22833		1	ADAPTOR,CHECK UNIT (FUEL LINE)
6	23069		1	STEM,CHECK UNIT ADAPTOR
7	25-20415		1	"O" RING ADAPTOR STEM
8	24-23067		1	SPRING,ADAPTOR STEM
9	30188		1	CUP WASHER,ADAPTOR
10	10-37923		1	SCREW,ADAPTOR TO BOTTOM COWL (11/4")
11	65552		1	SCREEN,CARBURETOR
12	10-69022		2	SCREW,SCREEN TO CARBURETOR
13	63980		1	KNOB,CHOKE
	37602		1	BUTTON,SHOKE= BELGIUM 9122765 AND UP
14	11-63912		1	NUT,CHOKE CABLE TO BOTTOM COWL UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
	11-73710		1	NUT,CHOKE CABLE TO BOTTOM COWL UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
15	63906		1	CABLE,CHOKE UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
	72465		1	CABLE,CHOKE UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
16	10-69020		1	SCREW,CHOKE CABLE TO CARBURETOR

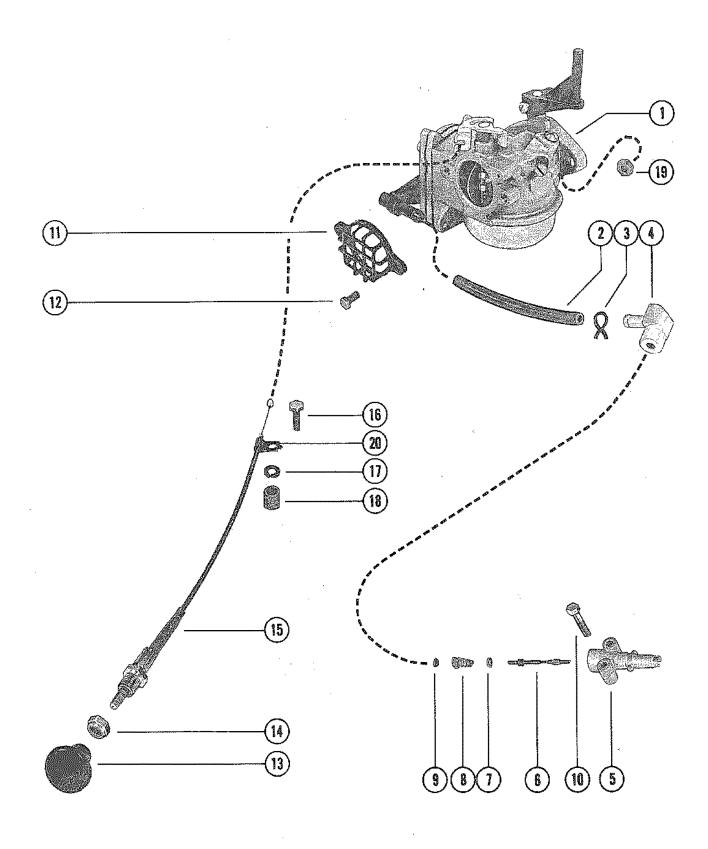


		ı	1	
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
17	13-26996		1	LOCKWASHER,CHOKE CABLE SCRWE UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
18	23-63932		1	SPACER,CHOKE CABLE SCREW UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
17	12-56681		1	WASHER,CHOKE CABLE SCREW UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
19	11-20083		2	NUT,CARBURETOR ATTACHING
20	54-64855		1	CLIP,CHOKE CABLE UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP

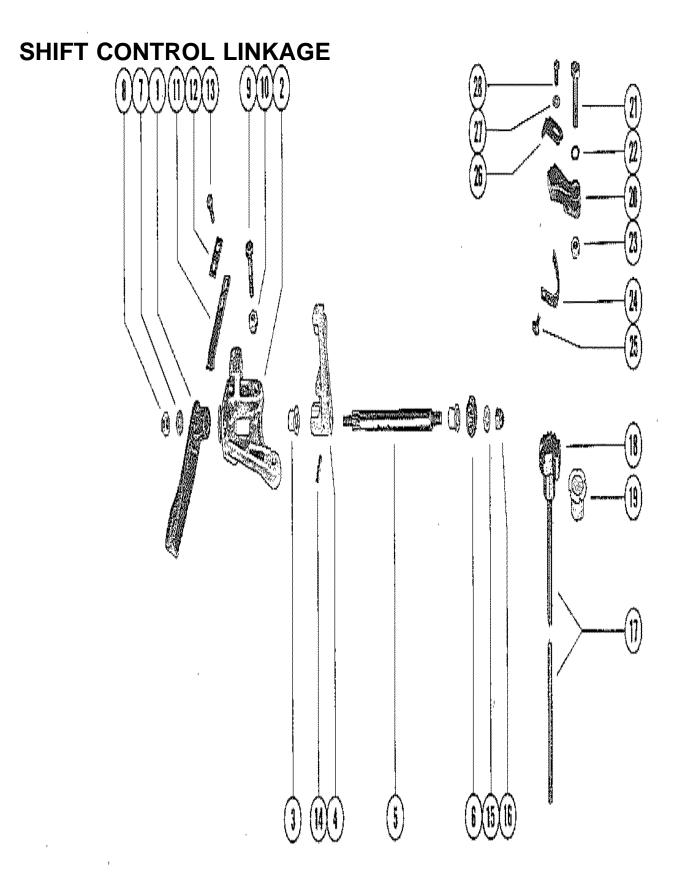

SHIFT CONTROL LINKAGE

				SIIII I CONTROL LINKAGL
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	59107		1	HANDLE, NYLONG - SHIFT CONTROL UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9035128 AND BELOW CANADA 7024647 AND BELOW
2	64122		1	BRACKET, MOUNTING - SHIFT SHAFT UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9035128 AND BELOW CANADA 7024647 AND BELOW
3	23-26954		2	BUSHING, NYLON - SHIFT SHAFT UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9035128 AND BELOW CANADA 7024647 AND BELOW
4	63673		1	LEVER, SHIFT CONTROL UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9035128 AND BELOW CANADA 7024647 AND BELOW
5	64120		1	SHAFT, SHIFT (HORIZONTAL) UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9035128 AND BELOW CANADA 7024647 AND BELOW
6	43-30802		1	GEAR, SECTOR - SHIFT SHAFT UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9035128 AND BELOW CANADA 7024647 AND BELOW
1	66376		1	HANDLE, NYLON - SHIFT CONTROL UNITED STATES 3755885 THRU 4351589 AUSTRALIA 8013705 THRU 8036049 BELGIUM 9035129 THRU 9104813 CANADA 7024648 THRU 7067847
	72946		1	HANDLE, NYLON - SHIFT CONTROL UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
2	66412		1	BRACKET, MOUNTING - SHIFT SHAFT UNITED STATES 3755885 AND UP AUSTRALIA 8013705 AND UP BELGIUM 9035129 AND UP CANADA 7024648 AND UP
3	23-66375		2	BUSHING, NYLONG - SHIFT SHAFT UNITED STATES 3755885 AND UP AUSTRALIA 8013705 AND UP BELGIUM 9035129 AND UP CANADA 7024648 AND UP
4	66361		1	LEVER, SHIFT CONTROL UNITED STATES 3755885 THRU 4403786 AUSTRALIA 8013705 THRU 8039074 BELGIUM 9035129 THRU 9122764 CANADA 7024648 THRU 7077247
	74800		1	LEVER, SHIFT CONTROL UNITED STATES 4403787 AND UP AUSTRALIA 8039075 AND UP BELGIUM 9122765 AND UP CANADA 7077248 AND UP
5	66379		1	SHAFT, SHIFT (HORIZONTAL) UNITED STATES 3755885 AND UP AUSTRALIA 8013705 AND UP BELGIUM 9035129 AND UP CANADA 7024648 AND UP
6	43-66377		1	GEAR, SECTOR - SHIFT SHAFT UNITED STATES 3755885 AND UP AUSTRALIA 8013705 AND UP BELGIUM 9035129 AND UP CANADA 7024648 AND UP
7	12-29245		1	WASHER, SHIFT CONTROL HANDLE
8	11-39305		1	NUT, SHIFT CONTROL HANDLE TO SHIFT SHAFT
9	10-22421		2	SCREW, MOUNTING BRACKET TO POWERHEAD PLATE (1 1/4")
10	11-46887		2	NUT, MOUNTING BRACKET SCREW
11	24-39627		1	SPRING, DETENT - MOUNTING BRACKET
12	39601		1	PLATE, DETENT SPRING

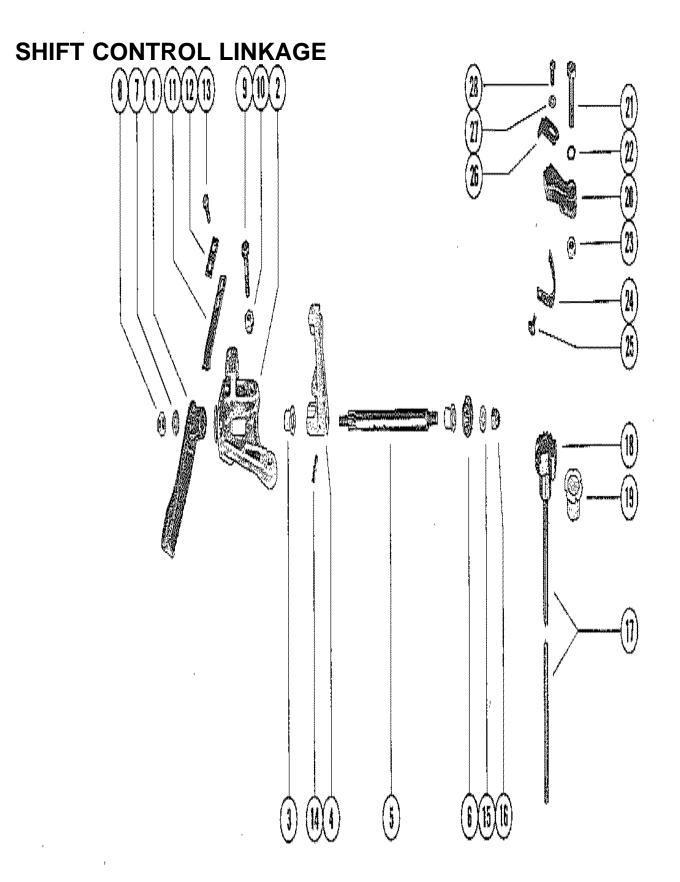


SHIFT CONTROL LINKAGE

				OIIII I OOIIII/OE EIIII/AOE
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
13	10-20100		2	SCREW, PLATE AND SPRING TO MOUNTING BRACKET (1/2")
14	17-25905		1	PIN, ROLL - SHIFT CONTROL LEVER TO SHIFT SHAFT
15	12-29245		1	WASHER, SHIFT SHAFT
16	11-35888		1	NUT, SECTOR GEAR TO SHIFT SHAFT
17	61009A1		1	SHIFT CONTROL SHAFT ASSEMBLY, VERTICAL
18	43-58972		1	GEAR, SECTOR - SHIFT CONTROL SHAFT
19	23-30677		1	BUSHING, NYLONG - SHIFT CONTROL SHAFT
20	58979		1	FOLLOWER, NEUTRAL SPEED LIMITER
21	10-24644		1	SCREW, FOLLOWER TO POWERHEAD MOUNTING PLATE (1 3/8")
22	15-28212		1	SHIM, LIMITER FOLLOWER SCREW
23	11-46887		1	NUT, LIMITER FOLLOWER SCREW
24	24-39675		1	SPRING, NEUTRAL SPEED LIMITER FOLLOWER
25	10-30663		1	SCREW, SPRING TO LIMITER FOLLOWER (3/8")
26	46837		1	STOP, OVER-SPEED LIMITER UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
	72857		1	STOP, OVER-SPEED LIMITER UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
27	12-24676		1	WASHER, LIMITER STOP SCREW
28	10-46898		1	SCREW, LIMITER STOP TO FOLLOWER (7/16")

П			1	THROTTLE CONTROL LINKAGE
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	43-60856		1	GEAR, PINION - THROTTLE CONTROL
2	48662		1	HOUSING, THROTTLE CONTROL UNITED STATES 4580036 AND BELOW AUSTRALIA 8043124 AND BELOW BELGIUM 9137349 AND BELOW CANADA 7089697 AND BELOW
	76357		1	HOUSING, THROTTLE CONTROL UNITED STATES 4580037 AND UP AUSTRALIA 8043125 AND UP BELGIUM 9137350 AND UP CANADA 7089698 AND UP
3	43-60863		1	SHAFT AND GEAR, THROTTLE
4	10-20653		1	SCREW, THROTTLE CONTROL HOUSING FASTENING (1") - LOWER - UNITED STATES 4580036 AND BELOW AUSTRALIA 8043124 AND BELOW BELGIUM 9137349 AND BELOW CANADA 7089697 AND BELOW
5	11-46887		1	NUT, THROTTLE CONTROL HOUSING SCREW UNITED STATES 4580036 AND BELOW AUSTRALIA 8043124 AND BELOW BELGIUM 9137349 AND BELOW CANADA 7089697 AND BELOW
6	10-21091		1	SCREW, THROTTLE CONTROL HOUSING FASTENING (1 1/8") - UPPER UNITED STATES 4580036 AND BELOW AUSTRALIA 8043124 AND BELOW BELGIUM 9137349 AND BELOW CANADA 7089697 AND BELOW
7	11-46887		2	NUT, THROTTLE CONTROL HOUSING SCREW UNITED STATES 4580036 AND BELOW AUSTRALIA 8043124 AND BELOW BELGIUM 9137349 AND BELOW CANADA 7089697 AND BELOW
4&6	10-76213		2	SCREW, THROTTLE CONTROL HOUSING FASTENING (1 1/8") - LOWER A LOWER AND UPPER UNITED STATES 4580037 AND UP AUSTRALIA 8043125 AND UP BELGIUM 9137350 AND UP CANADA 7089698 AND UP
8	23-33462		1	BUSHING, NYLON - SHAFT AND GEAR (THROTTLE CONTROL HOUSING)
9	12-48679		1	WASHER, THROTTLE SHAFT AND GEAR
10	17-36325		1	PIN, THROTTLE SHAFT AND GEAR
11	46413		1	THROTTLE LEVER, VERTICAL SHAFT
12	10-22960		2	SCREW, VERTICAL SHAFT THROTTLE LEVER (1 3/8") UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
13	11-25168		2	NUT, VERTICAL SHAFT THROTTLE SCREW UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
12	10-72755		2	SCREW, VERTICAL SHAFT THROTTLE ELVER (1 3/8") UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
13	11-64484		2	NUT, VERTICAL SHAFT THROTTLE ELVER SCREW UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
14	17-24865		2	PIN, GROOVE - STATOR PLATE LEVER TO VERTICAL SHAFT
15	60864		1	LEVER, STATOR PLATE - VERTICAL SHAFT
16	64631		1	LEVER, STATOR PLATE CONTROL
17	10-22659		1	SCREW, STARTER HOUSING TO CRANKCASE (1 5/8")

		I	ı	
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
NO.	PART NO.	STIVI.	QII.	DESCRIPTION
17	10-72754		1	SCREW, STARTER HOUSING TO CRANKCASE (1 5/8")
18	12-57029		2	WASHER, STARTER HOUSING SCREW (PART OF STARTER HOUSING ASSEM
19	23-46406		1	BUSHING, STATOR PLATE CONTROL LEVER
20	11-20361		1	NUT, STARTER HOUSING TO CRANKCASE SCREW UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	11-35888		1	NUT, STARTER HOUSING TO CRANKCASE SCREW UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
21	12-24664		1	WASHER, SHAFT AND GEAR
22	11-20586		1	NUT, SHAFT AND GEAR
23	46405		1	LINK, THROTTLE CLUSTER
24	10-25876		1	SCREW, THROTTLE CLUSTER LINK (7/8")
25	11-20645		1	NUT, JAM - THROTTLE CLUSTER LINK SCREW

CYLINDER BLOCK AND CRANKCASE ASSEMBLY

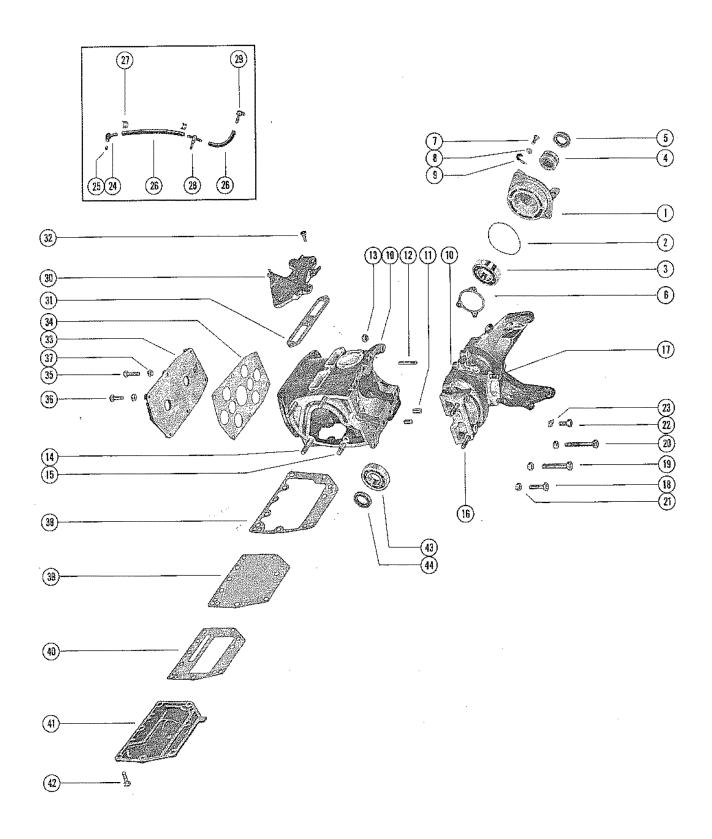


CYLINDER BLOCK AND CRANKCASE ASSEMBLY

REF.		<u> </u>		LOCK AND CHANKCASE ASSEMBLE
NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	1155-5009A1		1	CRANKCASE TOP ASSEMBLY UNITED STATES 4403786 AND BELOW AUSTRALIA 8039074 AND BELOW BELGIUM 9122764 AND BELOW CANADA 7077247 AND BELOW
	1163-6091A1		1	CRANKCASE TOP ASSEMBLY UNITED STATES 4403787 THRU 4580036 AUSTRALIA 8039075 THRU 8043124 BELGIUM 9122765 THRU 9137349 CANADA 7077248 THRU 7089697
	1163-6437A1		1	CRANKCASE TOP ASSEMBLY UNITED STATES 4580037 AND UP AUSTRALIA 8043125 AND UP BELGIUM 9137350 AND UP CANADA 7089698 AND UP
2	25-20081		1	"O" RING, CRANKCASE TOP
3	30-63326		1	BEARING, BALL - CRANKCASE TOP (UPPER)
4	31-20594		1	BEARING, ROLLER - CRANKCASE TOP (UPPER)
5	26-66300		1	OIL SEAL, CRANKCASE TOP (UPPER)
6	15-56191A1		AR	SHIM, CRANKCASE TOP TO CYLINDER BLOCK (.002-3-5-10)
7	10-24786		3	SCREW, CRANKCASE TOP TO CYLINDER BLOCK (5/8") - SERIAL GROUP#14
8	13-20202		3	LOCKWASHER, CRANKCASE TO TOP SCREW - SERIAL GROUP#14
9	54-61001		1	CLIP, UPPER END CAP SCREW - SERIAL GROUP#14
7	10-73456		3	SCREW, CRANKCASE TOP TO CYLINDER BLOCK (5/8") - SERIAL GROUP#15
8	14-75670		1	TAB WASHER, CRANKCASE TOP SCREW - SERIAL GROUP#15
10	848-5067A1		1	CYLINDER BLOCK AND CRANKCASE ASSEMBLY UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	848-6064A1		1	CYLINDER BLOCK AND CRANKCASE ASSEMBLY UNITED STATES 4351590 THRU 4580036 AUSTRALIA 8036050 THRU 8043124 BELGIUM 9104814 THRU 9137349 CANADA 7067848 THRU 7089697
	848-6434A1		1	CYLINDER BLOCK AND CRANKCASE ASSEMBLY UNITED STATES 4580037 AND UP AUSTRALIA 8043125 AND UP BELGIUM 9137350 AND UP CANADA 7089698 AND UP
11	17-23784		2	PIN, DOWEL - CRANKCASE TO CYLINDER BLOCK
12	16-65866		2	STUD, CRANKCASE TO CYLINDER BLOCK (1 5/16") UNITED STATES 4580036 AND BELOW AUSTRALIA 8043124 AND BELOW BELGIUM 9137349 AND BELOW CANADA 7089697 AND BELOW
13	11-46793		2	NUT, CRANKCASE STUD UNITED STATES 4580036 AND BELOW AUSTRALIA 8043124 AND BELOW BELGIUM 9137349 AND BELOW CANADA 7089697 AND BELOW
14	16-65868		2	STUD, CYLINDER BLOCK TO DRIVE SHAFT HOUSING (2 1/8") UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	16-72743		2	STUD, CYLINDER BLOCK TO DRIVE SHAFT HOUSING (2 1/8") UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP


CONTINUED ON NEXT PAGE

CYLINDER BLOCK AND CRANKCASE ASSEMBLY

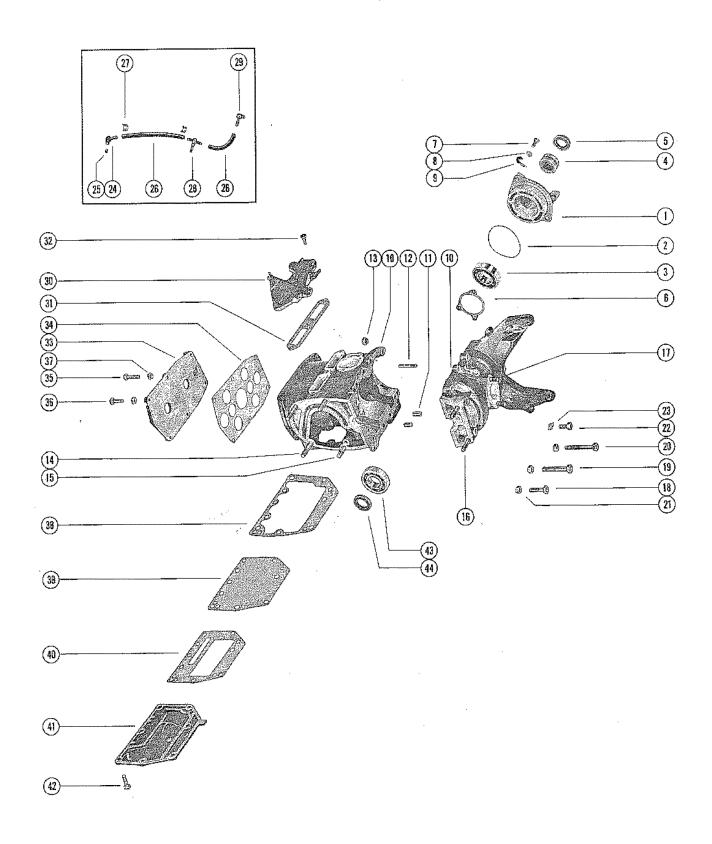


REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
15	16-68165		2	STUD, CYLINDER BLOCK TO DRIVE SHAFT HOUSING (1 5/8")
16	16-68165		2	STUD, CRANKCASE TO DRIVE SHAFT HOUSING (1 5/8")
17	16-65865		2	STUD, CARBURETOR TO CRANKCASE (1 3/32") UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	16-72742		2	STUD, CARBURETOR TO CRANKCASE (1 3/32") UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
18	10-26066		4	SCREW, CRANKCASE TO CYLINDER BLOCK (1 1/4") UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	10-26066		5	SCREW, CRANKCASE TO CYLINDER BLOCK (1 1/4") UNITED STATES 4351590 THRU 4580036 AUSTRALIA 8036050 THRU 8043124 BELGIUM 9104814 THRU 9137349 CANADA 7067848 THRU 7089697
	10-74824		5	SCREW, CRANKCASE TO CYLINDER BLOCK (1 1/8") UNITED STATES 4580037 AND UP AUSTRALIA 8043125 AND UP BELGIUM 9137350 AND UP CANADA 7089698 AND UP
19	10-26065		1	SCREW, CRANKCASE TO CYLINDER BLOCK (1"0) UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	10-21449		2	SCREW, CRANKCASE TO CYLINDER BLOCK (2") UNITED STATES 4403786 AND BELOW AUSTRALIA 8039074 AND BELOW BELGIUM 9122764 AND BELOW CANADA 7077247 AND BELOW
	10-75700		2	SCREW, CRANKCASE TO CYLINDER BLOCK (2 1/8") UNITED STATES 4403787 THRU 4580036 AUSTRALIA 8039075 THRU 8043124 BELGIUM 9122765 THRU 9137349 CANADA 7077248 THRU 7089697
	10-35385		2	SCREW, CRANKCASE TO CYLINDER BLOCK (1 3/4") UNITED STATES 4580037 AND UP AUSTRALIA 8043125 AND UP BELGIUM 9137350 AND UP CANADA 7089698 AND UP
20	10-26132		2	SCREW, CRANKCASE TO CYLINDER BLOCK (2 1/2") UNITED STATES 4580036 AND BELOW AUSTRALIA 8043124 AND BELOW BELGIUM 9137349 AND BELOW CANADA 7089697 AND BELOW
	10-67450		2	SCREW, CRANKCASE TO CYLINDER BLOCK (2 1/4") UNITED STATES 4580037 AND UP AUSTRALIA 8043125 AND UP BELGIUM 9137350 AND UP CANADA 7089698 AND UP
21	11-46793		10	NUT, CRANKCASE SCREW UNITED STATES 4580036 AND BELOW AUSTRALIA 8043124 AND BELOW BELGIUM 9137349 AND BELOW CANADA 7089697 AND BELOW
22	10-26801		1	SCREW, LOCK - CENTER MAIN BEARING (5/8")
23	14-20091		1	TAB WASHER, CENTER MAIN BEARING LOCK SCREW
24	22-61295A5		1	ELBOW ASSEMBLY, BLEED DRAIN PART OF CYLINDER BLOCK AND CRANKCASE ASSEMBLY UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9035128 AND BELOW CANADA 7024647 AND BELOW

CONTINUED ON NEXT PAGE

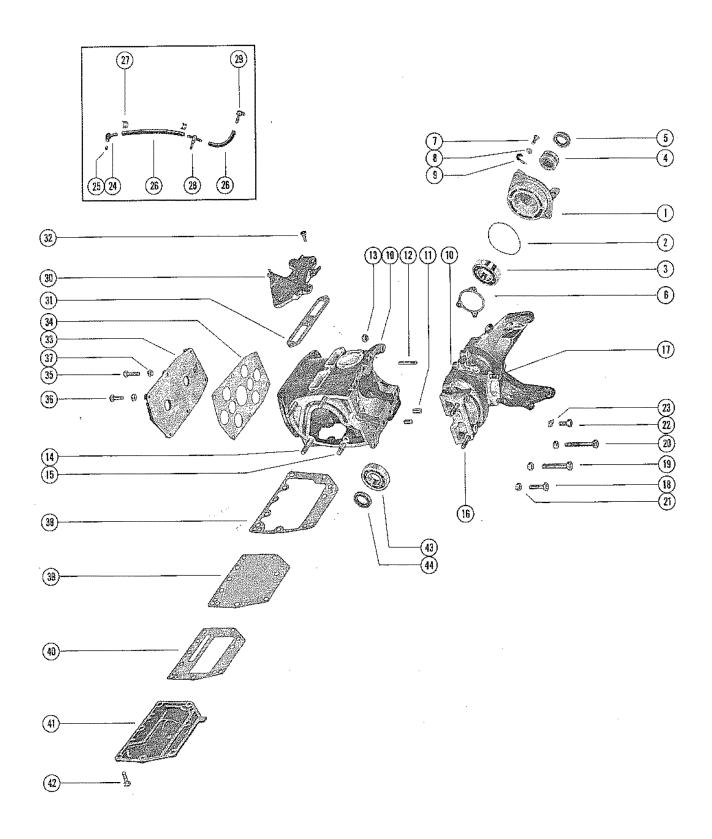


		T		LOCK AND CHANKCASE ASSEMBLE
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
25	21-56011A2		1	CHECK VALVE ASSEMBLY PART OF CYLINDER BLOCK AND CRANKCASE ASSEMBLY
24	21-64871A1		1	ELBOW ASSEMBLY, BLEED DRAIN PART OF CYLINDER BLOCK AND CRANKCASE ASSEMBLY UNITED STATES 3755885 AND UP AUSTRALIA 8013705 AND UP BELGIUM 9035129 AND UP CANADA 7024648 AND UP
26	32-60584		2	HOSE, BLEED DRAIN PART OF CYLINDER BLOCK AND CRANKCASE ASSEMBLY
27	54-56223		4	CLAMP, BLEED HOSE ATTACHING PART OF CYLINDER BLOCK AND CRANKCASE ASSEMBLY
28	22-61559		1	TEE, INJECTION PART OF CYLINDER BLOCK AND CRANKCASE ASSEMBLY UNITED STATES 4580036 AND BELOW AUSTRALIA 8043124 AND BELOW BELGIUM 9137349 AND BELOW CANADA 7089697 AND BELOW
	22-76329		1	TEE, INJECTION PART OF CYLINDER BLOCK AND CRANKCASE ASSEMBLY UNITED STATES 4580037 AND UP AUSTRALIA 8043125 AND UP BELGIUM 9137350 AND UP CANADA 7089698 AND UP
29	22-61558		1	ELBOW, BLEED DRAIN PART OF CYLINDER BLOCK AND CRANKCASE ASSEMBLY
30	71127		1	COVER, TRANSFER PORT
31	27-27936		1	GASKET, TRANSFER PORT COVER
32	10-49668		1	SCREW, TRANSFER PORT COVER TO CYLINDER BLOCK (3/4")
	10-24646		2	SCREW, TRANSFER PORT COVER TO CYLINDER BLOCK (5/8")
33	1022-3567		1	COVER, CYLINDER BLOCK
34	27-52579		1	GASKET, CYLINDER BLOCK COVER
35	10-24644		2	SCREW, COVER TO CYLINDER BLOCK (1 3/8") UNITED STATES 4580036 AND BELOW AUSTRALIA 8043124 AND BELOW BELGIUM 9137349 AND BELOW CANADA 7089697 AND BELOW
36	10-21091		4	SCREW, COVER TO CYLINDER BLOCK (1 1/8")
37	11-46887		6	NUT, CYLINDER BLOCK COVER SCREW
35	10-76596		2	SCREW, COVER TO CYLINDER BLOCK (1 1/4") UNITED STATES 4580037 AND UP AUSTRALIA 8043125 AND UP BELGIUM 9137350 AND UP CANADA 7089698 AND UP
36	10-76630		4	SCREW, COVER TO CYLINDER BLOCK (1")
38	27-45088		1	GASKET, CYLINDER BLOCK TO BAFFLE PLATE
39	39308		1	PLATE, BAFFLE - EXHAUST MANIFOLD
40	27-39316		1	GASKET, BAFFLE PLATE TO MANIFOLD COVER UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
41	57576		1	COVER, EXHAUST MANIFOLD UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	73458		1	COVER, EXHAUST MANIFOLD UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP

CONTINUED ON NEXT PAGE

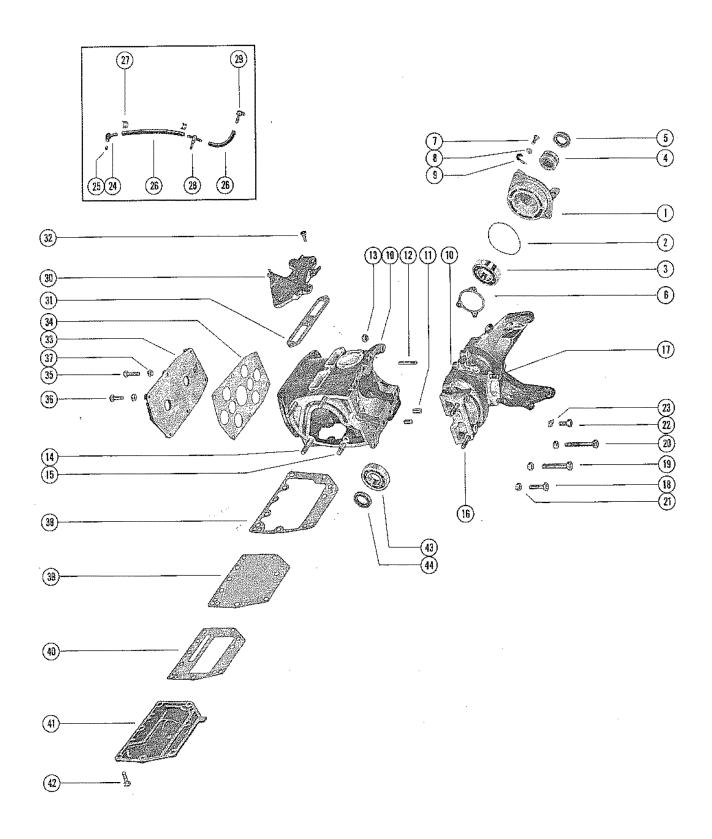


REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
42	10-28782		7	SCREW, MANIFOLD COVER TO CYLINDER BLOCK (7/8")
43	30-63326		1	BEARING, BALL - CRANKCASE (LOWER)
44	26-66302		1	OIL SEAL, CRANKCASE (LOWER)

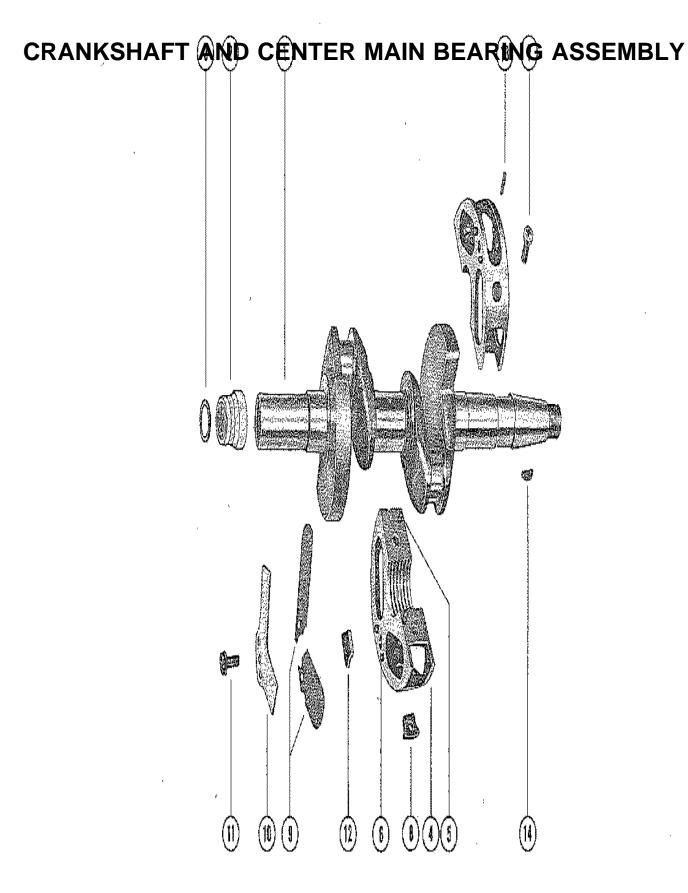

CRANKSHAFT AND CENTER MAIN BEARING ASSEMBLY


REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	415-5041		1	CRANKSHAFT UNITED STATES 4403786 AND BELOW AUSTRALIA 8039074 AND BELOW BELGIUM 9122764 AND BELOW CANADA 7077247 AND BELOW
	415-6099		1	CRANKSHAFT UNITED STATES 4403787 AND UP AUSTRALIA 8039075 AND UP BELGIUM 9122765 AND UP CANADA 7077248 AND UP
2	63992A1		1	CARRIER ASSEMBLY UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
3	64989		1	SEAL, CARRIER ASSEMBLY UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
2	26-73315		1	SEAL, CRANKSHAFT UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
4	534-3267A18		1	CENTER MAIN BEARING ASSEMBLY
5	17-20032		2	DOWEL PIN, CENTER MAIN BEARING
6	17-65855		8	PIN, REED STOP
7	10-45775		2	SCREW, CENTER MAIN BEARING CLAMPING (9/16")
8	11-45774		2	NUT, CENTER MAIN BEARING CLAMPING SCREW
9	34-56704A1		1	REED SET, CENTER MAIN BEARING (MATCHED)
10	34-64632		4	REED STOP, MAIN BEARING REED VALVES
11	10-53481		4	SCREW, REED STOP MOUNTING (9/16")
12	11-20110		4	NUT, REED STOP MOUNTING SCREW
13	17-20032		1	DOWEL PIN, MAIN BEARING TO CYLINDER BLOCK
14	28-20094		1	KEY, FLYWHEEL

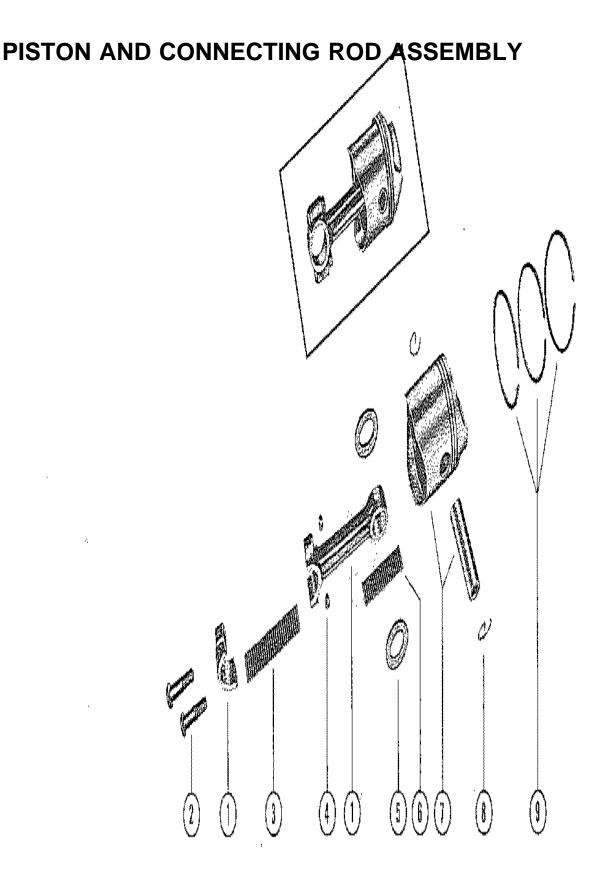

PISTON AND CONNECTING ROD ASSEMBLY


REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	619-3195A2		2	CONNECTING ROD ASSEMBLY
2	10-45379		4	SCREW, CONNECTING ROD
3	29-20046		50	BEARING, NEEDLE - CRANKPIN
4	11-20061		4	NUT, CONNECTING ROD SCREW
5	12-47275		4	WASHER, NEEDLE BEARING RETAINING
6	29-20063		54	BEARING, NEEDLE - PISTON PIN
7	743-5172A6		2	PISTON AND PISTON PIN ASSEMBLY
8	40-47276		4	LOCK RING, PISTON PIN
9	39-27841A12		1	RING, PISTON
-	743-3366A2		2	PISTON AND PISTON PIN ASSEMBLY (.015 OVERSIZE)
-	39-28616A12		1	RING, PISTON (.015 OVERSIZE)

STEERING HANDLE ASSEMBLY

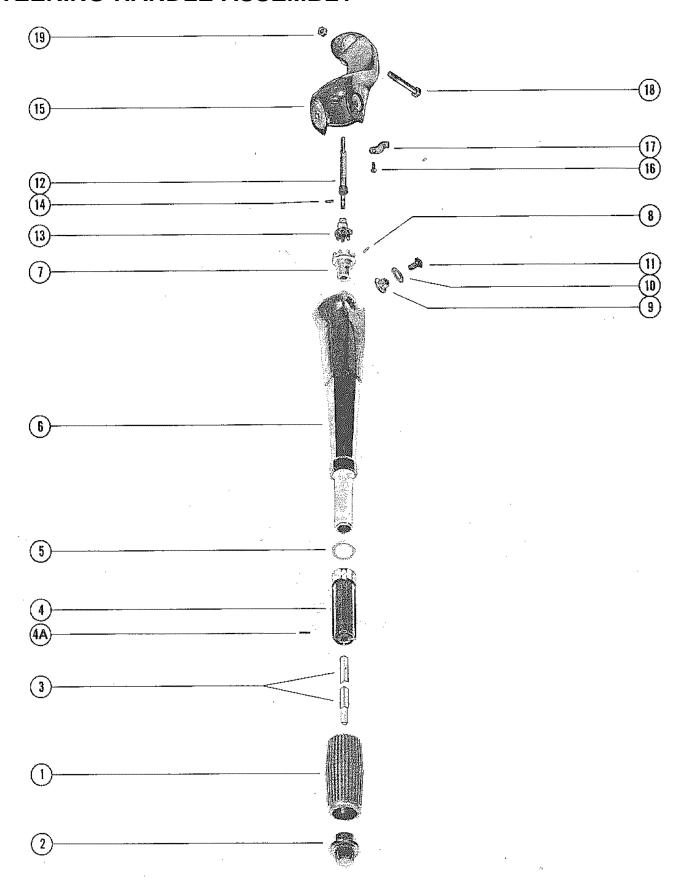


STEERING HANDLE ASSEMBLY


-		1	1	STEERING HANDLE ASSEMBLY
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
INU.		STIVI.	1	
-	60850A4		1	STEERING HANDLE ASSEMBLY, COMPLETE UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9035128 AND BELOW CANADA 7024647 AND BELOW
-	60850A6		1	STEERING HANDLE ASSEMBLY, COMPLETE UNITED STATES 3755885 AND UP AUSTRALIA 8013705 AND UP BELGIUM 9035129 AND UP CANADA 7024648 AND UP
1	60854		1	GRIP, HANDLE - THROTTLE
2	62251		1	CAP, HANDLE THROTTLE
3	60851		1	SHAFT, THROTTLE UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9035128 AND BELOW CANADA 7024647 AND BELOW
	66393		1	SHAFT, THROTTLE UNITED STATES 3755885 AND UP AUSTRALIA 8013705 AND UP BELGIUM 9035129 AND UP CANADA 7024648 AND UP
4	65418A1		1	HANDLE ASSEMBLY, THROTTLE SHAFT UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9035128 AND BELOW CANADA 7024647 AND BELOW
	66394A1		1	HANDLE ASSEMBLY, THROTTLE SHAFT UNITED STATES 3755885 AND UP AUSTRALIA 8013705 AND UP BELGIUM 9035129 AND UP CANADA 7024648 AND UP
4A	17-46152		1	PIN, THROTTLE SHAFT UNITED STATES 3755885 AND UP AUSTRALIA 8013705 AND UP BELGIUM 9035129 AND UP CANADA 7024648 AND UP
5	12-62252		1	WASHER, THROTTLE HANDLE TO STEERING ARM
6	60850		1	ARM, STEERING HANDLE
7	43-60852		1	GEAR, BALL THROTTLE SHAFT
8	17-27088		1	PIN, BALL GEAR TO THROTTLE SHAFT
9	48003		2	PIVOT, STEERING HANDLE TO BRACKET
10	15-48002015		AR	SHIM, STEERING HANDLE PIVOT TO BRACKET (.015)
11	10-64074		2	SCREW, STEERING HANDLE TO ARM BRACKET (5/8")
12	60857A2		1	UNIVERSAL JOINT ASSEMBLY
13	43-60852		1	GEAR, BALL - UNIVERSAL JOINT
14	17-68436		1	PIN, BALL GEAR TO UNIVERSAL JOINT
15	68766A2		1	BRACKET, STEERING ARM
16	10-62233		2	SCREW, DETENT SPRING TO STEERING ARM BRACKET (5/8")
17	24-47744		2	SPRING, DETENT - STEERING HANDLE UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	24-72847		2	SPRING, DETENT - STEERING HANDLE UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
18	10-26132		3	SCREW, STEERING ARM BRACKET TO SADDLE (2 1/2")
19	11-46793		3	NUT, STEERING ARM BRACKET FASTENING SCREW

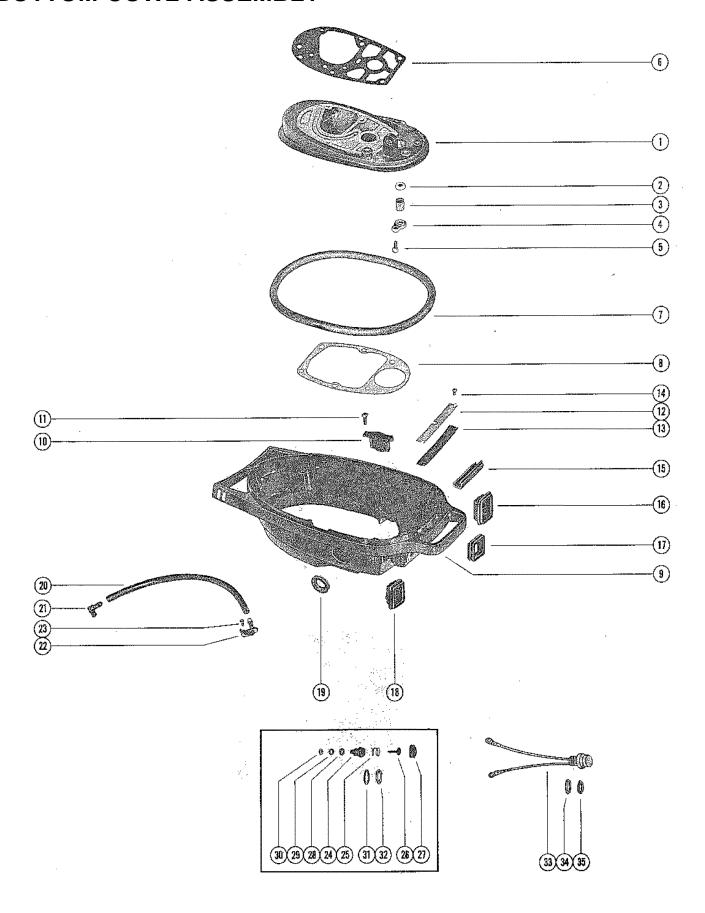

		1	ī	BOTTOWI COVVE ASSEMBLT
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	58978A2		1	PLATE ASSEMBLY, MOUNTING UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9035128 AND BELOW CANADA 7024647 AND BELOW
	66416A2		1	PLATE ASSEMBLY, MOUNTING UNITED STATES 3755885 AND UP AUSTRALIA 8013705 AND UP BELGIUM 9035129 AND UP CANADA 7024648 AND UP
2	12-36555		1	WASHER, NYLON - WATER INLET TUBE
3	26-25329		1	SEAL, RUBBER - WATER INLET TUBE
4	33513		1	RETAINER, WATER INLET TUBE SEAL
5	10-20540		1	SCREW, RETAINER TO MOUNTING PLATE (5/8")
6	27-39401		1	GASKET, POWERHEAD TO MOUNTING PLATE
7	39622		1	SEAL, MOUNTING PLATE TO BOTTOM COWL
8	27-39402		1	GASKET, MOUNTING PLATE TO DRIVE SHAFT HOUSING
9	2129-5029A2		1	BOTTOM COWL ASSEMBLY UNITED STATES 4403786 AND BELOW AUSTRALIA 8039074 AND BELOW BELGIUM 9122764 AND BELOW CANADA 7077247 AND BELOW
	2129-6182A3		1	BOTTOM COWL ASSEMBLY UNITED STATES 4403787 AND UP AUSTRALIA 8039075 AND UP BELGIUM 9122765 AND UP CANADA 7077248 AND UP
10	48472		1	COVER, HARNESS HOLE
11	10-61802		2	SCREW, COVER TO BOTTOM COWL (7/8")
12	46266A2		1	COVER PLATE ASSEMBLY, BOTTOM COWL
13	39591		1	PAD, SOUND - COVER PLATE
14	10-30663		3	SCREW, COVER PLATE TO BOTTOM COWL (3/8") UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	10-62568		3	SCREW, COVER PLATE TO BOTTOM COWL (3/8") UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
15	39630		1	CUSHION, RUBBER - BOTTOM COWL
16	60886		1	BOOT, THROTTLE CABLE - BOTTOM COWL
17	39778		1	BOOT, FUEL ADAPTOR - BOTTOM COWL
18	39780		1	BOOT, SHIFT CABLE - BOTTOM COWL
19	39058		1	SEAL, SHIFT HANDLE - BOTTOM COWL
20	32-34395A1		1	HOSE, TELL TALE - COWL TO CYLINDER BLOCK (11")
21	22-25885		1	ELBOW, TELL TALE HOSE TO CYLINDER (SEE NOTE BELOW)
22	52889		1	NOZZLE, TELL TALE HOSE TO BOTTOM COWL - PART OF BOTTOM COWL ASSEMBLY
23	10-48408		1	SCREW, TELL TALE NOZZLE TO BOTTOM COWL (1/2") - PART OF BOTTOM COWL ASSEMBLY
24	59065A4		1	STOP SWITCH ASSEMBLY UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
25	24-60239		1	SPRING, STOP SWITCH UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW

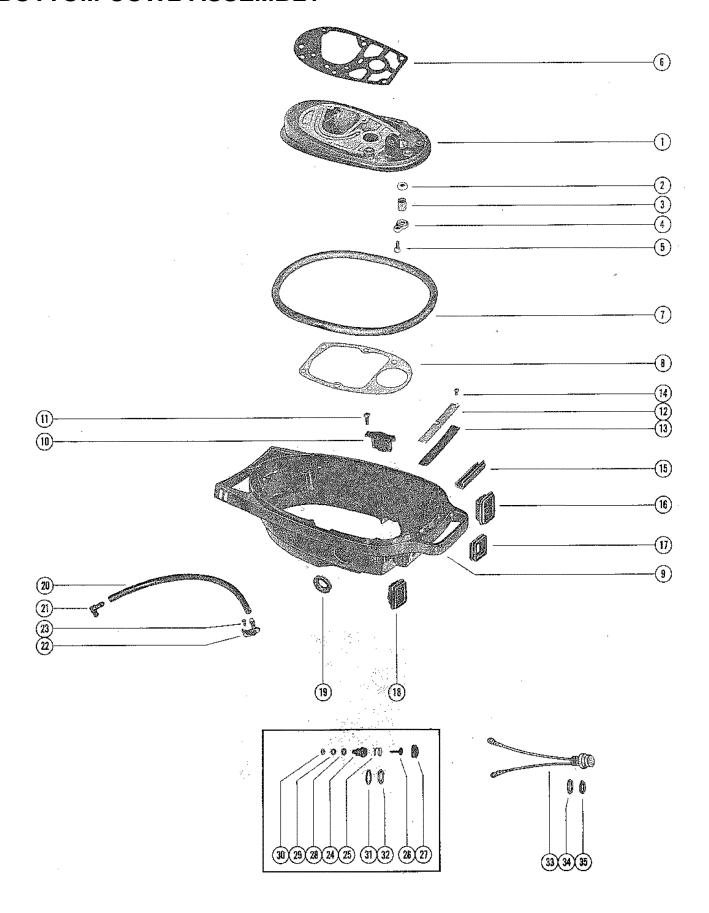


				DOTTON COME AGGENIDET
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
26	87-61577A1		1	CONTACT ASSEMBLY, STOP SWITCH UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
27	38950A1		1	COVER ASSEMBLY, STOP SWITCH UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
28	12-59061		1	WASHER, STOP SWITCH UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
29	13-26996		1	LOCKWASHER, STOP SWITCH UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
30	11-20645		1	NUT, GROUND LEAD TO STOP SWITCH UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
31	13-21972		1	LOCKWASHER, CONNECTOR BASE UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
32	11-21971		1	NUT, CONNECTOR BASE TO BOTTOM COWL UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
33	87-69508A3		1	STOP SWITCH ASSEMBLY UNITED STATES 4102790 THRU 4403786 AUSTRALIA 8026165 THRU 8039074 BELGIUM 9070129 THRU 9122764 CANADA 7044783 THRU 7077247
	87-69508A7		1	STOP SWITCH ASSEMBLY UNITED STATES 4403787 AND UP AUSTRALIA 8039075 AND UP BELGIUM 9122765 AND UP CANADA 7077248 AND UP
34	13-69845		1	LOCKWASHER, STOP SWITCH UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
35	11-69844		1	NUT, STOP SWITCH

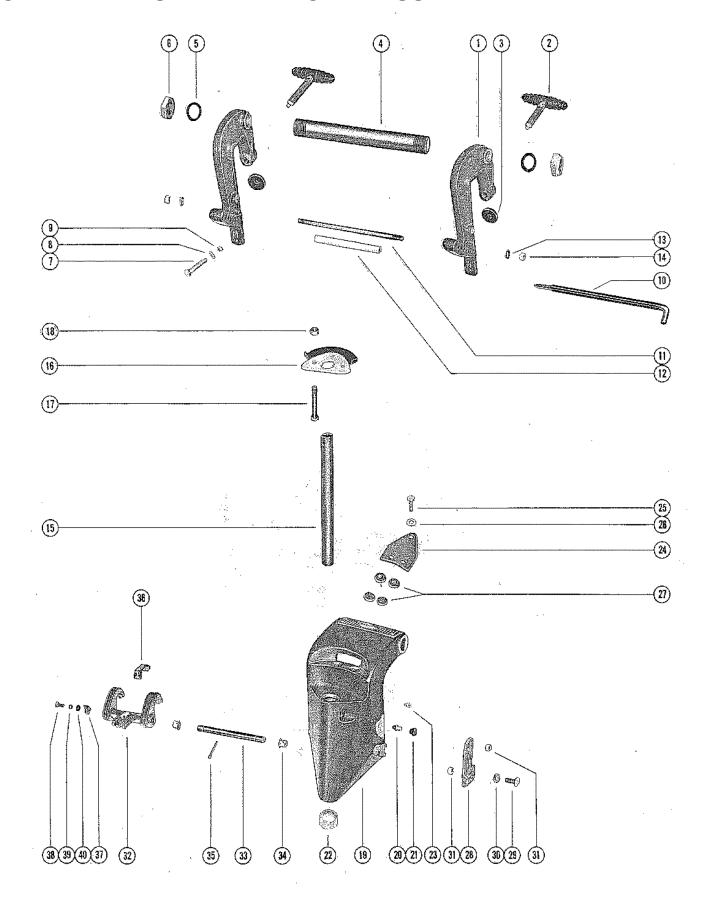


		 	•	AND SWIVEL DIVACKET ASSEMBLE
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	1427-3293A1		2	CLAMP BRACKET ASSEMBLY UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
2	22477A4		2	THUMB SCREW ASSEMBLY UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
3	12-20214		2	WASHER, THUMB SCREW UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
1	1427-5632A1		2	CLAMP BRACKET ASSEMBLY UNITED STATES 4102790 THRU 4351589 AUSTRALIA 8026165 THRU 8036049 BELGIUM 9070129 THRU 9104813 CANADA 7044783 THRU 7067847
2	69157A3		2	THUMB SCREW ASSEMBLY UNITED STATES 4102790 THRU 4351589 AUSTRALIA 8026165 THRU 8036049 BELGIUM 9070129 THRU 9104813 CANADA 7044783 THRU 7067847
3	12-20214		2	WASHER, THUMB SCREW UNITED STATES 4102790 THRU 4351589 AUSTRALIA 8026165 THRU 8036049 BELGIUM 9070129 THRU 9104813 CANADA 7044783 THRU 7067847
1	1427-5632A2		2	CLAMP BRACKET ASSEMBLY UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
2	74159A3		2	THUMB SCREW ASSEMBLY UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
4	30685		1	TILT TUBE, CLAMP BRACKET UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
	71018		1	TILT TUBE, CLAMP BRACKET UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
5	12-52864		2	SHIM, CLAMP BRACKET TILT TUBE UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	12-71421		2	WASHER, CLAMP BRACKET TILT TUBE UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
6	11-30499		2	NUT, TILT TUBE FASTENING UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
	11-71019		2	NUT, TILT TUBE FASTENING UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
7	10-67979		2	BOLT, CLAMP BRACKET TO TRANSOM (2 3/4")
8	12-67981		2	WASHER, CLAMP BRACKET SCREW
9	11-67980		2	NUT, CLAMP BRACKET SCREW
10	17-56373A1		1	TILT LOCK PIN ASSEMBLY
11	16-59620		1	STUD, CLAMP BRACKET (8")
12	23-59621		1	SPACER, CLAMP BRACKET STUD

CONTINUED ON NEXT PAGE

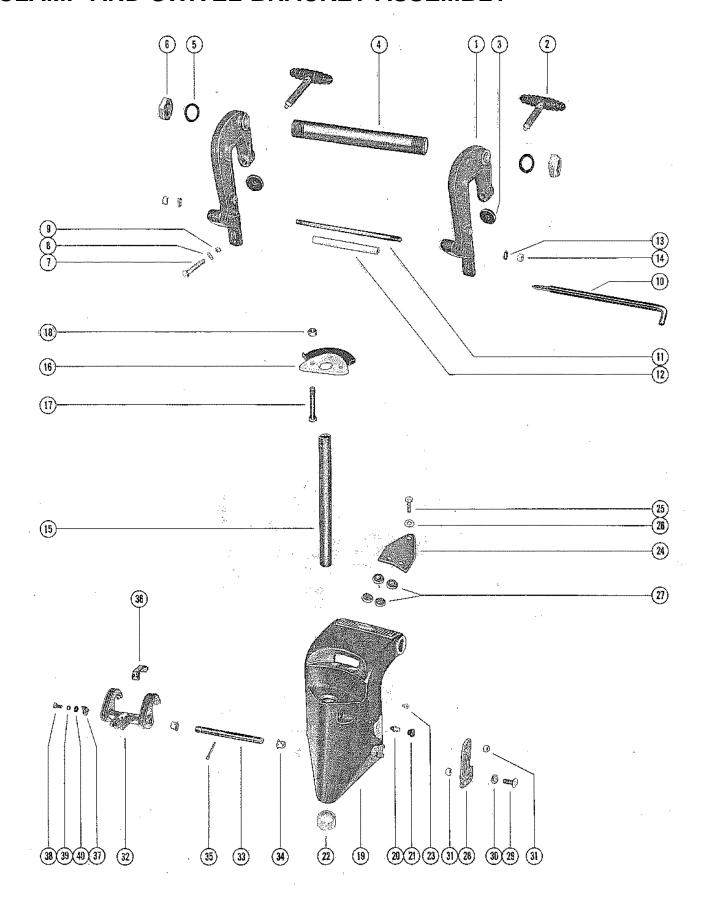


				AND SWIVEL DIVACINE I ASSEMBLE
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
13	13-26993		2	LOCKWASHER, CLAMP BRACKET STUD
14	11-28770		2	NUT, CLAMP BRACKET STUD
15	17-39585		1	SWIVEL PIN UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9035128 AND BELOW CANADA 7024647 AND BELOW
	66557		1	SWIVEL PIN UNITED STATES 3755885 AND UP AUSTRALIA 8013705 AND UP BELGIUM 9035129 AND UP CANADA 7024648 AND UP
16	33423		1	CO-PILOT DISC
17	10-26132		3	SCREW, CO-PILOT DISC TO SADDLE (2 1/2")
18	11-46793		3	NUT, CO-PILOT DISC TO SADDLE SCREW
19	1461-5040A2		1	SWIVEL BRACKET ASSEMBLY UNITED STATES 3755884 AND BELOW AUSTRALIA 8013704 AND BELOW BELGIUM 9035128 AND BELOW CANADA 7024647 AND BELOW
	1461-5296A1		1	SWIVEL BRACKET ASSEMBLY UNITED STATES 3755885 THRU 4351589 AUSTRALIA 8013705 THRU 8036049 BELGIUM 9035129 THRU 9104813 CANADA 7024648 THRU 7067847
	1461-6036A1		1	SWIVEL BRACKET ASSEMBLY UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
20	22-31345		1	FITTING, GREASE - SWIVEL BRACKET UNITED STATES 3755885 THRU 4351589 AUSTRALIA 8013705 THRU 8036049 BELGIUM 9035129 THRU 9104813 CANADA 7024648 THRU 7067847
	22-74036		3	FITTING, GREASE - SWIVEL BRACKET UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
21	29359		1	LUBRICAN, GREASE FITTING UNITED STATES 3755885 THRU 4351589 AUSTRALIA 8013705 THRU 8036049 BELGIUM 9035129 THRU 9104813 CANADA 7024648 THRU 7067847
22	23-64651		2	BUSHING, SWIVEL BRACKET
23	10-36398		1	SCREW, DWIVEL BRACKET
24	62054		1	PLATE, CLAMP - CO-PILOT UNITED STATES 4403786 AND BELOW AUSTRALIA 8039074 AND BELOW BELGIUM 9122764 AND BELOW CANADA 7077247 AND BELOW
25	10-62055		1	SCREW, PLATE TO SWIVEL BRACKET (1 1/4") UNITED STATES 4403786 AND BELOW AUSTRALIA 8039074 AND BELOW BELGIUM 9122764 AND BELOW CANADA 7077247 AND BELOW
24	73014A1		1	PLATE ASSEMBLY, CO-PILOT UNITED STATES 4403787 AND UP AUSTRALIA 8039075 AND UP BELGIUM 9122765 AND UP CANADA 7077248 AND UP
25	10-69021		1	SCREW, PLATE TO SWIVEL BRACKET (1 1/4") UNITED STATES 4403787 AND UP AUSTRALIA 8039075 AND UP BELGIUM 9122765 AND UP CANADA 7077248 AND UP
26	12-56720		1	WASHER, CLAMP PLATE SCREW
27	20203		4	DISC, FRICTION - CLAMP PLATE AND SWIVEL BRACKET
28	63310A1		1	LEVER ASSEMBLY, TILT STOP
29	10-63311		2	SCREW, RETAINING - LEVER TO SWIVEL BRACKET

CONTINUED ON NEXT PAGE

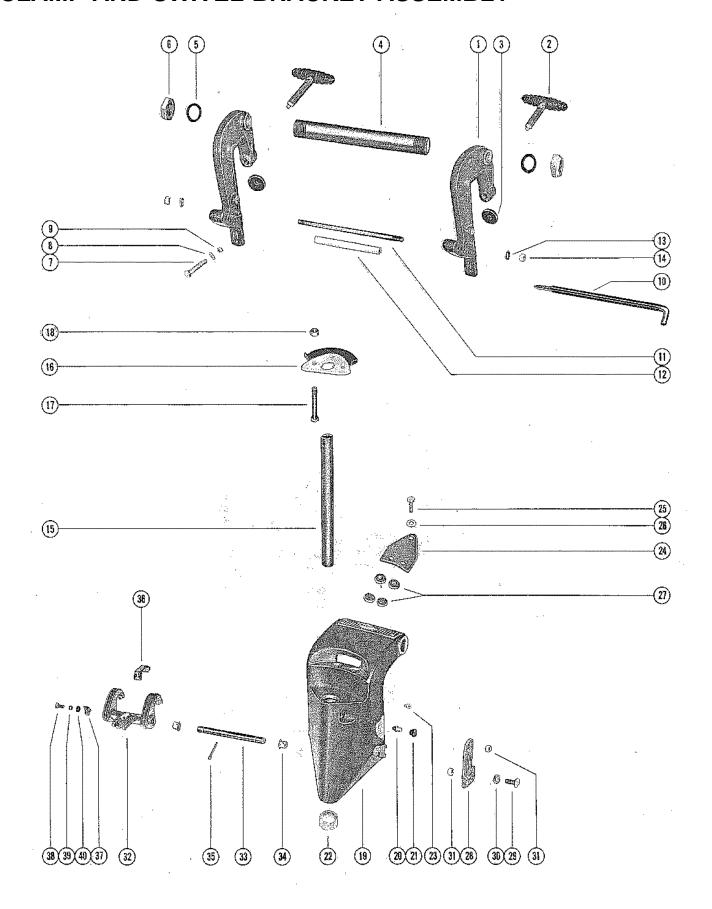


REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
30	13-31030		1	WASHER, WAVE - TILT STOP LEVER SCREW
31	11-35045		2	NUT, TILT STOP LEVER SCREW
32	61012		1	LEVER, REVERSE LOCK
33	26092		1	ROD, REVERSE LOCK LEVER
34	23-26841		2	BUSHING, NYLON - REVERSE LOCK LEVER ROD
35	18-45882		1	COTTER PIN, REVERSE LOCK LEVER TO ROD
36	61007		1	RETAINER, ROD - REVERSE LOCK
37	70241		1	STOP, REVERSE LOCK UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
38	10-71056		1	SCREW, REVERSE STOP TO SWIVEL BRACKET UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
39	13-26992		1	LOCKWASHER, REVERSE STOP SCREW UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
40	12-71055		1	WASHER, REVERSE STOP SCREW UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP

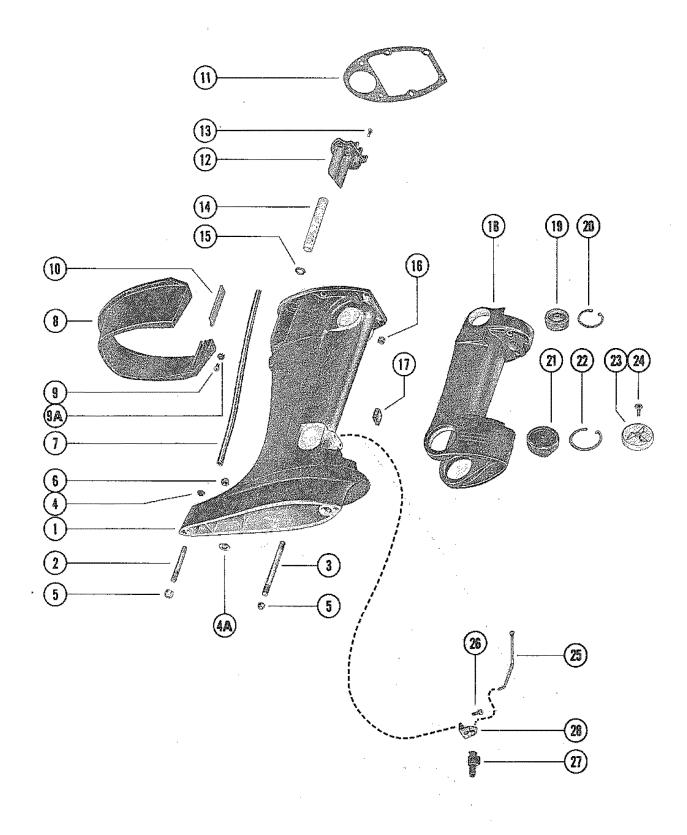


REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	1561-4691A2		1	DRIVE SHAFT HOUSING ASSEMBLY (SHORT SHAFT) UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	1560-4690A2		1	DRIVE SHAFT HOUSING ASSEMBLY (LONG SHAFT UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	1561-6007A2		1	DRIVE SHAFT HOUSING ASSEMBLY (SHORT SHAFT) UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
	1560-6008A2		1	DRIVE SHAFT HOUSING ASSEMBLY (LONG SHAFT) UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
2	16-56299		1	STUD, DRIVE SHAFT HSG. TO GEAR HSG. (2 5/16")
3	16-58134		1	STUD, DRIVE SHAFT HSG. TO GEAR HSG. (3 15/16")
4	19-32298		1	PLUG, DRIVE SHAFT HOUSING STUD
4A	26-30696		1	OIL SEAL, DRIVE SHAFT HOUSING(EARLY MODELS)
5	11-35814		2	NUT, DRIVE SHAFT HOUSING STUD
6	11-34863		1	NUT, GEAR HOUSING TO DRIVE SHAFT HOUSING STUD
7	32-39586		1	TUBE, WATER OUTLET (SHORT SHAFT)
	32-39587		1	TUBE, WATER OUTLET (LONG SHAFT)
8	39301		1	COVER, TIME - DRIVE SHAFT HOUSING
9	10-57807		3	SCREW, COVER TO BOTTOM COWL (3/4") UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	10-69013		3	SCREW, COVER TO BOTTOM COWL (7/8") UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
9A	25-57806		3	GROMMET, TRIM COVER SCREW
10	39353		2	SEAL, RUBBER - TRIM COVER
11	27-39402		1	GASKET, MOUNTING PLATE TO DRIVE SHAFT HOUSING
12	39492		1	PLATE, IDLE RELIEF
13	10-35519		2	SCREW, IDLE RELIEF PLATE TO DRIVE SHAFT HOUSING (1/2")
14	32-45054		2	TUBE, NYLON - IDLE RELIEF TUBE
15	25-20195		2	"O" RING, IDLE RELIEF TUBE
16	11-46793		4	NUT, POWERHEAD STUDS UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	11-29250		2	NUT, POWERHEAD STUDS UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	11-60049		6	NUT, POWERHEAD STUDS UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
17	64076		1	BUMPER, RUBBER - SADDLE
18	1562-4692A1		1	SADDLE ASSEMBLY


CONTINUED ON NEXT PAGE

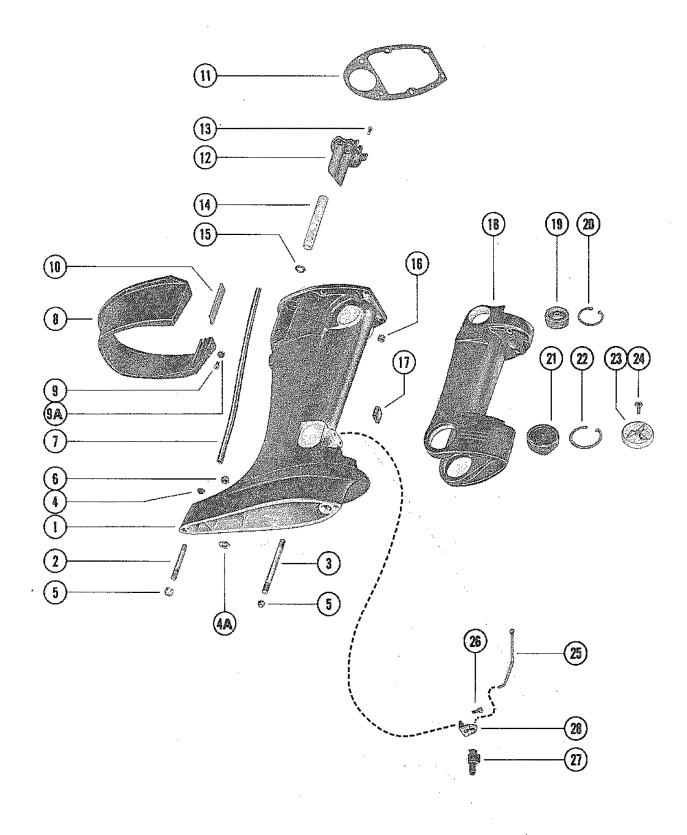


			I	DRIVE GHALL HOUGHTO ACCENIDED
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
19	33975		2	MOUNT, RUBBER - UPPER (SHORT SHAFT)
	25150		2	MOUNT, RUBBER - UPPER (LONG SHAFT)
20	53-23720		2	RING, RETAINING - UPPER MOUNT
21	33976		2	MOUNT, RUBBER - LOWER (SHORT SHAFT)
	28281		2	MOUNT, RUBBER - LOWER (LONG SHAFT)
22	53-23721		2	RING, RETAINING - LOWER MOUNT
23	53040		2	COVER, LOWER MOUNT UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
	70317		2	COVER, LOWER MOUNT UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
24	10-28638		2	SCREW, LOWER MOUNT COVER FASTENING (3/4")
25	61006		1	LINK ROD, REVERSE LOCK UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
	76536		1	LINK ROD, REVERSE LOCK UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP
26	10-65414		2	SCREW, CAM RETAINER TO DRIVE SHAFT HOUSING (3/4")
27	65216		1	CAM, REVERSE LOCK
28	61008		1	RETAINER, REVERSE LOCK CAM UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
	72007		1	RETAINER, REVERSE LOCK CAM UNITED STATES 4102790 AND UP AUSTRALIA 8026165 AND UP BELGIUM 9070129 AND UP CANADA 7044783 AND UP

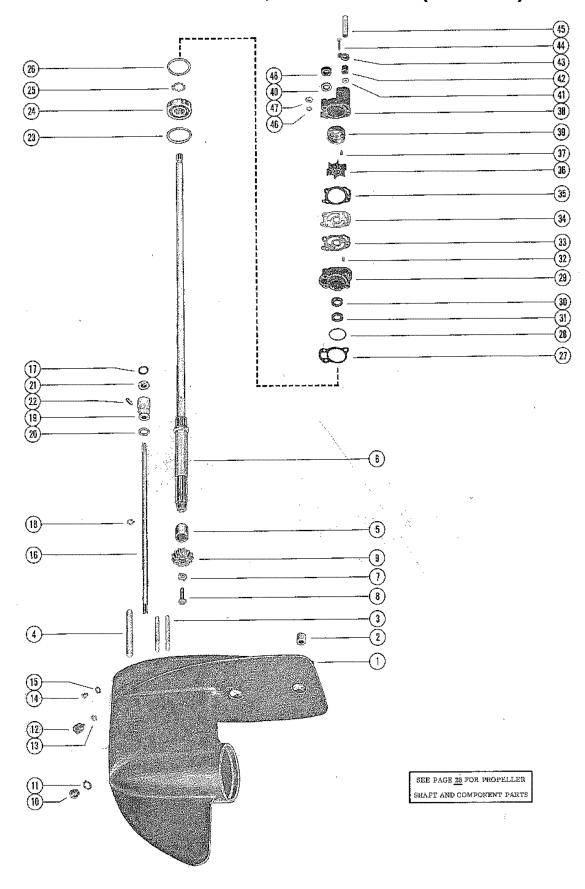


	<u> </u>			IG ASSEMBLT, COMPLETE (PAGE T)
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
-	1627-4404A11		1	GEAR HOUSING ASSEMBLY, COMPLETE(SHOFT SHAFT) UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
-	1627-4404A12		1	GEAR HOUSING ASSEMBLY, COMPLETE(LONG SHAFT) UNITED STATES 4102789 AND BELOW AUSTRALIA 8026164 AND BELOW BELGIUM 9070128 AND BELOW CANADA 7044782 AND BELOW
-	1627-4404A21		1	GEAR HOUSING ASSEMBLY, COMPLETE (SHORT SHAFT) UNITED STATES 4102790 THRU 4351589 AUSTRALIA 8026165 THRU 8036049 BELGIUM 9070129 THRU 9104813 CANADA 7044783 THRU 7067847
-	1627-4404A22		1	GEAR HOUSING ASSEMBLY, COMPLETE (LONG SHAFT) UNITED STATES 4102790 THRU 4351589 AUSTRALIA 8026165 THRU 8036049 BELGIUM 9070129 THRU 9104813 CANADA 7044783 THRU 7067847
-	1627-6006A3		1	GEAR HOUSING ASSEMBLY, COMPLETE (SHORT SHAFT) UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
-	1627-6006A4		1	GEAR HOUSING ASSEMBLY, COMPLETE (LONG SHAFT) UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
1	1627-4404A6		1	GEAR HOUSING ASSEMBLY UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	1627-6006A5		1	GEAR HOUSING ASSEMBLY UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
2	17-20201		1	PIN, DOWEL - GEAR HOUSING TO DRIVE SHAFT HOUSING
3	16-58137		3	STUD, WATER PUMP TO GEAR HOUSING (3 1/8")
4	16-58135		1	STUD, GEAR HOUSING TO DRIVE SHAFT HOUSING (4 13/16")
5	31-28157		1	BEARING, ROLLER - DRIVE SHAFT
6	45-64429A1		1	DRIVE SHAFT ASSEMBLY (SHORT SHAFT) UNITED STATES 4580036 AND BELOW AUSTRALIA 8043124 AND BELOW BELGIUM 9137349 AND BELOW CANADA 7089697 AND BELOW
	45-64430A1		1	DRIVE SHAFT ASSEMBLY (LONG SHAFT) UNITED STATES 4580036 AND BELOW AUSTRALIA 8043124 AND BELOW BELGIUM 9137349 AND BELOW CANADA 7089697 AND BELOW
	45-74853A1		1	DRIVE SAHFT ASSEMBLY (SHORT SHAFT) UNITED STATES 4580037 AND UP AUSTRALIA 8043125 AND UP BELGIUM 9137350 AND UP CANADA 7089698 AND UP
	45-74852A1		1	DRIVE SHAFT ASSEMBLY (LONG SHAFT) UNITED STATES 4580037 AND UP AUSTRALIA 8043125 AND UP BELGIUM 9137350 AND UP CANADA 7089698 AND UP
7	14-49911		1	TAB WASHER, PINION GEAR SCREW
8	10-49908		1	SCREW, PINION GEAR TO DRIVE SHAFT SCREW (3/4")
9	43-45189		1	GEAR, PINION
10	10-28634		1	SCREW, GREASE FILLER (1/4")

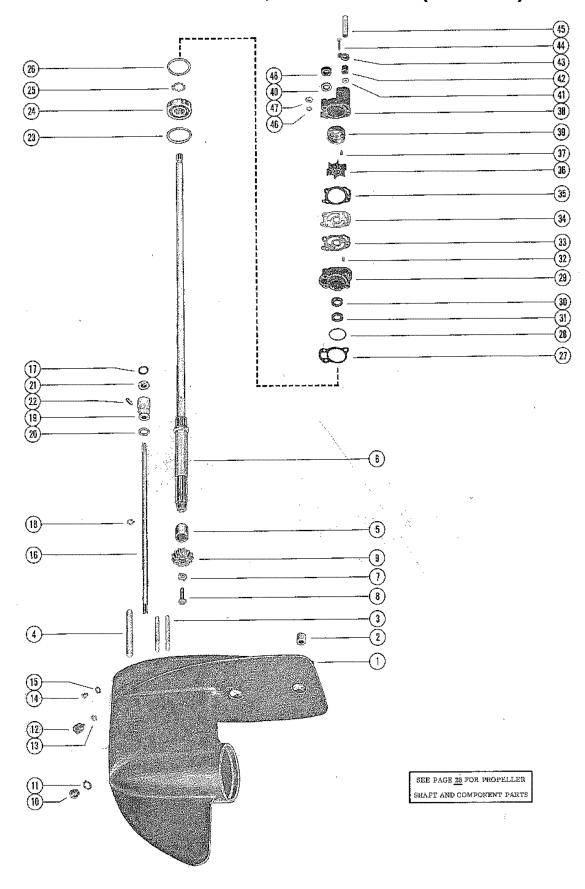

	OLAI	1100	JOII	IG ASSEMBLT, COMPLETE (PAGE T)
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
11	12-20260		1	WASHER, GREASE FILLER SCREW
12	19-48750		1	PLUG, GEAR HOUSING FLUSHING
13	12-49221		1	WASHER, NEOPRENE - GEAR HOUSING FLUSHING PLUG
14	10-28653		1	SCREW, GREASE VENT (1/4")
15	12-20262		1	WASHER, GREASE VENT SCREW
16	56829A1		1	SHAFT ASSEMBLY, SHIFT - LOWER (SHORT SHAFT)
	56830A1		1	SHAFT ASSEMBLY, SHIFT - LOWER (LONG SHAFT)
17	25-38933		1	"O" RING, LOWER SHIFT SHAFT
18	53-22899		1	RING, RETAINING - SHIFT SHAFT
19	23-30676A1		1	BUSHING ASSEMBLY, SHIFT SHAFT
20	25-26802		1	"O" RING, SHIFT SHAFT BUSHING
21	26-30696		1	OIL SEAL, SHIFT SHAFT BUSHING
22	10-39149		1	SCREW, SHIFT SHAFT BUSHING RETAINER (1/2")
23	15-20804A1		AR	SHIM, BALL BEARING TO GEAR HOUSING (.002-3-5-10)
24	30-47158		1	BEARING, BALL - DRIVE SHAFT
25	53-33463		1	RING, RETAINING - BALL BEARING
26	15-20804A1		AR	SHIM, GEAR HOUSING TO WATER PUMP BASE (.002-3-5-10)
27	27-39626		1	GASKET, WATER PUMP BASE TO GEAR HOUSING
28	25-33466		1	"O" RING, WATER PUMP BASE
29	46-48744A1		1	WATER PUMP BASE ASSEMBLY
30	26-20070		1	OIL SEAL, WATER PUMP BASE
31	26-33467		1	OIL SEAL, WATER PUMP BASE (SPRING LOADED)
32	17-35973		2	PIN, DOWEL - WATER PUMP BASE TO WATER PUMP BODY
33	27-39625		1	GASKET, WATER PUMP BASE TO FACE PLATE (LOWER)
34	39624		1	PLATE, FACE - WATER PUMP BASE TO WATER PUMP BODY
35	27-39623		1	GASKET, FACE PLATE TO WATER PUMP BODY (UPPER)
36	47-65958		1	IMPELLER, WATER PUMP - PART OF DRIVE SHAFT ASSEMBLY
37	28-56661		1	KEY, IMPELLER DRIVE - PART OF DRIVE SHAFT ASSEMBLY
38	46-48749A2		1	WATER PUMP BODY ASSEMBLY
39	48754		1	INSERT, WATER PUMP BODY
40	26-20070		1	OIL SEAL, WATER PUMP BODY
41	12-36555		1	WASHER, NYLON - WATER PUMP BODY
42	26-25329		1	SEAL, WATER PUMP BODY
43	45010		1	RETAINER, WATER PUMP BODY SEAL
44	10-56396		1	SCREW, SEAL RETAINER TO WATER PUMP BODY (1 1/8")
45	23-45170		1	SLEEVE, GUIDE - WATER INLET TUBE
46	12-36001		3	WASHER, WATER PUMP STUDS
47	11-45592		3	NUT, WATER PUMP STUDS
48	12-20684		1	RING, RUBBER - CENTRIFUGAL SLINGER (DRIVE SHAFT)

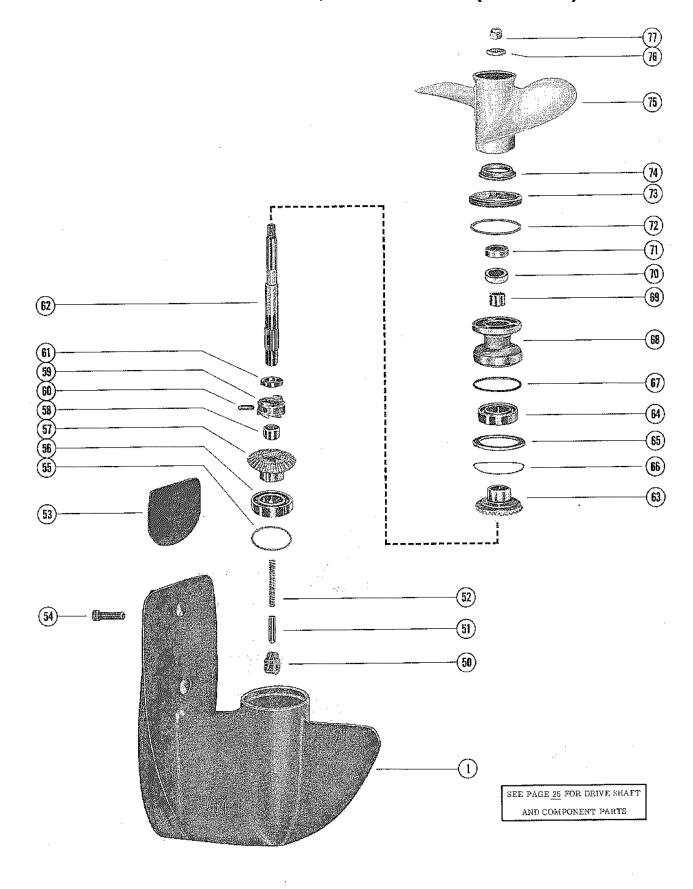


	<u> </u>			IG ASSEMBLT, COMPLETE (FAGE 2)
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
-	1627-4404A11		1	GEAR HOUSING ASSEMBLY, COMPLETE (SHORT SHAFT) - SERIAL GROUP#8
-	1627-4404A12		1	GEAR HOUSING ASSEMBLY, COMPLETE (LONG SHAFT) - SERIAL GROUP#8
-	1627-4404A21		1	GEAR HOUSING ASSEMBLY, COMPLETE (SHORT SHAFT) - SERIAL GROUP#10
-	1627-4404A22		1	GEAR HOUSING ASSEMBLY, COMPLETE (LONG SHAFT) - SERIAL GROUP#10
-	1627-6006A3		1	GEAR HOUSING ASSEMBLY, COMPLETE (SHORT SHAFT) - SERIAL GROUP#12
-	1627-6006A4		1	GEAR HOUSING ASSEMBLY, COMPLETE (LONG SHAFT) - SERIAL GROUP#12
1	1627-4404A6		1	GEAR HOUSING ASSEMBLY - SEE PAGE 26 FOR BREAKDOWN UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	1627-6006A5		1	GEAR HOUSING ASSEMBLY - SEE PAGE 26 FOR BREAKDOWN UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
50	58975		1	CAM, SHIFT
51	33438		1	FOLLOWER, CAM
52	24-33479		1	SPRING, CAM FOLLOWER
53	47820A1		1	PLATE ASSEMBLY, ANODIC - GEAR HOUSING
54	10-47819		1	SCREW, ANODIC PLATE TO GEAR HOUSING (1 1/4")
55	15-20788A1		AR	SHIM, BALL BEARING TO GEAR HOUSING (.002-3-5-10)
56	30-25398		1	BEARING, BALL - FORWARD GEAR
57	43-45227		1	FORWARD GEAR ASSEMBLY
58	31-28157		1	BEARING, ROLLER - FORWARD GEAR
59	52-53518A1		1	RATCHET ASSEMBLY, SLIDING CLUTCH
60	17-53372		1	PIN, CROSS - RATDCHET TO PROPELLER SHAFT
61	24-53373		1	SPRING, RETAINING - CROSS PIN
62	44-34238A2		1	PROPELLER SHAFT ASSEMBLY UNITED STATES 4580036 AND BELOW AUSTRALIA 8043124 AND BELOW BELGIUM 9137349 AND BELOW CANADA 7089697 AND BELOW
	44-75366A2		1	PROPELLER SHAFT ASSEMBLY UNITED STATES 4580037 AND UP AUSTRALIA 8043125 AND UP BELGIUM 9137350 AND UP CANADA 7089698 AND UP
63	43-45229		1	REVERSE GEAR ASSEMBLY
64	30-25398		1	BEARING, BALL - REVERSE GEAR
65	12-33434		1	WASHER, THRUST - REVERSE GEAR UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	71525		1	SLEEVE, THRUST - REVERSE GEAR UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
66	15-33431A1		AR	SHIM, THRUST WASHER TO GEAR HOUSING (.002-3-5-10)
67	25-33465		1	"O" RING, BEARING CARRIER

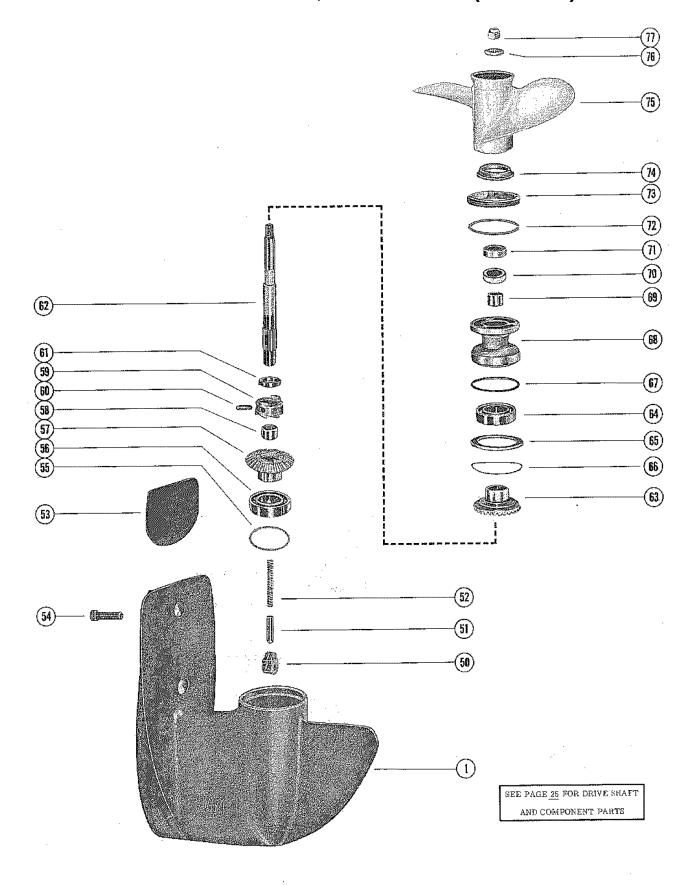

	<u> </u>	1100		O AGGERIDET, COMITEETE (FAGE 2)
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
68	33402A4		1	BEARING CARRIER ASSEMBLY UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	72694A1		1	BEARING CARRIER ASSEMBLY UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
69	31-28157		1	BEARING, ROLLER - BEARING CARRIER
70	26-66303		1	OIL SEAL, BEARING CARRIER (SPRING LOADED)
71	26-26805		1	OIL SEAL, BEARING CARRIER
72	12-33432		1	WASHER, GEAR HOUSING COVER UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
73	33410		1	COVER, GEAR HOUSING UNITED STATES 4351589 AND BELOW AUSTRALIA 8036049 AND BELOW BELGIUM 9104813 AND BELOW CANADA 7067847 AND BELOW
	72710		1	COVER, GEAR HOUSING UNITED STATES 4351590 AND UP AUSTRALIA 8036050 AND UP BELGIUM 9104814 AND UP CANADA 7067848 AND UP
74	23-34237		1	COLLAR, GUIDE - PROPELLER SHAFT PART OF PROPELLER SHAFT ASSEMBLY
75	48-33480A1		1	PROPELLER ASSEMBLY (2 BLADE - ALUMINUM - 11" PITCH) - SHIPPED WITH ENGINE FROM FACTORY.
	48-34402A1		OPT	PROPELLER ASSEMBLY (2 BLADE - BRONZE - 11" PITCH)
	48-33482A1		OPT	PROPELLER ASSEMBLY (3 BLADE - ALUMINUM - 9" PITCH)
	48-37316A1		OPT	PROPELLER ASSEMBLY (3 BLADE - ALUMINUM - 7" PITCH)
	48-65002A1		OPT	PROPELLER ASSEMBLY (2 BLADE - 11" PITCH) - NYLON
-	66607		1	HUB, THRUST (USE WITH NYLON PROP ONLY)
76	23-27024		1	SPACER, SPLINE - PROPELLER SHAFT
77	11-64075		1	NUT, PROPELLER RETAINING


FLYWHEEL, IGNITION COIL, STATOR AND SWITCH BOX(GROUP NO. 15)

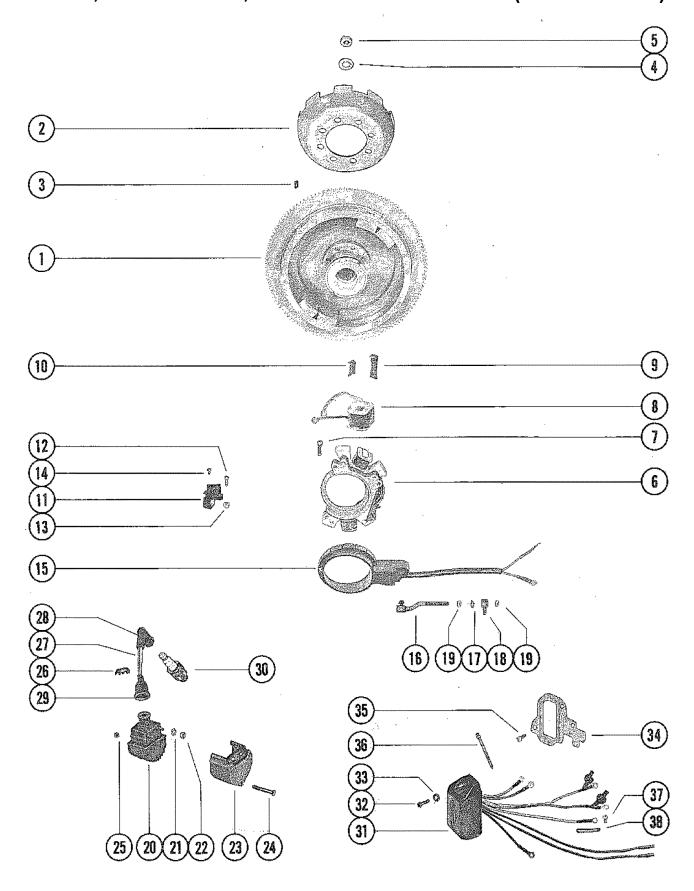

FLYWHEEL, IGNITION COIL, STATOR AND SWITCH BOX(GROUP NO. 15)

REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	244-6193A2	O 1 141.	1	FLYWHEEL ASSEMBLY (MANUAL)
•	244-6118A4		1	FLYWHEEL ASSEMBLY (ELECTRIC)
	244-6118A6		1	FLYWHEEL ASSEMBLY (BELGIUM)
2	50-65721		1	RATCHET ASSEMBLY, FLYWHEEL (MANUAL)
3	28-20094		1	KEY, FLYWHEEL DRIVE
4	12-65891		1	WASHER, FLYWHEEL NUT
5	11-22339		1	NUT, FLYWHEEL
6	3399-5209A3		1	STATOR ASSEMBLY
7	10-66707		3	SCREW, STATOR TO END CAP (7/8")
	10-35400		3	SCREW, STATOR TO END CAP (3/8")
8	339-6119A1		1	COIL ASSEMBLY (5 1/2" AND 6 3/8" LEADS)
	339-6120A1		1	COIL ASSEMBLY (1 3/4" AND 3 1/2" LEADS)
9	54-59538		2	CLIP, COIL RETAINING
10	54-65927		2	CLIP, COIL RETAINING
11	86-74474		1	TERMINAL BLOCK, STATOR
12	10-20646		1	SCREW, TERMINAL BLOCK TO STATOR (5/8")
13	11-46438		1	NUT, TERMINAL BLOCK SCREW
14	10-22654		1	SCREW, LEADS TO TERMINAL BLOCK (3/8")
15	74324A2		1	HOUSING, TRIGGER (Serial No. 4403787 and Up)
16	74454		1	SWIVEL, TRIGGER LINK
17	12-30164		1	WASHER, THROTTLE LINK
18	33973		1	SWIVEL, THROTTLE LINK
19	11-45812		2	NUT, THROTTLE LINK
20	339-5748A2		2	COIL ASSEMBLY, IGNITION (Serial No. 4403787 and Up)
21	13-26996		4	LOCKWASHER, IGNITION COIL TERMINAL
22	11-45076		4	NUT, IGNITION COIL TERMINAL
23	66355		2	COVER, IGNITION COIL
24	10-72073		3	SCREW, COIL COVER TO REAR SUPPORT BRACKET (3 3/4")
25	11-20110		3	NUT, COIL COVER SCREW
26	54676		1	RETAINER, HIGH TENSION LEAD
27	84-63212A2		2	LEAD ASSEMBLY, HIGH TENSION
28	85-71006A1		2	PROTECTOR ASSEMBLY, SPARK PLUG
29	332-2854		2	NIPPLE, IGNITION COIL
30	33-58194		2	SPARK PLUG (ACV#40FFK) BELGIUM AND CANADA USE C-33-75939 SPARK PLUG
31	339-6222A1		1	SWITCH BOX ASSEMBLY
32	10-48409		2	SCREW, SWITCH BOX TO PLATE (5/8")
33	12-56681		2	WASHER, SWITCH BOX SCREW
34	75899		1	PLATE, SWITCH BOX
35	10-69052		3	SCREW, SWITCH BOX PLATE ATTACHING (1/2")
36	61990		3	STA-STRAP
37	10-45218		1	SCREW, SWITCH BOX LEADS (3/8")
38	579082		2	SLEEVE, SWITCH BOX LEADS


ELECTRIC COMPONENTS

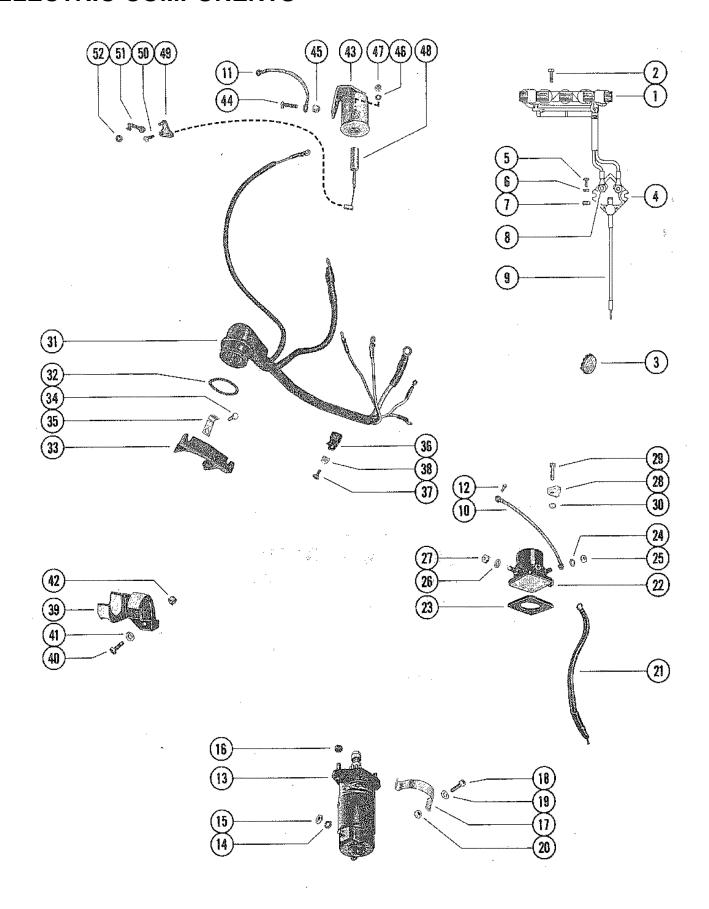

ELECTRIC COMPONENTS


		ı	I	LLLCTRIC COMPONENTS
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	74367A3		1	LIGHTING STATOR ASSEMBLY
2	10-30173		2	SCREW, LIGHTING STATOR ATTACHING (1 5/8")
	10-66707		3	SCREW, LIGHTING STATOR ATTACHING (7/8")
3	19-75045		1	PLUG, BOTTOM COWL
4	62351A2		1	RECTIFIER ASSEMBLY
5	10-25764		2	SCREW, RECTIFIER TO REAR BRACKET (1/2")
6	23-62769		2	SPACER, RECTIFIER SCREW
7	11-27164		2	NUT, RECTIFIER SCREW
8	11-45076		3	NUT, RECTIFIER TERMINALS
9	84-61393A7		1	WIRE ASSEMBLY, RECTIFIER TO STARTER SOLENOID (RED)
10	84-60466A16		1	WIRE ASSEMBLY, STARTER SOLENOID TO GROUND (BLACK)
11	84-60871A14		1	WIRE ASSEMBLY, CHOKE SOLENOID TO SWITCH BOX PLATE (BLACK0
12	10-30663		1	SCREW, WIRE TO SWITCH BOX PLATE (3/8")
13	50-47216		1	STARTER MOTOR SEE PAGE 26E, SECTION "E", FOR BREAKDOWN OF STARTER MOTOR
14	13-26992		1	LOCKWASHER, STARTER MOTOR TERMINAL
15	11-20088		1	NUT, STARTER MOTOR TERMINAL (1/4 - 28)
16	11-20361		2	NUT, STARTER MOTOR STUDS (1/4 - 28)
17	54-47993		1	CLAMP, STARTER MOTOR FASTENING
18	10-22483		1	SCREW, STARTER MOTOR CLAMP TO CYLINDER BLOCK (1 1/8")
19	12-46897		1	WASHER, STARTER MOTOR CLAMP SCREW
20	11-20361		1	NUT, STARTER MOTOR CLAMP SCREW (1/4 - 28)
21	84-65063		1	CABLE, JUMPER - STARTER MOTOR TO STARTER SOLENOID
22	47886		1	SOLENOID, STARTER
23	27-47829		1	GASKET, STARTER SOLENOID
24	13-26996		1	LOCKWASHER, STARTER SOLENOID TERMINAL (#10)
25	11-20645		2	NUT, STARTER SOLENOID TERMINAL (10-32)
26	13-20202		2	LOCKWASHER, STARTER SOLENOID TERMINAL (5/16")
27	11-20083		2	NUT, STARTER SOLENOID TERMINAL (5/16 - 24)
28	54-47830		2	CLAMP, NYLON - STARTER SOLENOID FASTENING
29	10-45862		2	SCREW, STARTER SOLENOID CLAMP TO CRANKCASE (7/8")
30	11-46438		2	NUT, STARTER SOLENOID CLAMP SCREW
31	84-74904		1	WIRING HARNESS, INTERNAL
32	24-28975		1	SPRING, GARTER - INTERNAL WIRING HARNESS
33	54-76368		1	CLAMP, INTERNAL WIRING HARNESS TO BOTTOM COWL
34	10-61802		2	SCREW, LEAD WIRE AND HARNESS CLAMP TO BOTTOM COWL (7/8")
35	54-33361		2	CLAMP, LEAD WIRE FASTENING TO HARNESS CLAMP
36	54-23567		1	CLAMP, WIRING HARNESS TO CRANKCASE FLANGE
37	10-31206		1	SCREW, WIRING HARNESS CLAMP FASTENING (7/16")
38	22789		1	"D" WASHER, WIRING HARNESS CLAMP
39	47951		1	BRACKET, SUPPORT - EXTERNAL WIRING HARNESS

ELECTRIC COMPONENTS

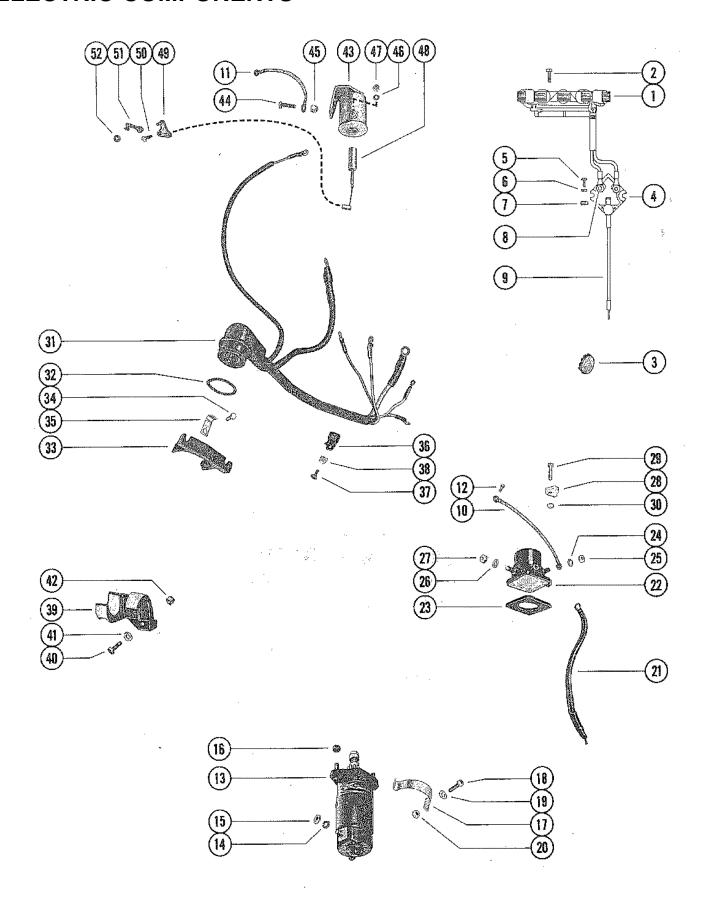

ELECTRIC COMPONENTS

REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
		STIVI.	4	
40	10-36137		1	SCREW, WIRING HARNESS SUPPORT TO BOTTOM COWL (1")
41	12-24664		1	WASHER, WIRING HARNESS SUPPORT SCREW
42	11-46887		1	NUT, WIRING HARNESS SUPPORT SCREW
43	54292A4		1	CHOKE SOLENOID
44	10-22956		1	SCREW, CHOKE SOLENOID TO FRONT COWL SUPPORT BRACKET (7/8")
45	11-46887		1	NUT, CHOKE SOLENOID SCREW
46	13-26996		1	LOCKWASHER, CHOKE SOLENOID TERMINAL
47	11-20645		1	NUT, CHOKE SOLENOID TERMINAL
48	56074A4		1	PLUNGER ASSEMBLY, CHOKE SOLENOID
49	65108		1	LEVER, CHOKE
50	10-65109		1	SCREW, CHOKE LEVER TO CARBURETOR
51	65107		1	LINK, CHOKE
52	11-65110		1	NUT, LINK TO CHOKE LEVER

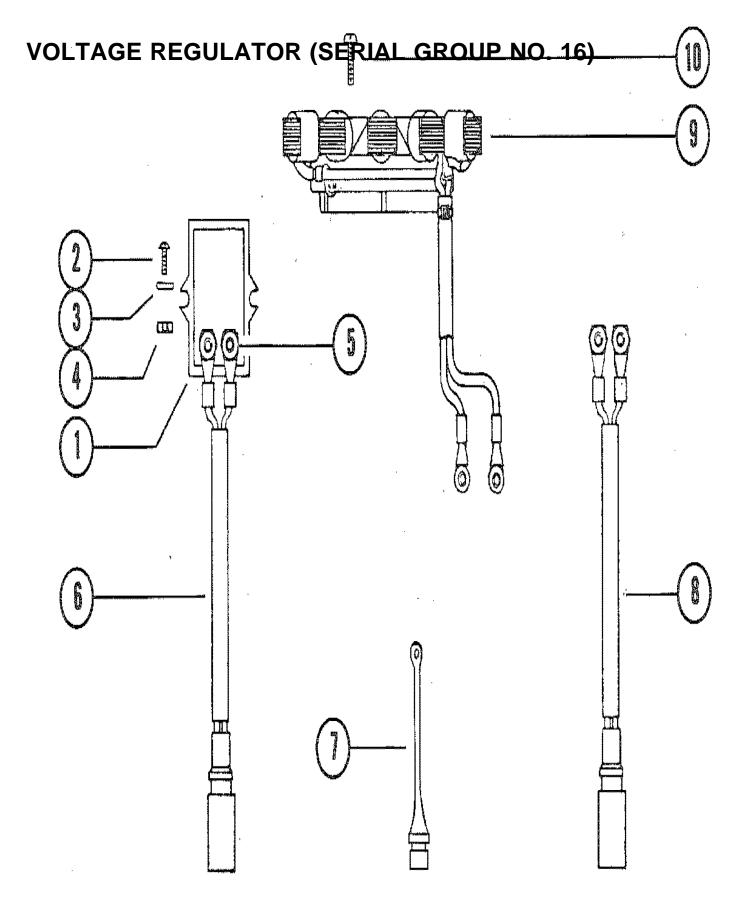

VOLTAGE REGULATOR (SERIAL GROUP NO. 16)

REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION			
1	75076		1	VOLTAGE REGULATOR			
2	10-58185		2	SCREW, VOLTAGE REGULATOR TO REAR BRACKET (1")			
3	23-62769		2	SPACER, VOLTAGE REGULATOR SCREW			
4	11-27164		2	NUT, VOLTAGE REGULATOR SCREW			
5	11-45076		3	NUT, VOLTAGE REGULATOR TERMINALS			
6	84-74899		1	HARNESS, VOLTAGE REGULATOR (YELLOW/RED)			
7	71663		1	PLUG, HARNESS			
8	84-65017A2		1	HARNESS ASSEMBLY, LIGHTING (EXTERNAL)			
9	74367A3		1	LIGHTING STATOR ASSEMBLY			
10	10-30173		2	SCREW, LIGHTING STATOR ATTACHING (1 5/8")			
	10-66707		3	SCREW, LIGHTING STATOR ATTACHING (7/8")			

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
20155	RETAINER STARTER SPRING	5	14	39601 39606	PLATE, DETENT SPRING BLANKET,WRAP AROUND	25	12
20162 20164	PAWL,STARTER PLATE,RETAINER-STARTER	5	18	39622	COWL (EARLY MODELS) . SEAL, MOUNTING PLATE TO	3	9
20203	PAWLDISC, FRICTION - CLAMP	7	23	39624	BOTTOM COWL PLATE, FACE - WATER	47	7
20200	PLATE AND SWIVEL BRACKET	53	27		PUMP BASE TO WATER PUMP BODY	63	34
22477A4 22789	THUMB SCREW ASSEMBLY	51	2	39628	BUTTON,FRONT COVER RELEASE-TOP COWL		12
	"D" WASHER, WIRING HARNESS CLAMP	71	38	39630	CUSHION, RUBBER - BOTTOM COWL	47	15
22833	ADAPTOR,CHECK UNIT (FUEL LINE)	21	5	39778	BOOT, FUEL ADAPTOR - BOTTOM COWL	47	17
23069	STEM,CHECK UNIT ADAPTOR	21	6	39780	BOOT, SHIFT CABLE -		
25150	MOUNT, RUBBER - UPPER (LONG SHAFT)	59	19	39936	BOTTOM COWLBLANKET,SOUND	47	18
26092	ROD, REVERSE LOCK LEVER	55	33		ABSORBING-FRONT COVER	3	24
26179	RETAINER,STARTER SHEAVE TO PLATE	5	20	45010	RETAINER, WATER PUMP BODY SEAL	63	43
28281	MOUNT, RUBBER - LOWER			45481	SHAFT,SHEAVE	7	25
	(LONG SHAFT)	59	21	45915	TERMINAL BLOCK	13	45
28748	RETAINER, STARTER CABLE	_		46266A2	COVER PLATE ASSEMBLY, BOTTOM COWL	47	12
22252	AND HANDLE	7	39	46387	LEVER,THROTTLE	19	41
29359	LUBRICAN, GREASE	5 0	04	46405	LINK, THROTTLE CLUSTER	31	23
30188	FITTING		21 9	46413	THROTTLE LEVER,		
30413	HOOK, COWL LATCH	21	9		VERTICAL SHAFT	29	11
30413	FASTENING	3	11	46785A1	,COWL LATCH ASSEMBLY .	3	10
30685	TILT TUBE, CLAMP BRACKET	51	4	46837	STOP, OVER-SPEED LIMITER	27	26
30782	HANDLE,STARTER CABLE .	-	38	47430	BUMPER,RUBBER-STARTER HOUSING	_	6
33402A4	BEARING CARRIER			47604A1	PROTECTOR	5	U
	ASSEMBLY		68		ASSEMBLY,SPARK PLUG	11	34
33410	COVER, GEAR HOUSING		73	47820A1	PLATE ASSEMBLY, ANODIC		
33423	CO-PILOT DISC	53	16		- GEAR HOUSING	65	53
33438	FOLLOWER, CAM	65	51	47886	SOLENOID, STARTER	71	22
33513	RETAINER, WATER INLET TUBE SEAL	47	4	47951	BRACKET, SUPPORT -		
33973	SWIVEL, THROTTLE LINK	11	24		EXTERNAL WIRING HARNESS	71	20
33973	SWIVEL, THROTTLE LINK	69	18	48003	PIVOT, STEERING HANDLE	7 1	39
33975	MOUNT, RUBBER - UPPER			40003	TO BRACKET	45	9
	(SHORT SHAFT)	59	19	48472	COVER, HARNESS HOLE	47	10
33976	MOUNT, RUBBER - LOWER		0.4	48662	HOUSING, THROTTLE		
37602	(SHORT SHAFT) BUTTON,SHOKE=	59 21	21 13	40754	CONTROL	29	2
38950A1	COVER ASSEMBLY, STOP	۷1	13	48754	INSERT, WATER PUMP BODY	63	39
00000711	SWITCH	49	27	48755A1	FLUSHING ASSEMBLY	1	-
39058	SEAL, SHIFT HANDLE - BOTTOM COWL	47	19	52889	NOZZLE, TELL TALE HOSE TO BOTTOM COWL	47	22
39301	COVER, TIME - DRIVE			53040	COVER, LOWER MOUNT	59	23
	SHAFT HOUSING	57	8	53111	RETAINER, PULLEY SCREW	5	9
39308	PLATE, BAFFLE - EXHAUST MANIFOLD	37	39	54292A4 54676	CHOKE SOLENOID RETAINER, HIGH TENSION	73	43
39353	SEAL, RUBBER - TRIM	57	10		LEAD	69	26
39400	COVER	3	6	54676	LEAD	11	32
39492	PLATE, IDLE RELIEF	57	12	55860	PULLEY,STARTER CABLE .	5	7

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
56074A4	PLUNGER ASSEMBLY, CHOKE SOLENOID	73	48	62251 62351A2	CAP, HANDLE THROTTLE RECTIFIER ASSEMBLY		2 4
56829A1	SHAFT ASSEMBLY, SHIFT - LOWER (SHORT SHAFT) .	63	16	63310A1	LEVER ASSEMBLY, TILT STOP	53	28
56830A1	SHAFT ASSEMBLY, SHIFT -			63673	LEVER, SHIFT CONTROL	25	4
57031A2	LOWER (LONG SHAFT) HOUSING	63	16	63906 63980	CABLE,CHOKE	21 21	15 13
57576	ASSEMBLY,STARTER COVER, EXHAUST	5	1	63992A1 64076	CARRIER ASSEMBLY BUMPER, RUBBER -	41	2
	MANIFOLD	37	41		SADDLE	57	17
579082	SLEEVE, SWITCH BOX LEADS	69	38	64120	SHAFT, SHIFT (HORIZONTAL)	25	5
57927	MOUNT,RUBBER-FRONT MOUNTING BRACKET TO			64122	BRACKET, MOUNTING - SHIFT SHAFT	25	2
57927	CRANKCASE MOUNT,RUBBER-REAR	7	35	64194A1	COVER ASSEMBLY,STRAINER	17	20
	MOUNTING BRACKET TO CYLINDER BLOCK		28	64631	(INLET) LEVER, STATOR PLATE		30
58975 58978A2	CAM, SHIFT	65	50	64638A1	CONTROL STATOR ASSEMBLY		16 12
	MOUNTING	47	1	64674	BRACKET, MOUNTING-TOP		
58979	FOLLOWER, NEUTRAL SPEED LIMITER	27	20	64677	COWL (FRONT) VENTURI	7 17	33 21
59065A4 59071	STOP SWITCH ASSEMBLY . COVER INLET		24 33	64887	BRACKET,MOUNTING-TOP	7	26
59107	HANDLE, NYLONG - SHIFT	17	33	64989	COWL (REAR) SEAL, CARRIER ASSEMBLY	7 41	3
50700	CONTROL	25	1	65107	LINK, CHOKE	73 72	51
59783	LINK,THROTTLE-STATOR ASSEMBLY	11	22	65108 65216	LEVER, CHOKE	73 59	49 27
60850 60850A4	ARM, STEERING HANDLE STEERING HANDLE	45	6	65418A1	HANDLE ASSEMBLY, THROTTLE SHAFT	45	4
60650A4	ASSEMBLY, COMPLETE .	45	-	65552	SCREEN,CARBURETOR		4 11
60850A6	STEERING HANDLE ASSEMBLY, COMPLETE .	15	_	65869A1 65890	SHAFT ASSEMBLY, SHEAVE RETAINER, STARTER	7	25
60851	SHAFT, THROTTLE		3	00000	SPRING		14
60854	GRIP, HANDLE - THROTTLE	45	1	66355	COVER, IGNITION COIL		23
60857A2	UNIVERSAL JOINT ASSEMBLY	45	12	66355 66361	COVER, IGNITION COIL LEVER, SHIFT CONTROL	11 25	29 4
60864	LEVER, STATOR PLATE - VERTICAL SHAFT	29	15	66376	HANDLE, NYLON - SHIFT CONTROL	25	1
60865	CATCH,FRONT COVER-TOP			66379	SHAFT, SHIFT		
60866	COWL	3	15	66393	(HORIZONTAL) SHAFT, THROTTLE	25 45	5 3
	LATCH	3	21	66394A1	HANDLE ASSEMBLY,		
60867A1	BASE ASSEMBLY,FRONT COVER LATCH	3	18	66412	THROTTLE SHAFT BRACKET, MOUNTING -	45	4
60886	BOOT, THROTTLE CABLE - BOTTOM COWL	47	16	66416A2	SHIFT SHAFTPLATE ASSEMBLY,	25	2
61006	LINK ROD, REVERSE LOCK	59	25	00110/12	MOUNTING	47	1
61007	RETAINER, ROD - REVERSE			66557	SWIVEL PIN	53	15
61008	LOCK RETAINER, REVERSE LOCK	55	36	66607	HUB, THRUST (USE WITH NYLON PROP ONLY)	67	
6100011	CAM	59	28	68766A2	BRACKET, STEERING ARM	45 51	15 2
61009A1	SHIFT CONTROL SHAFT ASSEMBLY, VERTICAL	27	17	69157A3 69692	THUMB SCREW ASSEMBLY VENTURI	51 17	2 21
61012	LEVER, REVERSE LOCK	55	32	70241	STOP, REVERSE LOCK	55	37
61990	STA-STRAP	69	36	70317	COVER, LOWER MOUNT	59	23
61990	STA-STRAP,SWITCH BOX LEADS	13	44	71018	TILT TUBE, CLAMP BRACKET	51	4
62054	PLATE, CLAMP - CO-PILOT .	53	24	71127	COVER, TRANSFER PORT .	-	30

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
71525	SLEEVE, THRUST - REVERSE GEAR	65	65	10-22483	SCREW, STARTER MOTOR CLAMP TO CYLINDER		
71663	PLUG, HARNESS	75	7		BLOCK (1 1/8")	71	18
72007	RETAINER, REVERSE LOCK			10-22654	SCREW, LEADS TO		
	CAM	59	28		TERMINAL BLOCK (3/8") .	69	14
72465	CABLE,CHOKE	21	15	10-22659	SCREW, STARTER		
72694A1	BEARING CARRIER				HOUSING TO	00	47
	ASSEMBLY	67	68	40.00050	CRANKCASE (1 5/8")	29	17
72710	COVER, GEAR HOUSING	67	73	10-22659	SCREW,STARTER HOUSING	_	4
72857	STOP, OVER-SPEED	07	00	10-22956	TO CRANKCASE (1 5/8") . SCREW, CHOKE SOLENOID	5	4
70040	LIMITER	27	26	10-22930	TO FRONT COWL		
72946	HANDLE, NYLON - SHIFT	O.F.	4		SUPPORT BRACKET (7/8")	73	44
73014A1	CONTROLPLATE ASSEMBLY, CO-	25	1	10-22960	SCREW, VERTICAL SHAFT	, 0	• •
73014A1	PILOT	53	24		THROTTLE LEVER (1 3/8")	29	12
73458	COVER, EXHAUST	55	24	10-23035	SCREW,CHOKE SHUTTER		
70-00	MANIFOLD	37	41		TO CHOKE SHAFT	17	20
73537	INSERT,ROPE GUIDE-TOP	0,	• • •	10-24644	SCREW, COVER TO		
	COWL	3	2		CYLINDER BLOCK (1 3/8")	37	35
74159A3	THUMB SCREW ASSEMBLY	51	2	10-24644	SCREW, FOLLOWER TO		
74324A2	HOUSING, TRIGGER	69	15		POWERHEAD MOUNTING		
74325	BRACKET, MOUNTING-TOP			10.01010	PLATE (1 3/8")	27	21
	COWL (REAR)	7	26	10-24646	SCREW, TRANSFER PORT		
74367A3	LIGHTING STATOR				COVER TO CYLINDER	27	20
	ASSEMBLY	71	1	10-24786	BLOCK (5/8") SCREW, CRANKCASE TOP	37	32
74367A3	LIGHTING STATOR			10-24760	TO CYLINDER BLOCK		
	ASSEMBLY		9		(5/8")	33	7
74454	SWIVEL, TRIGGER LINK		16	10-25764	SCREW, RECTIFIER TO	55	,
74800	LEVER, SHIFT CONTROL	25	4		REAR BRACKET (1/2")	71	5
75076	VOLTAGE REGULATOR	75	1	10-25822	SCREW, STAINER COVER		
75899	PLATE, SWITCH BOX	69	34		TO BODY	17	35
76357	HOUSING, THROTTLE	20	2	10-25876	SCREW, THROTTLE		
76536	CONTROLLINK ROD, REVERSE LOCK	29 59	2 25		CLUSTER LINK (7/8")	31	24
10-20100	SCREW, PLATE AND	59	23	10-26065	SCREW, CRANKCASE TO		
10-20100	SPRING TO MOUNTING				CYLINDER BLOCK (1"0)	35	19
	BRACKET (1/2")	27	13	10-26066	SCREW, CRANKCASE TO	0.5	4.0
10-20540	SCREW, RETAINER TO		10	40.00000	CYLINDER BLOCK (1 1/4")	35	18
.0 200 .0	MOUNTING PLATE (5/8") .	47	5	10-26066	SCREW, CRANKCASE TO CYLINDER BLOCK (1 1/4")	25	10
10-20646	SCREW, TERMINAL BLOCK			10-26132	SCREW, CO-PILOT DISC TO	35	18
	TO STATOR (5/8")	69	12	10-20132	SADDLE (2 1/2")	53	17
10-20653	SCREW, THROTTLE			10-26132	SCREW, CRANKCASE TO	00	.,
	CONTROL HOUSING			.0 _0.0_	CYLINDER BLOCK (2 1/2")	35	20
	FASTENING (1") - LOWER			10-26132	SCREW, STEERING ARM		
		29	4		BRACKET TO SADDLE (2		
10-20653	SCREW, STARTER HOUSING				1/2")	45	18
	TO CRANKCASE (1 3/8") .	5	4	10-26801	SCREW, LOCK - CENTER		
10-20784	SCREW,SWITCH BOX				MAIN BEARING (5/8")	35	22
40.00047	CYLINDER BLOCK (1 1/2')	11	38	10-28634	SCREW, GREASE FILLER		
10-20847	SCRWE,THROTTLE LEVER	40	40		(1/4")	61	10
10 21001	ATTACHING	19	42	10-28638	SCREW, LOWER MOUNT		0.4
10-21091	SCREW, COVER TO CYLINDER BLOCK (1 1/8")	37	36	10 20652	COVER FASTENING (3/4")	59	24
10-21091	SCREW, THROTTLE	31	30	10-28653	SCREW, GREASE VENT	63	11
10-21031	CONTROL HOUSING			10-28782	(1/4") SCREW, MANIFOLD COVER	63	14
	FASTENING (1 1/8") -			10 20102	TO CYLINDER BLOCK		
	UPPER	29	6		(7/8")	39	42
10-21449	SCREW, CRANKCASE TO	_5	•	10-30173	SCREW, LIGHTING STATOR		
	CYLINDER BLOCK (2")	35	19		ATTACHING (1 5/8")	71	2
	, ,				• •		

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
10-30173	SCREW, LIGHTING STATOR ATTACHING (1 5/8")	75	10	10-45862	SCREW, STARTER SOLENOID CLAMP TO		
10-30663	SCREW, COVER PLATE TO BOTTOM COWL (3/8")	47	14	10-46467	CRANKCASE (7/8") SCREW,RATCHET TO		29
10-30663	SCREW, SPRING TO LIMITER FOLLOWER (3/8")	27	25	10-46898	FLYWHEEL (1/2") SCREW, LIMITER STOP TO	9	4
10-30663	SCREW, WIRE TO SWITCH BOX PLATE (3/8")	71	12	10-47819	FOLLOWER (7/16") SCREW, ANODIC PLATE TO	27	28
10-30663	SCREW,GROUND WIRE TO CYLINDER BLOCK (3/8") .		31	10-48408	GEAR HOUSING (1 1/4") . SCREW, TELL TALE NOZZLE	65	54
10-30663	SCREW,LEADS TO TERMINAL BLOCK		43	10-48409	TO BOTTOM COWL (1/2") SCREW, SWITCH BOX TO	47	23
10-31206	SCREW, WIRING HARNESS CLAMP FASTENING	•	.0	10-48409	PLATE (5/8") SCREW,LATCH BASE TO	69	32
10-34222	(7/16")SCREW,TERMINAL BLOCK	71	37	10-48409	FRONT COVER (5/8") SCREW,TERMINAL BLOCK	3	19
10-34222	TO FRONT SUPPORT	44	40		TO STATOR ASSEMBLY (5/8")	9	18
10-35385	BRACKET (1/2") SCREW, CRANKCASE TO	11	42	10-48591	SCREW,GROUND WIRE TO SWITCH BOX (1/2")	11	40
10-35400	CYLINDER BLOCK (1 3/4") SCREW, STATOR TO END	35	19	10-48637	SCREW,STATOR TO UPPER END CAP (1 1/8")		13
10-35519	CAP (3/8")	69	7	10-49668	SCREW, TRANSFER PORT COVER TO CYLINDER		15
10-35519	HOUSING (1/2") SCREW,GROUND WIRE TO		13	10-49908	BLOCK (3/4") SCREW, PINION GEAR TO DRIVE SHAFT SCREW	37	32
10-35563	CYLINDER BLOCK SCREW,RATCHET TO		32	10-53481	(3/4")	61	8
10-36137	FLYWHEEL (9/16")	9	3	10-56396	MOUNTING (9/16") SCREW, SEAL RETAINER	41	11
10-36137	COWL (1")SCREW,STARTER HOUSING	73	40		TO WATER PUMP BODY (1 1/8")	63	44
10-36398	TO CRANKCASE (1") SCREW, DWIVEL BRACKET	5 53	4 23	10-57807	SCREW, COVER TO BOTTOM COWL (3/4")	57	9
10-3737	SCREW,REAR SHIELD TO		_	10-58185	SCREW, VOLTAGE REGULATOR TO REAR		
10-37562	TOP COWL (5/8) SCREW,FRONT MOUNTING BRACKET TO BOTTOM	3	7	10-61802	BRACKET (1") SCREW, COVER TO		2
10-37562	COWL (1")SCREW,REAR MOUNTING	7	34	10-61802	BOTTOM COWL (7/8") SCREW, LEAD WIRE AND HARNESS CLAMP TO	47	11
	BRACKET TO BOTTOM COWL (1")	7	27	10-62055	BOTTOM COWL (7/8") SCREW, PLATE TO SWIVEL	71	34
10-37562	SCREW,STARTER HOUSING TO CYLINDER BLOCK (1")	5	2	10-62233	BRACKET (1 1/4") SCREW, DETENT SPRING	53	25
10-37655	SCREW,GROUND WIRE TO SWITCH BOX (1/2")	11	40	.0 02200	TO STEERING ARM BRACKET (5/8")	45	16
10-37892	SCREW,PULLEY TO STARTER HOUSING (1") .	5	8	10-62568	SCREW, COVER PLATE TO BOTTOM COWL (3/8")	47	14
10-37923	SCREW,ADAPTOR TO BOTTOM COWL (11/4")		10	10-62568	SCREW,LEADS TO TERMINAL BLOCK (3/8") .		43
10-37978	SCREW,FRONT COVER LATCH TO TOP COWL			10-63311	SCREW, RETAINING - LEVER TO SWIVEL		
10-39149	(3/4") SCREW, SHIFT SHAFT	3	16	10-64074	BRACKETSCREW, STEERING HANDLE	53	29
10-45218	BUSHING RETAINER (1/2") SCREW, SWITCH BOX	63	22	10-64843	TO ARM BRACKET (5/8") . SCREW,SWITCH BOX	45	11
10-45379	LEADS (3/8") SCREW, CONNECTING ROD	69 43	37 2		LEADS TO TERMINAL BLOCK (7/16")	9	16

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
10-65109	SCREW, CHOKE LEVER TO CARBURETOR	73	50	10-76630	SCREW, COVER TO CYLINDER BLOCK (1")	37	36
10-65414	SCREW, CAM RETAINER TO DRIVE SHAFT HOUSING			11-20061	NUT, CONNECTING ROD SCREW	43	4
10-66707	(3/4")	59	26	11-20083	NUT, STARTER SOLENOID TERMINAL (5/16 - 24)		27
10-66707	ATTACHING (7/8") SCREW, LIGHTING STATOR	71	2	11-20083	NUT,CARBURETOR ATTACHING		19
10-66707	ATTACHING (7/8") SCREW, STATOR TO END	75	10	11-20088	NUT, STARTER MOTOR		15
10-67450	CAP (7/8")	69	7	11-20110	TERMINAL (1/4 - 28) NUT, COIL COVER SCREW .	71 69	25
	CYLINDER BLOCK (2 1/4")	35	20	11-20110	NUT, REED STOP MOUNTING SCREW	41	12
10-67979	BOLT, CLAMP BRACKET TO TRANSOM (2 3/4")	51	7	11-20110 11-20110	NUT,PULLEY SCREW NUT,SOIL COVER SCREW .		11 31
10-69013	SCREW, COVER TO BOTTOM COWL (7/8")	57	9	11-20166	NUT,SHEAVE SHAFT (LEFT HAND THREAD)	5	13
10-69013	SCREW,LEAD TO BLOCK (7/8")	13	46	11-20361	NUT, STARTER HOUSING TO CRANKCASE SCREW	31	20
10-69020	SCREW,CHOKE CABLE TO CARBURETOR	21	16	11-20361	NUT, STARTER MOTOR CLAMP SCREW (1/4 - 28)	71	20
10-69021	SCREW, PLATE TO SWIVEL BRACKET (1 1/4")	53	25	11-20361	NUT, STARTER MOTOR STUDS (1/4 - 28)		16
10-69022	SCREW,SCREEN TO CARBURETOR	21	12	11-20361	NUT,RUBBER MOUNT TO BRACKET AND	, ,	10
10-69052	SCREW, SWITCH BOX PLATE ATTACHING (1/2")	69	35	44 20204	CRANKCASE	7	36
10-71056	SCREW, REVERSE STOP TO SWIVEL BRACKET	55	38	11-20361	NUT,RUBBER MOUNT TO BRACKET AND CYLINDER	_	
10-72073	SCREW, COIL COVER TO REAR SUPPORT			11-20586	BLOCK NUT, SHAFT AND GEAR		29 22
10-72073	BRACKET (3 3/4") SCREW,COIL COVER TO	69	24	11-20645	NUT, CHOKE SOLENOID TERMINAL	73	47
10 12010	REAR SUPPORT BRACKET(3 3/4")	11	30	11-20645	NUT, GROUND LEAD TO STOP SWITCH	49	30
10-72167	SCREW,SWITCH BOX TO			11-20645	NUT, JAM - THROTTLE CLUSTER LINK SCREW .	31	25
10-72169	CYLINDER BLOCK (1 1/2") SCREW,TERMINAL BLOCK TO FRONT SUPPORT	11	38	11-20645	NUT, STARTER SOLENOID TERMINAL (10-32)	71	25
10-72754	(1/2") SCREW, STARTER	11	42	11-21971	NUT, CONNECTOR BASE TO BOTTOM COWL	49	32
10-72754	HOUSING TO	24	47	11-22339 11-22339	NUT, FLYWHEEL NUT,FLYWHEEL	69 9	5 8
10-72754	CRANKCASE (1 5/8") SCREW, STARTER HOUSING	31	17	11-25168	NUT, VERTICAL SHAFT THROTTLE SCREW		13
10-72755	TO CRANKCASE (1 5/8") . SCREW, VERTICAL SHAFT	5	4	11-27164 11-27164	NUT, RECTIFIER SCREW NUT, VOLTAGE	71	7
10-73456	THROTTLE ELVER (1 3/8") SCREW, CRANKCASE TOP	29	12	11-27104	REGULATOR SCREW NUT, CLAMP BRACKET	75	4
	TO CYLINDER BLOCK (5/8")	33	7	11-20110	STUD	53	14
10-74824	SCREW, CRANKCASE TO CYLINDER BLOCK (1 1/8")	35	18	11-29250 11-30499	NUT, POWERHEAD STUDS . NUT, TILT TUBE FASTENING	57 51	16 6
10-75700	SCREW, CRANKCASE TO CYLINDER BLOCK (2 1/8")	35	19	11-34863	NUT, GEAR HOUSING TO DRIVE SHAFT HOUSING		
10-76213	SCREW, THROTTLE CONTROL HOUSING	20	. •	11-35045	STUD	57	6
	FASTENING (1 1/8") - LOWER A	29	4&6	11-35814	SCREW	55	31
10-76596	SCREW, COVER TO CYLINDER BLOCK (1 1/4")	37	35	11-35814	HOUSING STUD NUT,TOP COWL STUD		5 5
	(,				,	-	-

Part Number	Description	Pg.	Ref. No.	Part Number	Description	Pg.	Ref. No.
11-35888	NUT, STARTER HOUSING			11-67980	NUT, CLAMP BRACKET		
44.05000	TO CRANKCASE SCREW	31	20	44.00044	SCREW	51	9
11-35888	NUT, STARTER HOUSING TO	_	_	11-69844	NUT, STOP SWITCH	49	35
	CRANKCASE SCREW	5	5	11-71019	NUT, TILT TUBE FASTENING	51	6
11-39305	NUT, SHIFT CONTROL	0.5		11-73710	NUT,CHOKE CABLE TO		
44 45070	HANDLE TO SHIFT SHAFT	25	8	10.00011	BOTTOM COWL	21	14
11-45076	NUT, IGNITION COIL			12-20214	WASHER, THUMB SCREW .	51	3
44 45050	TERMINAL	69	22	12-20214	WASHER, THUMB SCREW .	51	3
11-45076	NUT, RECTIFIER	7.1	•	12-20260	WASHER, GREASE FILLER	00	
44 45070	TERMINALS	71	8	40.00000	SCREW	63	11
11-45076	NUT, VOLTAGE	7.5	_	12-20262	WASHER, GREASE VENT	00	45
44 45070	REGULATOR TERMINALS	75	5	40.00004	SCREW	63	15
11-45076	NUT,IGNITION COIL	4.4	00	12-20684	RING, RUBBER -		
44 45070	TERMINAL	11	28		CENTRIFUGAL SLINGER	00	40
11-45076	NUT, SWITCH BOX LEADS			40.04004	(DRIVE SHAFT)	63	48
	TO TERMINAL BLOCK	^	47	12-24664	WASHER, SHAFT AND GEAR	31	21
44 45500	SCREW	9	17	12-24664	WASHER, WIRING HARNESS	70	4.4
11-45592	NUT, WATER PUMP STUDS	63	47	40.04070	SUPPORT SCREW	73	41
11-45774	NUT, CENTER MAIN			12-24676	WASHER, LIMITER STOP	07	07
	BEARING CLAMPING	44	0	40.00044	SCREW	27	27
44 45040	SCREW	41	8	12-26014	WASHER,LATCH BASE	2	20
11-45812	NUT, THROTTLE LINK		19	40.00045	SCREW	3	20
11-45812	NUT, THROTTLE LINK	11	25	12-29245	WASHER, SHIFT CONTROL	25	7
11-46438	NUT, STARTER SOLENOID	71	20	10 20245	HANDLE	25	7 15
11-46438	CLAMP SCREW	71	30	12-29245 12-29245	WASHER FRONT COVER	27	15
11-40430	NUT, TERMINAL BLOCK SCREW	60	13	12-29240	WASHER,FRONT COVER RELEASE BUTTON	3	14
11 46702		69	13	12 20164			
11-46793	NUT, CO-PILOT DISC TO SADDLE SCREW	5 2	10	12-30164	WASHER, THROTTLE LINK .	69	17 23
11 46702			18	12-30164	WASHER, THROTTLE LINK .	11	23
11-46793 11-46793	NUT, CRANKCASE SCREW . NUT, CRANKCASE STUD		21 13	12-33432	WASHER, GEAR HOUSING COVER	67	72
11-46793	NUT, POWERHEAD STUDS .		16	12-33434	WASHER, THRUST -	67	12
11-46793	NUT, STEERING ARM	37	10	12-33434	REVERSE GEAR	65	65
11-40793	BRACKET FASTENING			12-35559	WASHER,STARTER SHEAVE	05	03
	SCREW	45	19	12-00000	RETAINER	7	21
11-46887	NUT, CHOKE SOLENOID	70	13	12-36001	WASHER, WATER PUMP	'	21
11 40007	SCREW	73	45	12 00001	STUDS	63	46
11-46887	NUT, CYLINDER BLOCK	70	40	12-36281	WHEEL NUT	9	7
11 40007	COVER SCREW	37	37	12-36555	WASHER, NYLON - WATER	3	,
11-46887	NUT, LIMITER FOLLOWER	0,	01	12 00000	INLET TUBE	47	2
11 10001	SCREW	27	23	12-36555	WASHER, NYLON - WATER	••	_
11-46887	NUT, MOUNTING BRACKET			00000	PUMP BODY	63	41
	SCREW	25	10	12-46897	WASHER, STARTER MOTOR		
11-46887	NUT, THROTTLE CONTROL				CLAMP SCREW	71	19
	HOUSING SCREW	29	5	12-47275	WASHER, NEEDLE BEARING		
11-46887	NUT, THROTTLE CONTROL				RETAINING	43	5
	HOUSING SCREW	29	7	12-48679	WASHER, THROTTLE SHAFT		Ū
11-46887	NUT, WIRING HARNESS	-			AND GEAR	29	9
	SUPPORT SCREW	73	42	12-49221	WASHER, NEOPRENE -		
11-46887	NUT, STARTER HOUSING TO				GEAR HOUSING		
	CRANKCASE SCREW	5	5		FLUSHING PLUG	63	13
11-60049	NUT, POWERHEAD STUDS .		16	12-52864	SHIM, CLAMP BRACKET		
11-63912	NUT, CHOKE CABLE TO				TILT TUBE	51	5
	BOTTOM COWL	21	14	12-56681	WASHER, SWITCH BOX	•	-
11-64075	NUT, PROPELLER			- -	SCREW	69	33
	RETAINING	67	77	12-56681	WASHER, CHOKE CABLE	-	
11-64484	NUT, VERTICAL SHAFT				SCREW	23	17
	THROTTLE ELVER			12-56720	WASHER, CLAMP PLATE		
	SCREW	29	13		SCREW	53	26

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
12-59061 12-62252	WASHER, STOP SWITCH WASHER, THROTTLE	49	28	14-75670	TAB WASHER, CRANKCASE TOP SCREW	33	8
12-65891	HANDLE TO STEERING ARM WASHER, FLYWHEEL NUT .	45 69	5 4	15-20788A1	SHIM, BALL BEARING TO GEAR HOUSING (.002-3-5- 10)	65	55
12-65891 12-67981	WASHER, FLYWHEEL NUT . WASHER, CLAMP BRACKET	9	7	15-20804A1	SHIM, BALL BEARING TO GEAR HOUSING (.002-3-5-	00	00
	SCREW	51	8		10)	63	23
12-71055	WASHER, REVERSE STOP SCREW	55	40	15-20804A1	SHIM, GEAR HOUSING TO WATER PUMP BASE (.002-	00	20
12-71421	WASHER, CLAMP BRACKET	- 4	_	15-28212	3-5-10)	63	26
13-20160	TILT TUBE	51 7	5 22	15-33431A1	SCREW	27	22
13-20202	LOCKWASHER, CRANKCASE TO TOP	·			GEAR HOUSING (.002-3-5-	65	66
13-20202	SCREWLOCKWASHER, STARTER	33	8	15-48002015 15-56191A1	SHIM, STEERING HANDLE PIVOT TO BRACKET (.015) SHIM, CRANKCASE TOP TO	45	10
13-21972	SOLENOID TERMINAL (5/16")	71	26	13-30191A1	CYLINDER BLOCK (.002-3-5-10)	33	6
13-21972	LOCKWASHER, CONNECTOR BASE LOCKWASHER, REVERSE	49	31	16-21553	STUD, TOP COWL TO MOUNTING BRACKETS (1		
.0 20002	STOP SCREW	55	39	10 50000	1/2")	3	4
13-26992	LOCKWASHER, STARTER			16-56299	STUD, DRIVE SHAFT HSG. TO GEAR HSG. (2 5/16") .	57	2
13-26992	MOTOR TERMINAL LOCKWASHER,RATCHET	71	14	16-58134	STUD, DRIVE SHAFT HSG. TO GEAR HSG. (3 15/16")	57	3
13-26993	SCREW	9 53	5 13	16-58135	STUD, GEAR HOUSING TO DRIVE SHAFT HOUSING		
13-26993	LOCKWASHER,STARTER HOUSING TO CYLINDER	00	10	16-58137	(4 13/16")	61 61	3
	BLOCK SCREW	5	3	16-59620	STUD, CLAMP BRACKET (8")	51	11
13-26996	LOCKWASHER, CHOKE SOLENOID TERMINAL	73	46	16-65865	STUD, CARBURETOR TO		
13-26996	LOCKWASHER, IGNITION COIL TERMINAL	73 11	27	16-65866	CRANKCASE (1 3/32") STUD, CRANKCASE TO	35	17
13-26996	LOCKWASHER, IGNITION COIL TERMINAL		21	16-65868	CYLINDER BLOCK (1 5/16")	33	12
13-26996	LOCKWASHER, STARTER SOLENOID TERMINAL		0.4	10 00000	DRIVE SHAFT HOUSING (2 1/8")	33	14
13-26996	(#10) LOCKWASHER, STOP SWITCH	71 49	24 29	16-68165	STUD, CRANKCASE TO DRIVE SHAFT HOUSING	25	40
13-26996	LOCKWASHER,CHOKE CABLE SCRWE	23	17	16-68165	(1 5/8")	35	16
13-29720	WASHER,WAVE-STARTER PAWL	5	17	16-72166	(1 5/8")	35	15
13-31030	WASHER, WAVE - TILT STOP LEVER SCREW	55	30		MOUNTING BRACKETS (1 1/2")	3	4
13-69845	LOCKWASHER, STOP SWITCH	49	34	16-72742	STUD, CARBURETOR TO CRANKCASE (1 3/32")	35	17
14-20091	TAB WASHER, CENTER MAIN BEARING LOCK SCREW	35	23	16-72743	STUD, CYLINDER BLOCK TO DRIVE SHAFT HOUSING (2 1/8")	33	14
14-20165	TAB WASHER,SHEAVE SHAFT NUT	5	12	17-20032	DOWEL PIN, CENTER MAIN BEARING	33 41	5
14-49911	TAB WASHER, PINION GEAR SCREW	61	7	17-20032	DOWEL PIN, MAIN BEARING TO CYLINDER BLOCK		13

Part Number	Description	Pg.	Ref. No.	Part Number	Description	Pg.	Ref. No.
17-20201	PIN, DOWEL - GEAR HOUSING TO DRIVE			23-30676A1	BUSHING ASSEMBLY, SHIFT SHAFT	63	19
	SHAFT HOUSING	61	2	23-30677	BUSHING, NYLONG - SHIFT	00	10
17-23784	PIN, DOWEL - CRANKCASE				CONTROL SHAFT	27	19
	TO CYLINDER BLOCK	33	11	23-30977	SPACER, PULLEY SCREW	5	10
17-24865	PIN, GROOVE - STATOR			23-33462	BUSHING, NYLON - SHAFT		
	PLATE LEVER TO VERTICAL SHAFT	20	14		AND GEAR (THROTTLE CONTROL HOUSING)	29	8
17-25905	PIN, ROLL - SHIFT	29	14	23-34237	COLLAR, GUIDE -	29	0
17 20000	CONTROL LEVER TO			20 0 1201	PROPELLER SHAFT	67	74
	SHIFT SHAFT	27	14	23-45170	SLEEVE, GUIDE - WATER		
17-27088	PIN, BALL GEAR TO				INLET TUBE	63	45
47.05070	THROTTLE SHAFT	45	8	23-46406	BUSHING, STATOR PLATE	0.4	40
17-35973	PIN, DOWEL - WATER PUMP BASE TO WATER PUMP			23-59621	CONTROL LEVER SPACER, CLAMP BRACKET	31	19
	BODY	63	32	23-33021	STUD	51	12
17-36325	PIN, THROTTLE SHAFT AND	00	02	23-62769	SPACER, RECTIFIER	٠.	
	GEAR	29	10		SCREW	71	6
17-39585	SWIVEL PIN	53	15	23-62769	SPACER, VOLTAGE		_
17-39599	PIN,PIVOT-FRONT COVER	2	22	22 62022	REGULATOR SCREW	75	3
17-46152	LATCH HOOK PIN, THROTTLE SHAFT	3 45	23 4A	23-63932	SPACER,CHOKE CABLE SCREW	23	18
17-53372	PIN, CROSS - RATDCHET	70	7/1	23-64651	BUSHING, SWIVEL	20	10
	TO PROPELLER SHAFT .	65	60		BRACKET	53	22
17-56373A1	TILT LOCK PIN ASSEMBLY .		10	23-65720	SPACER, SHEAVE SHAFT(
17-62768	PIN,IGNITION TRIGGER		20		PART OF A-50-64008A1	_	40
17-65855 17-68436	PIN, REED STOP PIN, BALL GEAR TO	41	6	23-66375	SHEAVE ASSEMBLY) BUSHING, NYLONG - SHIFT	5	19
17-00430	UNIVERSAL JOINT	45	14	23-00373	SHAFT	25	3
18-45882	COTTER PIN, REVERSE			24-20099	SPRING-COMPRESSION-		
	LOCK LEVER TO ROD	55	35		FRONT COVER RELEASE		
19-32298	PLUG, DRIVE SHAFT			04.00007	BUTTON	3	13
19-48750	HOUSING STUD PLUG, GEAR HOUSING	57	4	24-23067 24-27160	SPRING, ADAPTOR STEM SPRING, IDLE MIXTURE	21	8
19-40/50	FLUSHING	63	12	24-27 100	SCREW	15	4
19-75045	PLUG, BOTTOM COWL		3	24-28975	SPRING, GARTER -		-
21-56011A2	CHECK VALVE ASSEMBLY .	37	25		INTERNAL WIRING		
21-64871A1	ELBOW ASSEMBLY, BLEED	07	0.4	04.0004044	HARNESS		32
22 25005	DRAIN ELBOW, TELL TALE HOSE	37	24	24-29340A1 24-33479	SPRING, STARTER REWIND	5 65	15 52
22-25885	TO CYLINDER (SEE NOTE			24-39598	SPRING, CAM FOLLOWER . SPRING, TORISON-FRONT	65	32
	BELOW)	47	21	2.0000	COVER LATCH HOOK	3	22
22-31345	FITTING, GREASE - SWIVEL			24-39627	SPRING, DETENT -		
	BRACKET	53	20		MOUNTING BRACKET	25	11
22-61295A5	ELBOW ASSEMBLY, BLEED	25	0.4	24-39675	SPRING, NEUTRAL SPEED	07	0.4
22-61558	DRAIN ELBOW, BLEED DRAIN	35 37	24 29	24-45823	LIMITER FOLLOWER SPRING,PAWL RETAINER	27	24
22-61559	TEE, INJECTION	37	28	24-40020	PLATE	7	24
22-63981	FITTING, FUEL LINE TO		_	24-47744	SPRING, DETENT -		
	ADAPTOR	21	4		STEERING HANDLE	45	17
22-74036	FITTING, GREASE - SWIVEL	50	00	24-53373	SPRING, RETAINING -	0.5	0.4
22-76329	BRACKET	53 37	20 28	24-60239	CROSS PIN	65 47	61 25
23-26841	BUSHING, NYLON -	31	20	24-62095	SPRING, COMPRESSION-	41	23
	REVERSE LOCK LEVER				IGNITION TRIGGER	11	21
	ROD	55	34	24-72847	SPRING, DETENT -		
23-26954	BUSHING, NYLON - SHIFT	0.5	•	05.00004	STEERING HANDLE	45	17
23-27024	SHAFT	25	3	25-20081 25-20195	"O" RING, CRANKCASE TOP "O" RING, IDLE RELIEF	33	2
25-2102 4	PROPELLER SHAFT	67	76	20-20130	TUBE	57	15
			-				-

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
25-20415 25-26802	"O" RING ADAPTOR STEM . "O" RING, SHIFT SHAFT	21	7	27-52579	GASKET, CYLINDER BLOCK COVER	37	34
	BUSHING	63	20	27-64659	GASKET,CARBURETOR		
25-33465	CARRIER	65	67	28-20094	FLANGE KEY, FLYWHEEL	19	47 14
25-33466	"O" RING, WATER PUMP	03	07	28-20094	KEY, FLYWHEEL DRIVE	41 69	3
20 00 100	BASE	63	28	28-20094	KEY,FLYWHEEL DRIVE		6
25-38933	"O" RING, LOWER SHIFT	00		28-56661	KEY, IMPELLER DRIVE -	3	U
	SHAFT	63	17		PART OF DRIVE SHAFT		
25-57806	GROMMET, TRIM COVER				ASSEMBLY	63	37
	SCREW	57	9A	29-20046	BEARING, NEEDLE -		
26-20070	OIL SEAL, WATER PUMP	00	20		CRANKPIN	43	3
26-20070	BASEOIL SEAL, WATER PUMP	63	30	29-20063	BEARING, NEEDLE - PISTON	40	•
20-20070	BODY	63	40	20 25209	PIN	43	6
26-25329	SEAL, RUBBER - WATER	00	.0	30-25398	BEARING, BALL - FORWARD GEAR	65	56
	INLET TUBE	47	3	30-25398	BEARING, BALL - REVERSE	05	50
26-25329	SEAL, WATER PUMP BODY	63	42	00 20000	GEAR	65	64
26-26805	OIL SEAL, BEARING			30-47158	BEARING, BALL - DRIVE		٠.
	CARRIER	67	71		SHAFT	63	24
26-30696	OIL SEAL, DRIVE SHAFT			30-63326	BEARING, BALL -		
	HOUSING(EARLY MODELS)	57	4A		CRANKCASE (LOWER)	39	43
26-30696	OIL SEAL, SHIFT SHAFT	31	4/\	30-63326	BEARING, BALL -		
20 00000	BUSHING	63	21		CRANKCASE TOP	00	0
26-33467	OIL SEAL, WATER PUMP			21 20504	(UPPER)	33	3
	BASE (SPRING LOADED)	63	31	31-20594	BEARING, ROLLER - CRANKCASE TOP		
26-66300	OIL SEAL, CRANKCASE TOP				(UPPER)	33	4
00 00000	(UPPER)	33	5	31-28157	BEARING, ROLLER -	00	•
26-66302	OIL SEAL, CRANKCASE	20	4.4		BEARING CARRIER	67	69
26-66303	(LOWER)OIL SEAL, BEARING	39	44	31-28157	BEARING, ROLLER - DRIVE		
20-00303	CARRIER (SPRING				SHAFT	61	5
	LOADED)	67	70	31-28157	BEARING, ROLLER -		
26-73315	SEAL, CRANKSHAFT	41	2	00 0400544	FORWARD GEAR	65	58
27-27936	GASKET, TRANSFER PORT			32-34395A1	HOSE, TELL TALE - COWL TO CYLINDER BLOCK		
	COVER	37	31		(11")	47	20
27-39316	GASKET, BAFFLE PLATE TO	27	40	32-39586	TUBE, WATER OUTLET	71	20
27-39401	MANIFOLD COVER GASKET, POWERHEAD TO	37	40	0_ 00000	(SHORT SHAFT)	57	7
27-39401	MOUNTING PLATE	47	6	32-39587	TUBE, WATER OUTLET		
27-39402	GASKET, MOUNTING PLATE	••	Ü		(LONG SHAFT)	57	7
	TO DRIVE SHAFT			32-45054	TUBE, NYLON - IDLE RELIEF		
	HOUSING	47	8		TUBE		14
27-39402	GASKET, MOUNTING PLATE			32-60584	HOSE, BLEED DRAIN	37	26
	TO DRIVE SHAFT		4.4	32-63146	FUEL LINE,ADAPTOR TO CARBURETOR (3 1/4")	21	2
27 20622	HOUSING	57	11	33-58194	SPARK PLUG (ACV#40FFK)	11	36
27-39623	GASKET, FACE PLATE TO WATER PUMP BODY			33-58194	SPARK PLUG (ACV#40FFK)	69	30
	(UPPER)	63	35	34-56704A1	REED SET, CENTER MAIN		
27-39625	GASKET, WATER PUMP	00	00		BEARING (MATCHED)	41	9
	BASE TO FACE PLATE			34-64632	REED STOP, MAIN BEARING		
	(LOWER)	63	33		REED VALVES	41	10
27-39626	GASKET, WATER PUMP			35-70349	FILTER, PUMP	17	32
07.45000	BASE TO GEAR HOUSING	63	27	37-61000A73	DECAL SET (ENGINE)	1	-
27-45088	GASKET, CYLINDER BLOCK	27	20	37-65840A74	DECAL SET (ENGINE)	1	-
27-45088A73	TO BAFFLE PLATE GASKET SET	37 1	38 -	37-70165A75 37-73933A76	DECAL SET (ENGINE) DECAL SET (ENGINE)	1	-
27-45066A75 27-47829	GASKET SET	•		37-73933A70 37-73933A77	DECAL SET(ENGINE)	1	_
	SOLENOID	71	23	39-27841A12	RING, PISTON	43	9

Part Number	Description	Pg.	Ref. No.	Part Number	Description	Pg.	Ref. No.
40-47276 43-30802	LOCK RING, PISTON PIN GEAR, SECTOR - SHIFT	43	8	50-64008A1	STARTER SHEAVE ASSEMBLY	5	16
43-45189	SHAFT	25 61	6 9	50-65721	RATCHET ASSEMBLY,	60	2
43-45227	GEAR, PINION FORWARD GEAR			50-65721	FLYWHEEL (MANUAL) RATCHET	69	2
43-45229	ASSEMBLY	65 65	57 63	52-53518A1	ASSEMBLY,FLYWHEEL RATCHET ASSEMBLY,	9	2
43-58972	GEAR, SECTOR - SHIFT CONTROL SHAFT	27	18	53-22899	SLIDING CLUTCH RING, RETAINING - SHIFT	65	59
43-60852	GEAR, BALL - UNIVERSAL JOINT	45	13	53-23720	SHAFT	63	18
43-60852	GEAR, BALL THROTTLE SHAFT	45	7	53-23721	MOUNT	59	20
43-60856	GEAR, PINION - THROTTLE CONTROL	29	1	53-33463	MOUNT	59	22
43-60863	SHAFT AND GEAR, THROTTLE	29	3	53-58656	BEARING	63	25
43-66377	GEAR, SECTOR - SHIFT SHAFT		6	53-72168	GUIDE TO TOP COWL RING,RETAINING-ROPE	3	3
44-34238A2	PROPELLER SHAFT		62	54-23567	GUIDE TO TOP COWL CLAMP, WIRING HARNESS	3	3
44-75366A2	ASSEMBLYPROPELLER SHAFT				TO CRANKCASE FLANGE	71	36
45-64429A1	ASSEMBLYDRIVE SHAFT ASSEMBLY	65	62	54-33361	CLAMP, LEAD WIRE FASTENING TO HARNESS		
45-64430A1	(SHORT SHAFT) DRIVE SHAFT ASSEMBLY		6	54-47830	CLAMP	71	35
45-74852A1	(LONG SHAFT) DRIVE SHAFT ASSEMBLY		6	54-47993	SOLENOID FASTENING CLAMP, STARTER MOTOR	71	28
45-74853A1	(LONG SHAFT) DRIVE SAHFT ASSEMBLY	61	6	54-56223	FASTENING CLAMP, BLEED HOSE	71	17
46-48744A1	(SHORT SHAFT) WATER PUMP BASE	61	6	54-59538	ATTACHING	37 69	27 9
46-48749A2	ASSEMBLY	63	29	54-59538 54-59539	CLIP,COIL RETAINING CLIP,COIL RETAINING	9 9	10 11
46-48749A5	ASSEMBLY HEAVY DUTY WATER PUMP	63	38	54-61001	CLIP, UPPER END CAP SCREW	33	9
47-65958	ASSEMBLY IMPELLER, WATER PUMP -	1	-	54-64855 54-64916	CLIP,CHOKE CABLE CLAMP,FUEL HOSE		20
+1 00000	PART OF DRIVE SHAFT	62	26		ATTACHING		3
48-33480A1	ASSEMBLY	63	36	54-65927 54-68424	CLIP, COIL RETAINING CLAMP, FUEL HOSE		10
48-33482A1	BLADE - ALUMINUM - 11" PITCH)	67	75	54-76368	ATTACHING CLAMP, INTERNAL WIRING HARNESS TO BOTTOM	21	3
	BLADE - ALUMINUM - 9" PITCH)	67	75	84-60466A10	COWL	71	33
48-34402A1	PROPELLER ASSEMBLY (2 BLADE - BRONZE - 11"			84-60466A16	ASSEMBLY,SWITCH BOX WIRE ASSEMBLY, STARTER	11	39
48-37316A1	PITCH)	67	75	84-60466A8	SOLENOID TO GROUND (BLACK) GROUND WIRE ASS'Y,	71	10
48-65002A1	PITCH)	67	75	84-60871A14	REAR BRACKET WIRE ASSEMBLY, CHOKE SOLENOID TO SWITCH	7	30
50-22791A1	NYLON STARTER CABLE		75	84-61393A7	BOX PLATE (BLACKO WIRE ASSEMBLY,	71	11
50-33000A1	ASSEMBLY RATCHET	7	37		RECTIFIER TO STARTER SOLENOID (RED)	71	9
50-47216	ASSEMBLY,FLYWHEEL STARTER MOTOR		2 13	84-63212A2	LEAD ASSEMBLY, HIGH TENSION	69	27

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
84-63212A2	LEAD ASSEMBLY,HIGH TENSION	11	33	743-3366A2	PISTON AND PISTON PIN ASSEMBLY (.015		
84-65017A2	HARNESS ASSEMBLY, LIGHTING (EXTERNAL)	75	8	743-5172A6	OVERSIZE) PISTON AND PISTON PIN	43	-
84-65063	CABLE, JUMPER - STARTER MOTOR TO STARTER			848-5067A1	ASSEMBLY CYLINDER BLOCK AND	43	7
84-74899	SOLENOID HARNESS, VOLTAGE	71	21	848-6064A1	CRANKCASE ASSEMBLY CYLINDER BLOCK AND	33	10
	REGULATOR (YELLOW/RED)	75	6	848-6434A1	CRANKCASE ASSEMBLY CYLINDER BLOCK AND	33	10
84-74904	WIRING HARNESS, INTERNAL	71	31	1022-3567	CRANKCASE ASSEMBLY COVER, CYLINDER BLOCK .	33 37	10 33
84-76180	GROUND WIRE ASS'Y REAR BRACKET	7	30	1155-5009A1	CRANKCASE TOP ASSEMBLY	33	1
84-76181	GROUND WIRE ASS'Y REAR BRACKET			1163-6091A1	CRANKCASE TOP ASSEMBLY		1
85-64844	INSULATOR,TERMINAL BLOCK TO STATOR	1	30	1163-6437A1	CRANKCASE TOP ASSEMBLY		1
95 7400644	ASSEMBLY	9	14	1364-5585 1367-4977A1	BODY STRAINER CARBURETOR ASSEMBLY	17	27
85-71006A1	PROTECTOR ASSEMBLY, SPARK PLUG	69	28	1367-4977A1	COMPLETE CARBURETOR	21	1
86-63813 86-64845	TERMINAL BLOCK TERMINAL BLOCK,STATOR	11	41	1367-5193A3	ASSEMBLY,COMPLETE CARBURETOR	15	1
86-74474	ASSEMBLY TERMINAL BLOCK, STATOR	9 69	15 11	1367-5193A3	ASSEMBLY,COMPLETE CARBURETOR	15	1
87-61577A1	CONTACT ASSEMBLY, STOP SWITCH	49	26		ASSEMBLY,COMPLETE	21	1
87-69508A3 87-69508A7	STOP SWITCH ASSEMBLY . STOP SWITCH ASSEMBLY .	49 49	33 33	1367-5678A2	CARBURETOR ASSEMBLY,COMPLETE	15	1
90-65145 244-5043A3	MERC 200 PARTS LIST FLYWHEEL ASSEMBLY	1 9	- 1	1367-5678A2	CARBURETOR ASSEMBLY,COMPLETE	21	1
244-5043A7 244-5358A2	FLYWHEEL ASSEMBLY FLYWHEEL ASSEMBLY	9	1 1	1367-6063A2	CARBURETOR ASSEMBLY,COMPLETE	21	1
244-6118A4	FLYWHEEL ASSEMBLY			1369-6063A2	CARBURETOR ASSEMBLY,CO,PLETE	15	1
244-6118A6	(ELECTRIC) FLYWHEEL ASSEMBLY		1	1399-1457 1399-1655	JET, MAIN FUEL (.057) JET,MAIN FUEL(.055)		15 15
244-6193A2	(BELGIUM) FLYWHEEL ASSEMBLY	69	1	1399-1713 1399-2012	SCREW,IDLE MIXTURE THROTTLE SHAFT		3 40
332-2854	(MANUAL)		1 29	1399-2577	CHOKE SHUTTER	17	19
332-2854 332-4911A2	NIPPLE,IGNITION COIL SWITCH BOX ASSEMBLY	11 11	35 37	1399-3032 1399-4235	THROTTLE SHUTTER SCREEN STAINER	19 17	45 29
338-4991A1	COIL,LOW SPEED	9	9	1399-5126 1399-5127	FLOAT	15 15	7 9
338-4992A1 338-4995A1	COIL, HIGH SPEED COIL ASSEMBLY, IGNITION .	9 11	9 26	1399-5128	SCREW,FUEL BOWL TO CARBURETOR	15	11
338-4996A1	TRIGGER ASSEMBLY,IGNITION	9	19	1399-5129 1399-5130	BODY,FUEL PUMP INLET NEEDLE AND SEAT .	17 15	24 13
339-5288A2 339-5748A2	COIL ASSEMBLY, IGNITION COIL ASSEMBLY, IGNITION	11 69	26 20	1399-5131	BODY,STRAINER	17	27
339-5748A2	COIL ASSEMBLY, IGNITION .	11	26	1399-5132	SCREW, STAINER BODY TO CARBURETOR	17	28
339-6119A1	COIL ASSEMBLY (5 1/2" AND 6 3/8" LEADS)	69	8	1399-5137	DIAPHRAGM AND GASKET KIT	19	
339-6120A1	COIL ASSEMBLY (1 3/4" AND 3 1/2" LEADS)	69	8	1399-5194 1399-5195	VALVE,CHOKE RELIEF SPRING,CHOKE RELIEF	17	17
339-6222A1 415-5041	SWITCH BOX ASSEMBLY CRANKSHAFT	69 41	31 1	1399-5196	VALVE	17 19	18 36
415-6099 534-3267A18	CRANKSHAFT CENTER MAIN BEARING	41	1	1399-5197 1399-5198	CHOKE SHUTTER	17 19	19
00 1 -0207A10	ASSEMBLY	41	4	1399-5199	REPAIR PARTS KIT	19	

					. ,		
			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
1399-5415	SCREW,FUEL BOWL TO			1627-6006A3	GEAR HOUSING ASSEMBLY,		
	CARBURETOR	15	11		COMPLETE (SHORT		
1399-5757	INLET NEEDLE AND SEAT .	15	13	1007 000011	SHAFT)	65	-
1399-5809	CHOKE SHAFT	19	36	1627-6006A4	GEAR HOUSING ASSEMBLY,		
1399-5810	CHOKE SHUTTER	17	19		COMPLETE (LONG	64	
1399-5812	THROTTLE SHUTTER	19	45	1627 6006 \ 4	SHAFT)	61	-
1399-5813	REPAIR PARTS KIT	19	 12	1627-6006A4	COMPLETE (LONG		
1399-6224	INLET NEEDLE AND SEAT .	15 19	13 45		SHAFT)	65	_
1399-6225 1399-6226	THROTTLE SHUTTER REPAIR PARTS KIT		40 	1627-6006A5	GEAR HOUSING ASSEMBLY	61	1
1427-3293A1	CLAMP BRACKET	19		1627-6006A5	GEAR HOUSING ASSEMBLY	65	1
1421-0230/(1	ASSEMBLY	51	1	2127-2666A8	FRONT COVER		
1427-5632A1	CLAMP BRACKET	01	•		ASSEMBLY,COMPLETE	3	17
1121 0002/11	ASSEMBLY	51	1	2127-5669A2	FRONT COVER		
1427-5632A2	CLAMP BRACKET	•	•		ASSEMBLY,COMPLETE	3	17
000	ASSEMBLY	51	1	2129-5029A2	BOTTOM COWL ASSEMBLY	47	9
1461-5040A2	SWIVEL BRACKET	-		2129-6182A3	BOTTOM COWL ASSEMBLY	47	9
	ASSEMBLY	53	19	2130-4361A2	TOP COWL ASSEMBLY	3	1
1461-5296A1	SWIVEL BRACKET			2133-2706A5	WRAP AROUND COWL	_	_
	ASSEMBLY	53	19	0000 500040	ASSEMBLY,CO,PLETE		8
1461-6036A1	SWIVEL BRACKET			3399-5209A3	STATOR ASSEMBLY	69	6
	ASSEMBLY	53	19				
1560-4690A2	DRIVE SHAFT HOUSING						
	ASSEMBLY (LONG SHAFT	57	1				
1560-6008A2	DRIVE SHAFT HOUSING						
	ASSEMBLY (LONG						
	SHAFT)	57	1				
1561-4691A2	DRIVE SHAFT HOUSING						
	ASSEMBLY (SHORT						
4504 000740	SHAFT)	57	1				
1561-6007A2	DRIVE SHAFT HOUSING						
	ASSEMBLY (SHORT SHAFT)	57	1				
1562-4692A1	SADDLE ASSEMBLY	57	18				
1627-4404A11	GEAR HOUSING ASSEMBLY,	31	10				
1027 110 17111	COMPLETE (SHORT						
	SHAFT)	65	_				
1627-4404A11	GEAR HOUSING ASSEMBLY,						
	COMPLETE(SHOFT						
	SHAFT)	61	-				
1627-4404A12	GEAR HOUSING ASSEMBLY,						
	COMPLETE (LONG						
	SHAFT)	65	-				
1627-4404A12	GEAR HOUSING ASSEMBLY,						
	COMPLETE(LONG SHAFT)	61	-				
1627-4404A21	GEAR HOUSING ASSEMBLY,						
	COMPLETE (SHORT						
4007 4404404	SHAFT)	61	-				
1627-4404A21	GEAR HOUSING ASSEMBLY,						
	COMPLETE (SHORT SHAFT)	6E					
1627-4404A22	GEAR HOUSING ASSEMBLY,	65	-				
1041 111 04M44	COMPLETE (LONG						
	SHAFT)	61	_				
1627-4404A22	GEAR HOUSING ASSEMBLY,	٠.					
- · · · · · · · · · · · · · · · · · · ·	COMPLETE (LONG						
	SHAFT)	65	-				
1627-4404A6	GEAR HOUSING ASSEMBLY	61	1				
1627-4404A6	GEAR HOUSING ASSEMBLY	65	1				