





# **MERC 1500**

#### **SERIAL NUMBER**

1500	. USA	3502806	THRU	4865677
1500	. CAN	7010533	THRU	7112772
1500		8005615	THRU	8052649

#### **TABLE OF CONTENTS:**

BOTTOM COWL AND SHIFT LINKAGE	. 60
CARBURETOR ASSEMBLY	. 28
CARBURETOR ASSEMBLY	. 34
CARBURETOR LINKAGE AND CHOKE SOLENOID	. 24
CLAMP BRACKET AND REVERSE LOCK	. 72
COWLING AND FRONT COVER	. 6
CRANKSHAFT, PISTONS AND CONNECTING RODS	
CYLINDER BLOCK AND CRANKCASE ASSEMBLY	
DISTRIBUTOR ADAPTOR AND VERTICAL LINKAGE	
DISTRIBUTOR HOUSING AND ROTOR	
DRIVE SHAFT HOUSING ASSEMBLY	. 78
END CAPS, MANIFOLD AND EXHAUST COVERS (CONT)	. 50
EXHAUST EXTENSION PLATE	. 64
FLYWHEEL ASSEMBLY AND STATOR	
FUEL PUMP AND FUEL LINE ASSEMBLY (SERIAL GROUP #1)	
FUEL PUMP AND FUEL LINE ASSEMBLY (SERIAL GROUP #2)	. 38
GEAR HOUSING ASSEMBLY, COMPLETE (PAGE 1)	. 82
GEAR HOUSING ASSEMBLY, COMPLETE (PAGE 2)	. 92
HYDRAULIC PUMP AND CONTROL PANEL	102
HYDRAULIC PUMP ASSEMBLY	
IGNITION COIL	
MISCELLANEOUS PARTS/ACCESSORIES	
PARTS INDEX	112
POWER TRIM CYLINDER REPAIR KITS	
STARTER MOTOR, STARTER SOLENOID, RECTIFIER AND WIRING HARNES	
SWIVEL BRACKET ASSEMBLY	
TOP COWL AND SUPPORT BRACKETS	
TRIM CYLINDERS AND HYDRAULIC HOSES	106

**NOTE:** Indented description indicate that these parts are included in preceeding assembly.


**AR** = As Required **NSS** = Not Sold Separate

**OPT** = Optional **NS** = Not Shown

THESE PARTS BOOKS/FICHE CARD ARE COPYRIGHTED AND MAY NOT BE DISTRIBUTED OR REPRODUCED IN ANY OTHER FORMAT BY ANYONE OTHER THAN MERCURY MARINE WITHOUT THE PRIOR WRITTEN CONSENT OF MERCURY MARINE.


#### **MISCELLANEOUS PARTS/ACCESSORIES**

				ELLANEOUS PARTS/ACCESSORIES
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
-	90-63293		0	MERC 1500 PARTS LIST
-	27-60476A73		0	GASKET SET (MOTOR OVERHAUL) UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
-	27-60476A74		0	GASKET SET (MOTOR OVERHAUL) UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
-	27-60476A75		0	GASKET SET (MOTOR OVERHAUL) UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
-	37-64309A73		0	DECAL SET UNITED STATES 3752619 AND BELOW AUSTRALIA 8013419 AND BELOW CANADA 7024372 AND BELOW
-	37-66318A74		0	DECAL SET UNITED STATES 3752620 THRU 4121434 AUSTRALIA 8013420 THRU 8028039 CANADA 7024373 THRU 7048782
-	37-70140A75		0	DECAL SET UNITED STATES 4121435 THRU 4319879 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067284
-	37-74301A76		0	DECAL SET(MERC 1500 XS) UNITED STATES 4319880 THRU 4602011 CANADA 7067248 THRU 7093097
-	37-73891A76		0	DECAL SET(MERC 1500 LONG) UNITED STATES 4319880 THRU 4602011 CANADA 7067248 THRU 7093097
-	37-74301A77		0	DECAL SET(MERC 1500XS) UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
-	37-74301A77		0	DECAL SET(MERC 1500 LONG) UNITED STATES 4602012 AND UP CANADA 7093038 AND UP

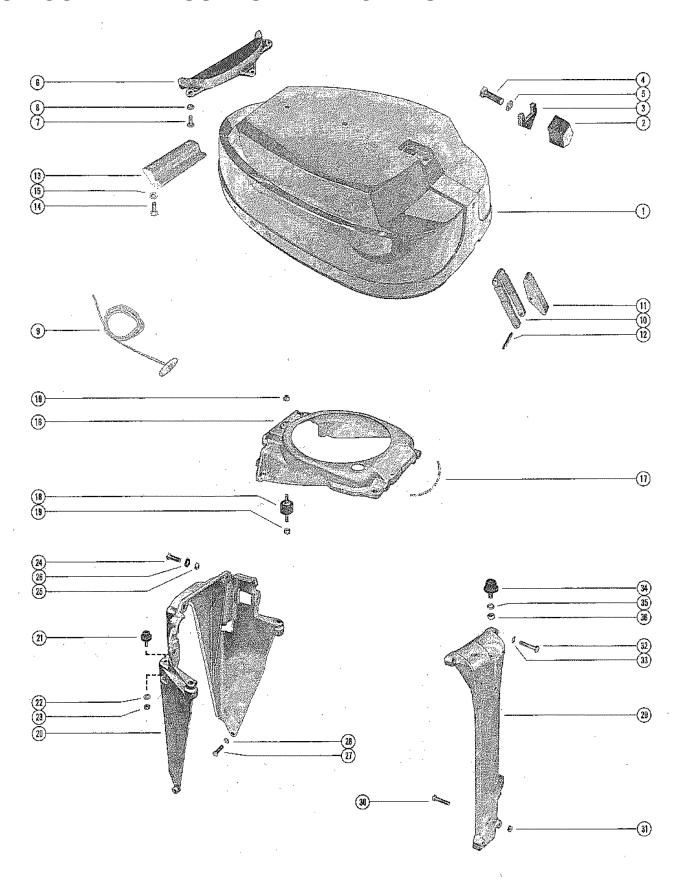


REF.				COVIL AND SUPPORT BRACKETS
NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	2114-3806		1	COWL, TOP UNITED STATES 4403386 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7067847 AND BELOW
	2114-5999		1	COWL, TOP UNITED STATES 4403387 AND UP
2	52733A9		1	RETAINER ASSEBMLY, TOP COWL
3	35496		1	PAD, BUMPER - TOP COWL RETAINER
4	10-37558		1	SCREW, RETAINER TO TOP COWL (1 1/4")
5	13-39107		1	LOCKWASHER, RETAINER TO TOP COWL SCREW
6	76370		1	SHIELD,TOP COWL - REAR
7	10-37370		3	SCREW, SHIELD TO TOP COWL (5/8")
8	13-37371		3	LOCKWASHER, SHIELD SCREW
9	47341A1		1	ROPE, STARTER (FOR MANUAL STARTING ONLY)
10	52739		1	HINGE, COWL LATCH - TOP COWL
11	52737		1	LEVER, COWL LATCH HINGE
12	17-58998		1	PIN, TOLL - COWL LATCH LEVER TO HINGE
13	55455		1	HOOK, TOP COWL LATCH - REAR
14	10-22956		2	SCREW, REAR HOOK TO TOP COWL (7/8")
15	13-26992		2	LOCKWASHER, REAR HOOK MOUNTING SCREW
16	65609A2		1	FRAME ASSEMBLY, TOP COWL SUPPORT UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
	69240A2		1	FRAME ASSEMBLY, TOP COWL SUPPORT UNITED STATES 4121435 THRU 4403386 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067847
	75971A1		1	FRAME ASSEMBLY, TOP COWL SUPPORT <b>UNITED STATES</b> 4403387 AND UP
17	37-60204		1	DECAL, TIMING UNITED STATES 3628317 AND BELOW AUSTRALIA 8008489 AND BELOW CANADA 7018152 AND BELOW
	37-65601		1	DECAL, TIMING - FLYWHEEL <b>UNITED STATES 3628318 THRU 4319879 AUSTRALIA 8008490 THRU 8034895 CANADA 7018153 THRU 7067247</b>
	37-73291		1	DECAL, TIMING - FLYWHEEL UNITED STATES 4319880 AND UP CANADA 7067248 AND UP
18	37639		3	MOUNT, RUBBER - TOP COWL FRAME
	46096		OPT.	MOUNT, RUBBER - TOP COWL FRAME (HEAVY DUTY)
19	11-35888		6	NUT, RUBBER MOUNT TO TOP COWL FRAME
20	64954		1	BRACKET, TOP COWL SUPPORT - REAR
21	31014		2	MOUNT, RUBBER - REAR SUPPORT BRACKET
22	13-26992		2	LOCKWASHER, RUBBER MOUNT TO REAR SUPPORT BRACKET
23	11-29598		2	NUT, RUBBER MOUNT TO REAR SUPPORT BRACKET
24	10-65263		4	SCREW, REAR BRACKET TO FRAME (1") UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
25	11-60049		4	NUT, REAR BRACKET SCREW UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW

CONTINUED ON NEXT PAGE

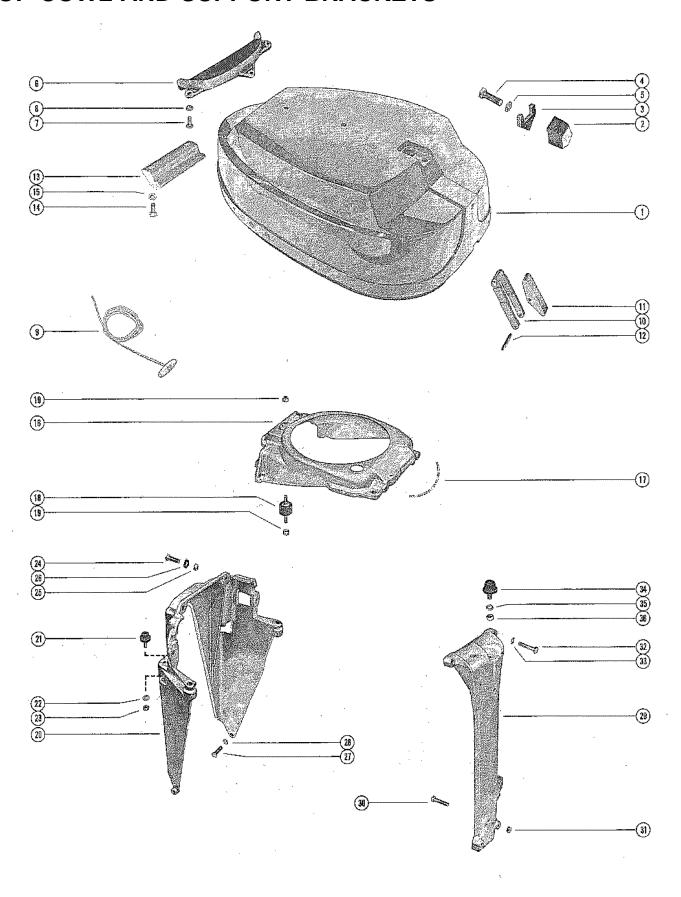


			<del></del>	
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
24	10-37562		4	SCREW, REAR BRACKET TO FRAME <b>UNITED STATES</b> 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
26	13-26993		4	LOCKWASHER, REAR BRACKET SCREW <b>UNITED STATES</b> 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
27	10-37562		4	SCREW, REAR BRACKET TO BOTTOM COWL (1") UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
28	13-26993		4	LOCKWASHER, REAR SUPPORT BRACKET SCREW
29	64979A3		1	BRACKET ASSEBMLY, TOP COWL - FRONT <b>UNITED STATES</b> 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
	69234A2		1	BRACKET ASSEMBLY, TOP COWL - FRONT UNITED STATES 4121435 THRU 4602011 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7093097
	77103A3		1	BRACKET ASSEMBLY, TOP COWL - FRONT UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
30	10-71908		2	SCREW. BRACKET TO BOTTOM COWL (1 1/2") UNITED STATES 4602011 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7093097 AND BELOW
31	11-60049		2	NUT, SUPPORT BRACKET SCREW UNITED STATES 4602011 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7093097 AND BELOW
30	10-69092		2	SCREW, BRACKET TO BOTTOM COWL (1 1/4") UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
31	13-26993		2	LOCKWASHER, BRACKET SCREW UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
32	10-55511		2	SCRW, BRACKET TO TOP COWL FRAME (1 1/2")
33	13-26993		2	LOCKWASHER, SUPPORT BRACKET SCREW
34	37640		1	MOUNT, RUBBER - SUPPORT BRACKET
35	13-26993		1	LOCKWASHER, RUBBER MOUNT
36	11-28770		1	NUT, RUBBER MOUNT

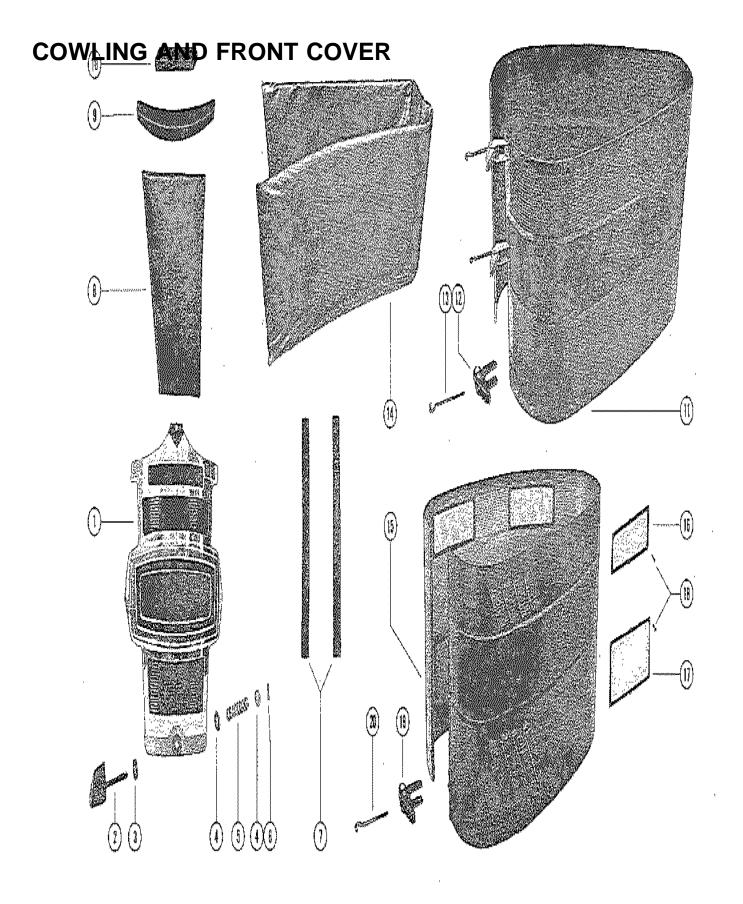


# **COWLING AND FRONT COVER**

			1	COVILING AND I NOW COVER
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	2113-2663A18		1	COWL, FRONT COVER ASSEMBLY UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
	2113-5631A4		1	COWL FRONT COVER ASSEMBLY UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
2	56849		1	KNOB, COWL FRONT COVER FASTENING
3	12-30771		2	WASHER, COVER FASTENING KNOB (RUBBER)
4	12-59572		2	WASHER, COVER FASTENING KNOB (PLASTIC)
5	24-30772		1	SPRING, TENSION - FASTENING KNOB
6	17-29077		1	ROLL PIN, TENSION SPRING TO KNOB
7	31089		2	STRIP, SOUND ABSORBING
8	38675		1	BLANKET, SOUND ABSORBING
9	35769		1	SEAL, SOUND ABSORBING - UPPER
10	53334		1	SEAL, SOUND ABSORBING - TOP
11	2136-4660A4		1	WRAP AROUND COWL ASSEMBLY - NON LOUVERED
12	46785A1		3	COWL LATCH ASSEBMLY - NON LOUVERED
13	30413		3	HOOK, COWL LATCH FASTENING - NON LOUVERED
14	30021		1	BLANKET, SOUND ABSORBING - NON LOUVERED
15	2136-4660A17		1	WRAP AROUND COWL ASSEMBLY - LOUVERED
16	54943		4	SCREEN, COWL - UPPER - LOUVERED
17	54942		4	SCREW, COWL - LOWER - LOUVERED
18	17-54944		48	RIVET, SCREEEN ATTACHING - LOUVERED
19	46785A1		3	COWL LATCH ASSEMBLY - LOUVERED
20	30413		1	HOOK, COWL LATCH FASTENING - LOUVERED
-	62-252341		1	GLUE, ADHESIVE - BLANKET FASTENING

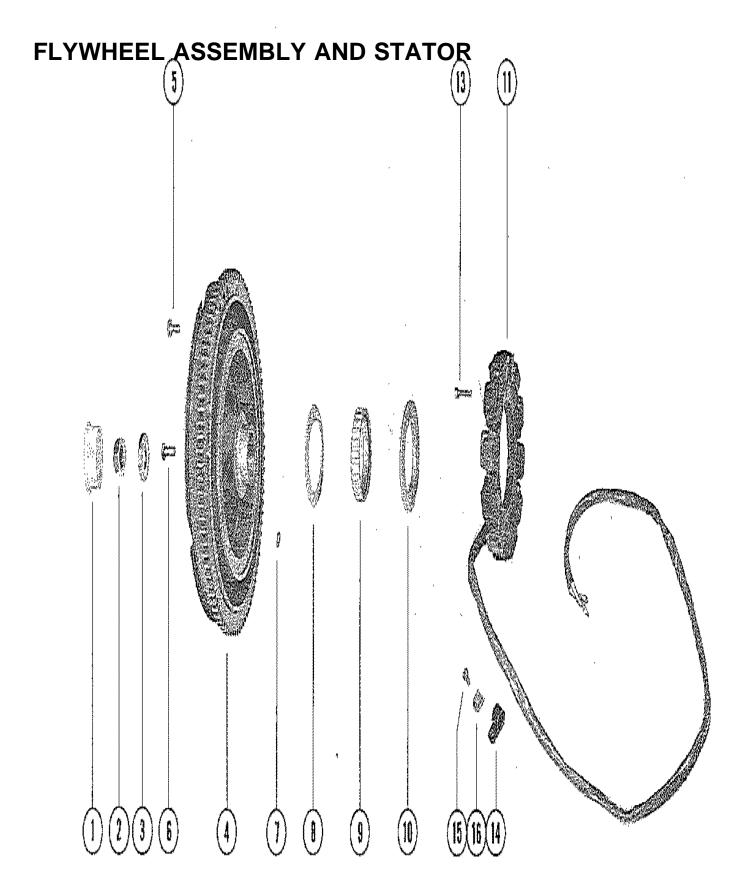


#### **FLYWHEEL ASSEMBLY AND STATOR**

_				LIVIILLE AGGLINDLI AND GIATON
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	19-45907		1	PLUG, FLYWHEEL PULLER THREADS
2	11-52901		1	NUT, FLYWHEEL(PART OF 1-436-4842A3 CRANKSHAFT ASSEMBLY)
3	12-33001		1	WASHER, FLYWHEEL NUT
4	225-2494A14		1	FLYWHEEL ASSEMBLY, COMPLETE UNITED STATES 3628317 AND BELOW AUSTRALIA 8008489 AND BELOW CANADA 7018152 AND BELOW
	225-2494A30		1	FLYWHEEL ASSEMBLY, COMPLETE UNITED STATES 3628318 AND UP AUSTRALIA 8008490 AND UP CANADA 7018153 AND UP
5	10-32417		8	SCREW, FLEXIBLE PLATE TO FLYWHEEL (5/8")
6	10-38398		8	SCREW, PLATE AND HUB TO FLEXIBLE PLATE (7/8")
7	17-26618		1	PIN, DOWEL - PULLEY TO FLYWHEEL
8	29788		1	FLANGE, FLYWHEEL PULLEY
9	30306		1	PULLEY, FLYWHEEL
10	29787		1	HUB, FLYWHEEL PULLEY
11	398-4793		1	STATOR, ALTERNATOR
13	10-63136		4	SCREW, STATOR TO UPPER END CAP (7/8")
14	54-24871		1	CLIP, STATOR LEAD FASTENING (5/8")
	54-22627		1	CLIP, STATOR/WIRING HARNESS LEADS FASTENING (1/2")
15	10-62568		2	SCREW, STATOR LEAD CLIP FASTENING (3/8")
16	69205		2	"D" WASHER, CLIP FASTENING SCREW

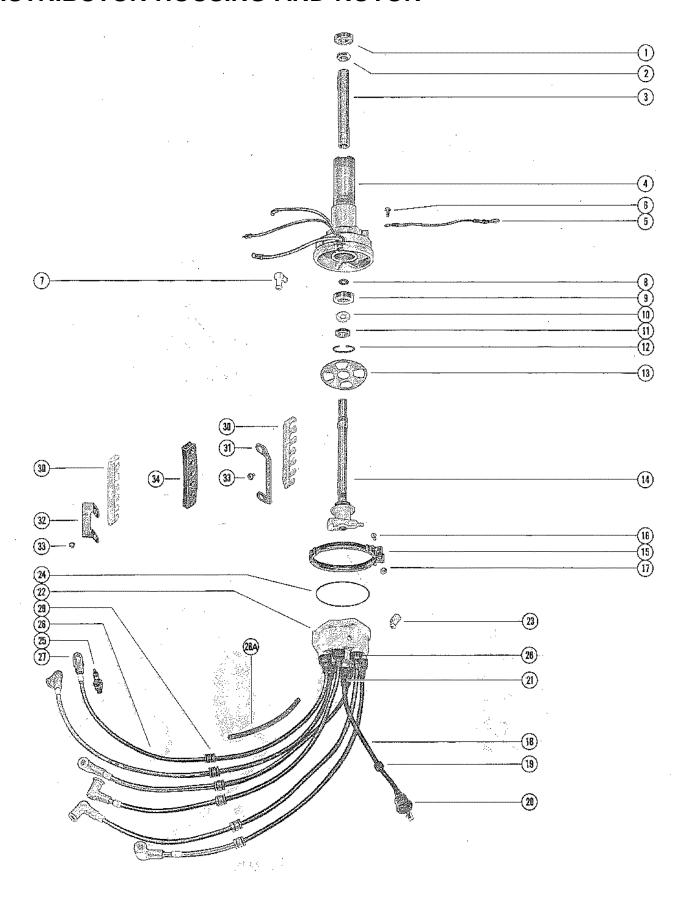


REF.				
NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	30-20066		1	BALL BEARING, DISTRIBUTOR HOUSING (UPPER)
2	11-54209		1	NUT, ROTOR SHAFT TO DISTRIBUTOR HOUSING
3	23-53539		1	SLEEVE, ROTOR SHAFT
4	393-3736A23		1	HOUSING ASSEMBLY, DISTRIBUTOR
5	53417		1	GROUND STRAP ASSEMBLY, DISTRIBURTOR TO CRANKCASE
6	10-62568		1	SCREW, GROUND STRAP ATTACHING (3/8")
7	58807A1		1	FLAME ARRESTOR, VENT - DISTRIBUTOR HOUSING
8	15-55853		1	SHIM BALL BEARING TO DISTRIBUTOR HOUSING
9	30-26379		1	BALL BEARING, DISTRIBUTOR HOUSING (LOWER)
10	15-21148A1		AR	SHIM, BALL BEARING TO SPACER
11	23-53538		1	SPACER, ROTOR SHAFT
12	53-26406		1	RING, RETAINER - BALL BEARING TO DISTRIBUTOR HOUSING
13	393-4313		1	DISC, ROTOR
14	393-4312		1	ROTOR, DISTRIBUTOR
15	54-60768		1	CLAMP, DISTRIBUTOR CAP TO DISTRIBUTOR HSG PART OF DISTRIBUTOR CAP ASSEMBLY
16	10-65774		1	SCREW, DISTRIBUTOR CAP CLAMP (1 1/8") PART OF DISTRIBUTOR CAP ASSEMBLY
17	11-26768		1	NUT, DISTRIBUTOR CAP CLAMP SCREW PART OF DISTRIBUTOR CAP ASSEMBLY
18	393-3836A1		1	CABLE ASSEMBLY, CAP TO COIL UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
	84-69207A1		1	CABLE ASSEMBLY, CAP TO COIL UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
19	25-26547		1	GROMMETT, HIGH TENSION CABLE
20	332-2854		1	BOOT, HIGH TENSION CABLE TO COIL
21	60096		1	BOOT, HIGH TENSION CABLE
22	393-4841A2		1	DISTRIIBUTOR CAP ASSEMBLY
-	393-1293A1		1	BRUSH AND SPRING ASSEMBLY
23	58807A1		1	FLAME ARRESTOR, VENT - DISTRIBUTOR CAP
24	27-55896		1	GASKET, DISTRIBUTOR CAP
25	33-59599		6	SPARK PLUG (CHAMPION L-77V) UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
	33-68057		6	SPARK PLUG (CHAMPION L-76V) UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
26	84-63212A2		6	SPARK PLUG LEAD ASEMBLY #1, #2, #3, #4, #5 AND #6 ORDER A-36549A1 KIT FOR REPLACEMENT OF LEAD WIRE MARKERS
-	20121		6	CONNECTOR, SPARK PLUG LEAD
27	85-71006A1		6	PROTECTOR, SPARK PLUG LEAD
28	60096		6	BOOT, SPARK PLUG LEAD TO DISTRIBUTOR
28A	23-622381		6	SLEEVE, SPARK PLUG LEAD (7")


CONTINUED ON NEXT PAGE

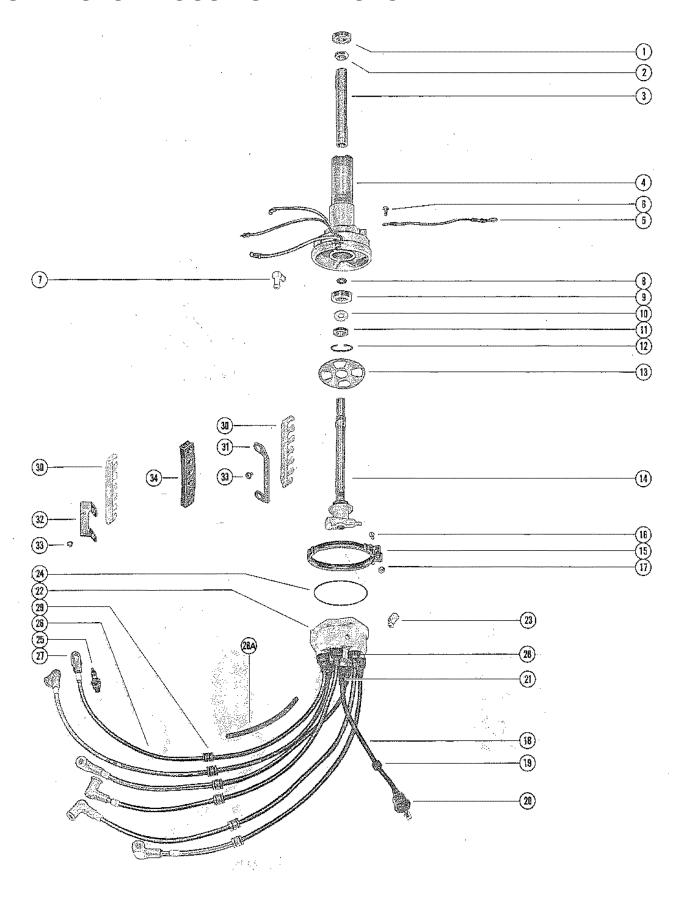

REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
29	25-26547		12	GROMMET, SPARK PLUG LEADS
30	45409		2	WIRE RETAINER, HGIH TENSION LEADS
31	45392		1	BRACKET, FRONT - WIRE REAINER
	45392		1	BRACKET, FRONT - WIRE RETAINER
32	47398		1	BRACKET, REAR - WIRE RETAINER
33	10-62568		4	SCREW, FRONT AND REAR BRACKET ATTACHING (3/8")
34	45391		2	SPACER, RUBBER - HIGH TENSION LEADS


# **IGNITION COIL**

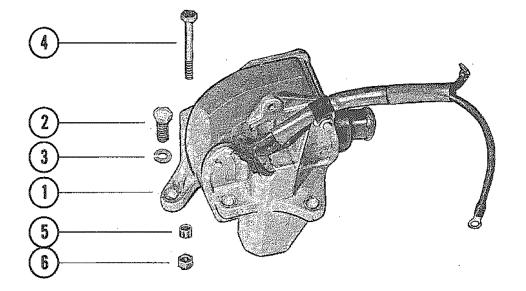

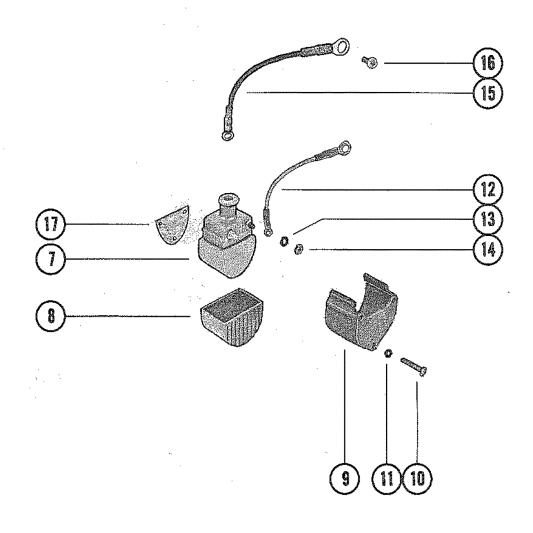


# **IGNITION COIL**

		1		IGNITION COIL
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	332-2983A5		1	IGNITION COIL ASSEMBLY, COMPLETE UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
2	10-37941		1	SCREW, COIL MOUNTING BRACKET (1 3/4") UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
3	13-26992		1	LOCKWAHSER, COIL MOUNTING BRACKET UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
4	10-31471		2	SCREW, COIL MOUNTING BRACKET (3 1/4") UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
5	23-52933		3	SPACER, COIL BRACKET TO BOTTOM COWL UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
6	11-46887		2	NUT, COIL MOUNTING BRACKET SCREW UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
7	332-4895A2		1	IGNITION COIL ASSEMBLY UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
8	63194		1	PAD, RUBBER - IGNITION COIL UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
9	63195		1	COVER, IGNITION COIL UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
10	10-69046		3	SCREW, COIL TO CYLINDER BLOCK (2") UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
11	12-30164		2	WASHER, COIL SCREW UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
12	84-60466A1		1	CABLE ASSEMBLY UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
13	13-26996		2	LOCKWASHER, IGNITION COIL TERMINAL (#10) UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
14	11-45076		2	NUT, IGNITION COIL TERMINAL (#10) UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
15	84-66054A2		1	CABLE ASSEMBLY, COIL TO SWITCH BOX UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
16	10-62568		1	SCREW, IGNITION COIL WIRE TO SWITCH BOX (3/8") UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
17	69190		1	PLATE, COIL MOUNTING UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP

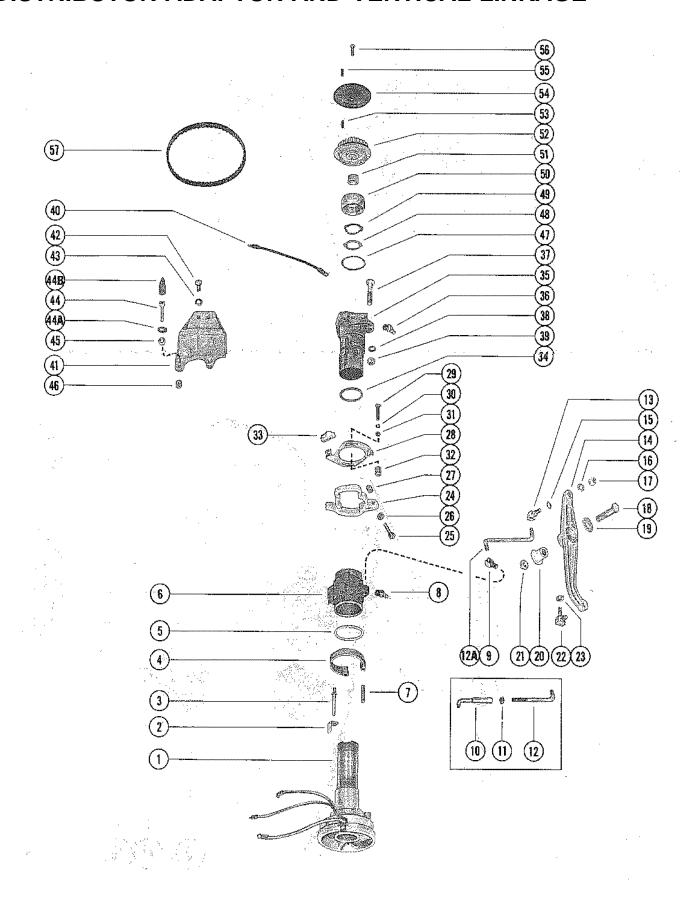


				ADAI TON AND VENTIONE ENVIRON
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	393-3736A23		1	HOUSING ASSEMBLY, DISTRIBUTOR
2	32197		1	STOP, SPARK ADVANCE - DISTRIBUTOR HOUSING
3	17-27962		1	PIN, ANCHOR SPRING - DISTRIBUTOR HOUSING
4	24-27944		1	SPRING, HORSESHOE - DISTRIBUTOR HOUSING
5	12-53540		1	WASHER, ECONOMIZER COLLAR - DISTRIBUTOR HOUSING
6	55804A1		1	ECONOMIZER COLLAR ASSEMBLY
7	17-27961		1	PIN, ECONOMIZER COLLAR - SPRING RETAINER
8	22-25094		1	FITTING, GREASE - ECONOMIZER COLLAR
9	27947		1	SWIVEL, LINKAGE - ECONOMIZER COLLAR
10	25996A1		1	SWIVEL ADN LINK ROD ASSEMBLY - 3 PIECE (SEE PHOTO)
11	11-64484		1	NUT, UPPER LINK ROD ADJUSTING - 3 PIECE (SEE PHOTO)
12	37700		1	ROD, LINK - UPPER - 3 PIECE (SEE PHOTO)
12A	67469		1	ROD LINK - UPPER(1 PIECE)-SEE PHOTO
13	27948		1	SWIVEL, UPPER LINK ROD TO THROTTLE CONTROL LEVER
14	60478		1	LEVER, THROTTLE CONTROL
15	13-39954		1	WASHER, WAVE - THROTTLE CONTROL LEVER SWIVEL
16	12-29245		1	WASHER, THROTTLE CONTROL LEVER SWIVEL
17	11-35888		1	NUT, UPPER LOINK ROD TO THROTTLE CONTROL LEVER
18	10-37559		1	SCREW, THROTTLE LEVER TO EXHAUST COVER (1 3/4"0
19	12-29395		1	WASHER, THROTTLE CONTROL LEVER SCREW
20	23-45818		1	BUSHING, THROTTLE CONTROL LEVER SCREW
21	11-20509		1	NUT, THROTTLE CONTROL LEVER SCREW
22	37587		1	SWIVEL, LOWER - THROTTLE CONTROL LEVER TO THROTTLE CABLE
23	11-35888		1	NUT, THROTTLE CABLE TO LOWER SWIVEL
24	48692		1	COLLAR, THROTTLE ACTUATOR
25	10-48675		1	SCREW, ADJUSTING - THROTTLE ACTUATOR COLLAR (1 1/2")
26	11-64015		1	NUT, THROTTLE ACTUATOR COLLAR ADJUSTING SCREW
27	52023		1	CAP, NYLON - ACTUATOR COLLAR ADJUSING SCRW
28	48671		1	PLATE, THROTTLE ACTUATOR
29	10-37892		2	SCREW, THROTTLE ACTUATOR PLATE TO ECONOMIZER COLLAR (1")
30	12-30164		2	WASHER, THROTTLE ACTUALTOR PLATE FASTENING SCREW
31	13-26996		2	LOCKWASHER, THROTTLE ACTUATOR PLATE FASTENING SCREW
32	23-48674		2	SPACER, THROTTLE ACTUATOR PLATE SCREW
33	58454		1	CAM, THROTTLE ACTUATOR PLATE
34	12-46246		1	WASHER, ADAPTOR - DISTRIBUTOR HOUSING
35	48666A1		1	ADAPTOR ASSEMBLY, DISTRIBUTOR UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
	66165A2		1	ADAPTOR ASSEMBLY, DISTRIBUTOR <b>UNITED STATES</b> 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP


CONTINUED ON NEXT PAGE

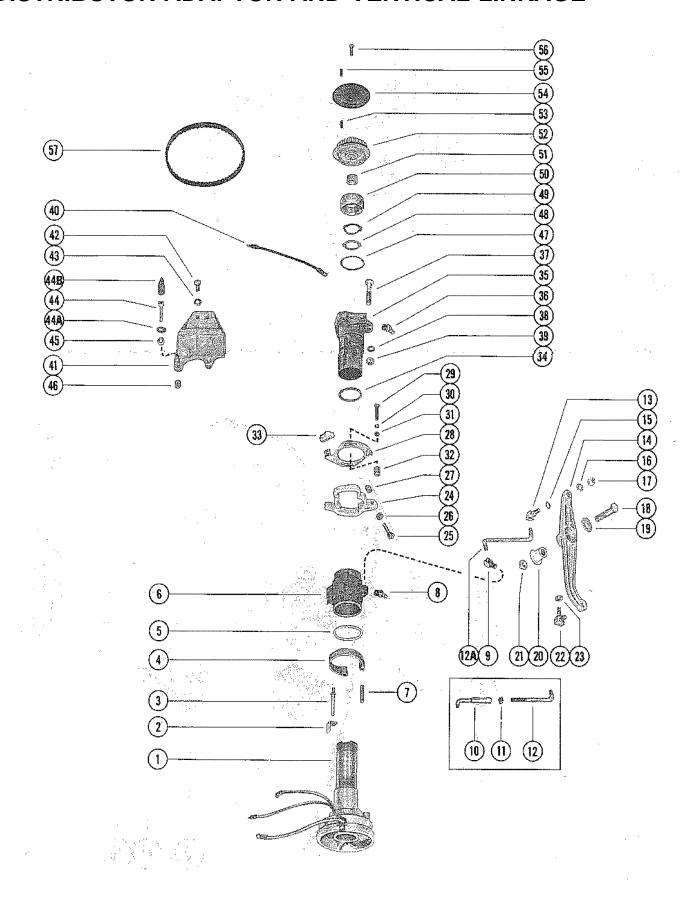


				ADAI TOR AIRD VERTICAL LINKAGE
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
36	22-25094		1	FITTING, GREASE - DISTRIBUTOR ADAPTOR
37	10-22040		3	SCREW, DISTRIBUTOR HOUSING TO CRANKCASE (1 1/2") UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
	10-20362		3	SCREW, DISTRIBUTOR HOUSING TO CRANKCASE (1 1/2") UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP
38	12-20084		3	WASHER, DISTRIBUTOR HOUSING SCREW
39	11-20083		3	NUT, DISTRIBUTOR HOUSING SCREW UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
40	57602		1	WIRE, GROUND - DIST. ADAPTOR TO FRONT BRACKET UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
	84-66008A1		1	WIRE, GROUND - DIST. ADAPTOR TO FRONT BRACKET UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP
41	55805		1	BRACKET, STOP
42	10-28636		2	SCREW, DISTRIBUTOR ADAPTOR TO STOP BRACKET (3/4")
43	12-35462		2	WASHER, STOP BRACKET FASTENING SCREW
44	10-64022		3	SCREW, STOP BRACKET ADJUSTING (2 1/8")
44A	12-24391		1	WASHER, STOP BRACKET ADJUSTING SCREW <b>UNITED</b> STATES 4602012 AND UP CANADA 7093038 AND UP
44B	85-76199		1	INSULATOR, STOP BRACKET ADJUSTING SCREW UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
45	11-64015		3	NUT, STOP BRACKET ADJUSTING SCREW
46	52023		3	NYLON - STOP BRACKET ADJUSTING SCREW
47	12-27939		1	WASHER, DISTRIBUTOR HOUSING
48	14-27960		1	TAB WASHER, ADAPTOR CAP FASENING
49	13-27959		1	WASHER, WAVE - DISTRIBUTOR BALL BEARING BEARING TENSION
50	54567		1	DISTRIBUTOR HOUSING
51	23-47250		1	SPACER, DRIVE PULLEY
52	29906A1		1	DRIVEN PULLEY ASSEMBLY
53	17-29908		1	PIN, ROLL - FLANGE LOCATING
54	29907		1	FLANGE, DRIVEN PULLEY
55	28-29910		1	KEY, DISTRIBUTOR DRIVER
56	10-68554		1	SCREW, PULLEY CLAMPING (1/2")
57	20140		1	BELT, TIMING

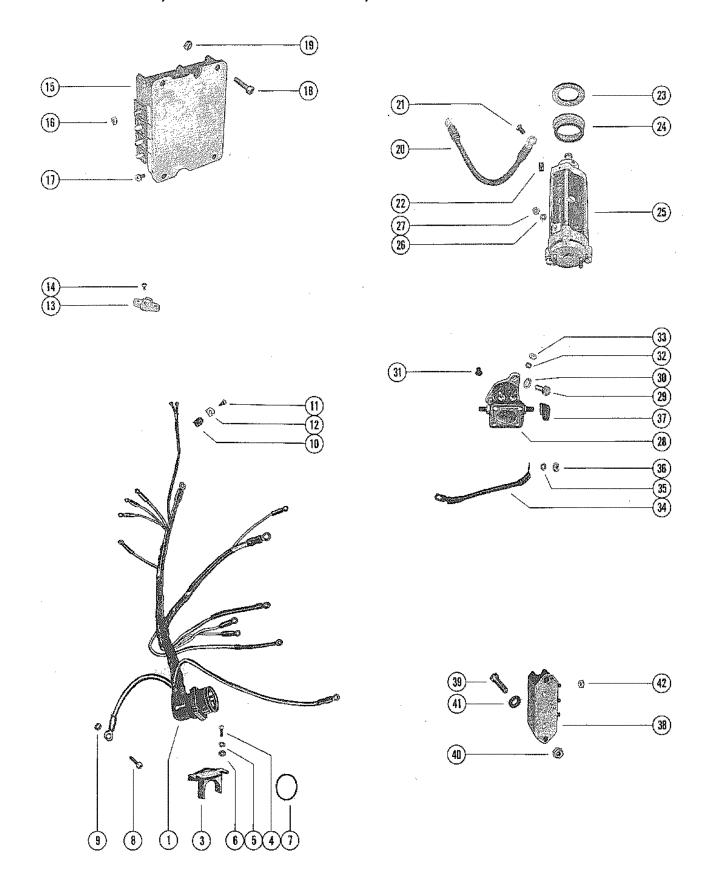

REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	52769		1	WIRING HARNESS, INTERNAL UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
	84-69236		1	WIRING HARNESS, INTERNAL <b>UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP</b>
3	54-76368		1	CLAMP, WIRING HARNESS TO BOTTOM COWL
4	10-69020		2	SCRW, WIRING HARNESS CLAMP TO BOTTOM COWL (7/8")
5	13-26996		2	LOCKWAHSER, WIRING HARNESS CLAMP SCREW
6	12-30164		2	WASHER, WIRING HARNESS CLAMP SCREW
7	24-28975		1	SPRING, GARTER - INTERNAL WIRING HARNESS
8	10-20776		1	SCREW, GROUND WIRE TO BOTTOM COWL (1/2")
9	13-26992		1	LOCKWASHER, GROUND WIRE SCREW
10	54-22875		1	CLIP, WIRING HARNESS TO FRONT BRACKET (5/8")
11	10-62568		1	SCREW, WIRING HARNESS TO FRONT BRACKET (3/8")
12	69205		1	"D" WASHER, WIRING HARNESS CLIP SCREW
13	45559		1	TERMINAL BLOCK, STATOR LEADS
14	10-62568		4	SCREW, STATOR LEADS TO TERMINAL BLOCK (3/8")
15	332-2986A25		1	SWITCH BOX ASSEMBLY(MERC1500XS)
	3323-2986A21		1	SWITCH BOX ASSEMBLY(MERC 1500 LONG)
16	11-45076		7	NUT, SWITCH BOX TERMINAL
17	10-29794		1	SCRWE, SWITCH BOX (3/8")
18	10-64279		4	SCREW, SWITCH BOX TO FRONT MOUNTING BRACKET (1")
19	11-46887		4	NUT, SWITCH BOX SCREW
20	25596		1	CABLE, WIRE - STARTER MOTOR TO FRONT SUPPORT BRACKET
21	10-69035		1	SCRW, WIRE CABLE TO STARTER MOTOR (5/8")
22	57247		1	STOP, RUBBER - STARTER MOTOR
23	23-56774		AR	SPACER, COLLAR TO TOP MOUNTING CAP
24	56703		2	COLLAR, RUBBER - STARTER MOTOR MOUNT
25	50-57465A1		1	STARTER MOTOR ASSEMBLY UNITED STATES 3752619 AND BELOW AUSTRALIA 8013419 AND BELOW CANADA 7024372 AND BELOW
	50-64975		1	STARTER MOTOR ASSEMBLY(PRESTOLITE)
	50-72467		1	ATARTER MOTOR ASSEMBLY(BOSCH)
26	13-26992		1	LOCKWASHER, STARTER MOTOR TERMINAL
27	11-20890		1	NUT, STARTER MOTOR TERMINAL
28	25661		1	SOLENOID, STARTER UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
29	10-21625		2	SCREW, SOLENOID TO COIL BRACKET (3/4") UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
28	89-68258		1	SOLENOID, STARTER UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
29	10-38601		2	SCREW, SOLENOID TO COIL BRACKET (3/4") UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP

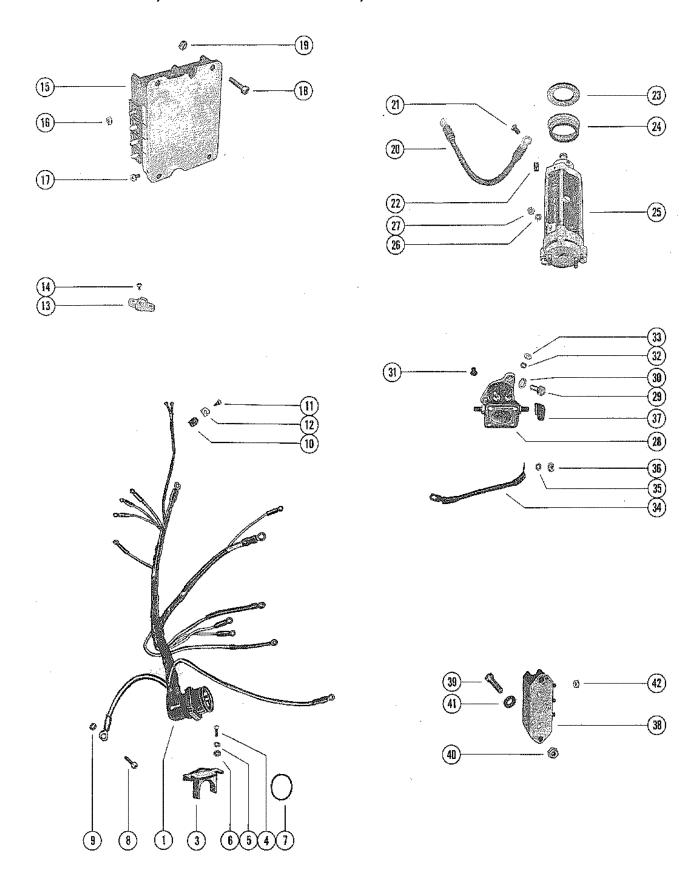


REF.				•
NO.	PART NO.	SYM.	QTY.	DESCRIPTION
30	13-26992		2	LOCKWASHER, STARTER SOLENOID FASTENING SCREW
31	26901		1	BUMPER, RUBBER - STARTER SOLENOID
32	13-26996		2	LOCKWASHER, SOLENOID TERMINAL (#10)
33	11-68219		2	NUT, SOLENOID TERMINAL (#10)
34	48396		1	CABLE, WIRE - STARTER MOTOR TO SOLENOID UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
	84-69237		1	CABLE, WERIE - STARTER MOTOR TO SOLENOID <b>UNITED</b> STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
35	13-26993		2	LOCKWASHER, SOLENOID TERMINAL (5/16")
36	11-68292		2	NUT, WOLENOID TERMINAL (5/16")
37	46265		1	BOOT, SOLENOID TERMINAL
38	332-2910A3		1	RECTIFIER ASSEMBLY UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
39	10-64278		2	SCREW, RECTIFIER TO MOUNTING BRACKET (1") UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
	11-64278		2	SCRW, RECTIFIER TO MOUNTING BRACKET (1") UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
40	11-46887		2	NUT, RECTIFIER MOUNTING SCREW UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
42	11-45076		3	NUT, FASTENING - RECTIFIER STATOR LEADS <b>UNITED</b> STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
38	62351A1		1	RECTIFIER ASSEMBLY UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
39	10-37656		2	SCREW, RECTIFIER TO FRONT BRACKET (5/8") UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
41	12-30164		2	WASHER, RECTIFIER SCREW UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
42	11-45076		3	NUT, STATOR LEADS TO RECTIFIER UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP

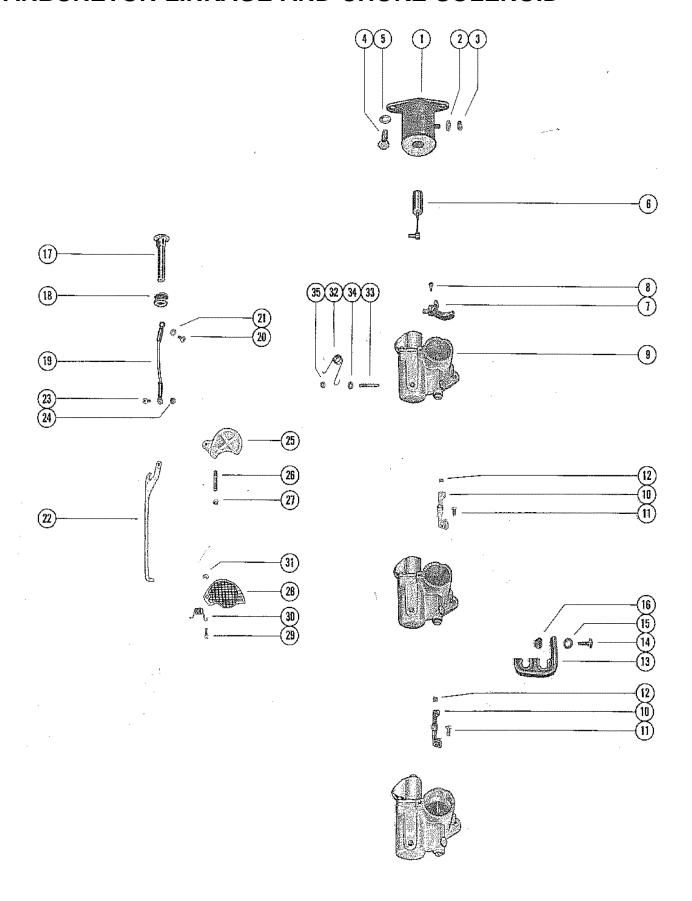


REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	54293A4		1	CHOKE SOLENOID
2	13-26996		1	LOCKWASHER, SOLENOID TERMINAL
3	11-20645		1	NUT, WOLENOID TERMINAL
4	10-25299		2	SCREW, CHOKE SOLENOID (3/4")
5	13-26993		2	LOCKWASHER, CHOKE SOLENOID SCREW
6	54283A1		1	PLUNGER AND LINK ASSEMBLY, CHOKE SOLENOID
7	52518		1	CLUSTER, THROTTLE LEVER (UPPER CARBUREOTR)
8	10-20847		1	SCREW, CLUSTER TO THROTTLE LEVER
9	1368-5259A16		3	CARBURETOR ASSEMBLY, COMPLETE(MERC 1500XS)
	1368-5038A1		3	CARBURETOR ASSEMBLY, COMPLETE UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
	1368-5259A11		3	CARBURETOR ASSEMBLY, COMPLETE UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
	1368-5701A5		3	CARBURETOR ASSEMBLY, COMPLETE UNITED STATES 4121435 THRU 4602011 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7093097
	1368-5701A13		3	CARBURETOR ASSEMBLY, COMPLETE UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
10	53720A2		2	THROTTLE PICK-UP BRACKET ASSEMBLY
11	10-66104		2	SCREW, THROTTLE BRACKET MOUNTING (3/4")
12	53665		2	INSERT, THROTTLE COUPLING
13	59757		1	BRACKET, COIL LEAD RETAINER UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
14	10-64278		1	SCREW, COIL BRACKET (1") UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
15	12-29245		1	WASHER, COIL BRACKET SCREW UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
16	11-46887		1	NUT, COIL BRACKET SCREW UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
17	73755A1		1	KNOB, CHOKE ROD
18	25-20116		1	GROMMET, CHOKE ROD
19	49589		1	STRAP, CHOKE KNOB TO CHOKE ROD
20	10-48591		1	SCREW, STRAP TO CHOKE KNOB (1/2") <b>USE WITH METAL CHOKE KNOB</b>
21	13-26996		1	LOCKWASHER, STRAP SCRW <b>USE WITH METAL CHOKE</b> KNOB
20	10-76196		1	SCREW, STRAP TO CHOKE KNOB (USE WITH NYLON CHOKE KNOB)
22	48203		1	ROD, CHOKE
23	10-48591		1	SCREW, STRAP TO CHOKE ROD (1/2")
24	11-46438		1	NUT, STRAP TO CHOKE ROD SCREW
25	48152		2	SHUTTER, CHOKE - CARBURETOR


CONTINUED ON NEXT PAGE

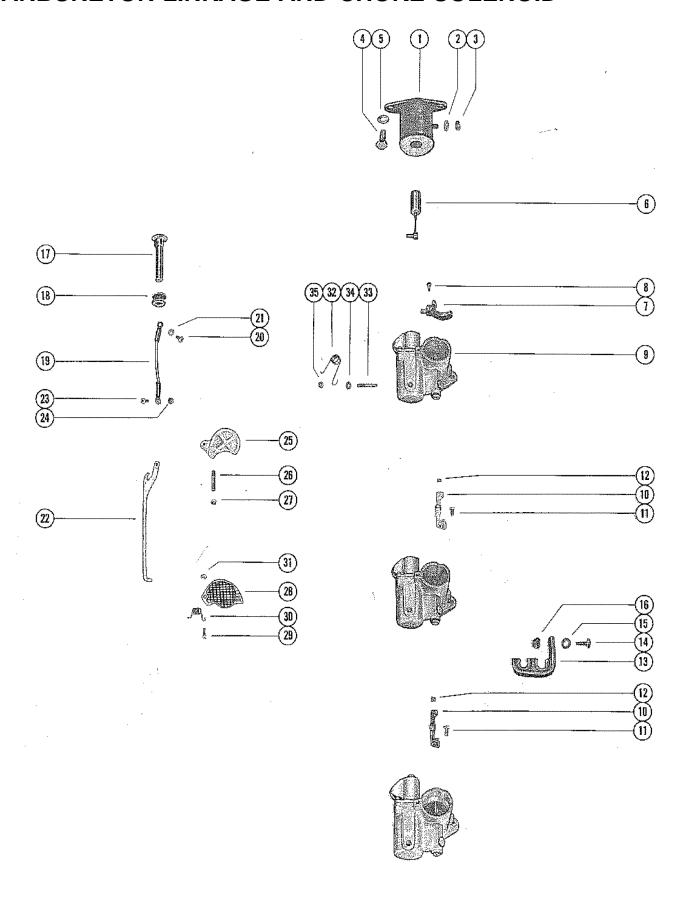

REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
26	16-52898		2	STUD, CARBURETOR - CHOKE SHUTTER PIVOT (1 1/8")
27	11-20110		2	NUT, CHOKE SHUTTER TO CARBURETOR STUD
28	35-57819		3	SCREEN ASEEMBLY, FILTER - CARBURETOR
29	10-22523		1	SCREW, LOWER CARB. FITLER SCREEN TO CARB (3/4")
	10-23015		2	SCREW, UPPER CARB. FILTER SCREEN TO CARB. (1")
	24-23015		2	SCREW, UPPER CARB. FILTER SCREEN TO CARB. (1")
30	24-57818		2	SPRING, UPPER FILTER SCREEN SCREW
31	11-20110		3	NUT, CARBURETOR FILTER SCREEN FASTENING SCREW
32	24-48230		1	SPRING, CHOKE ROD TENSION
33	16-39937		1	STUD, CHOKE ROD SPRING TO CARBURETOR (7/8")
34	23-32427		1	SPACER, CHOKE ROD SPRING STUD
35	11-46887		1	NUT, CHOKE ROD SPRING TO CARBURETOR STUD

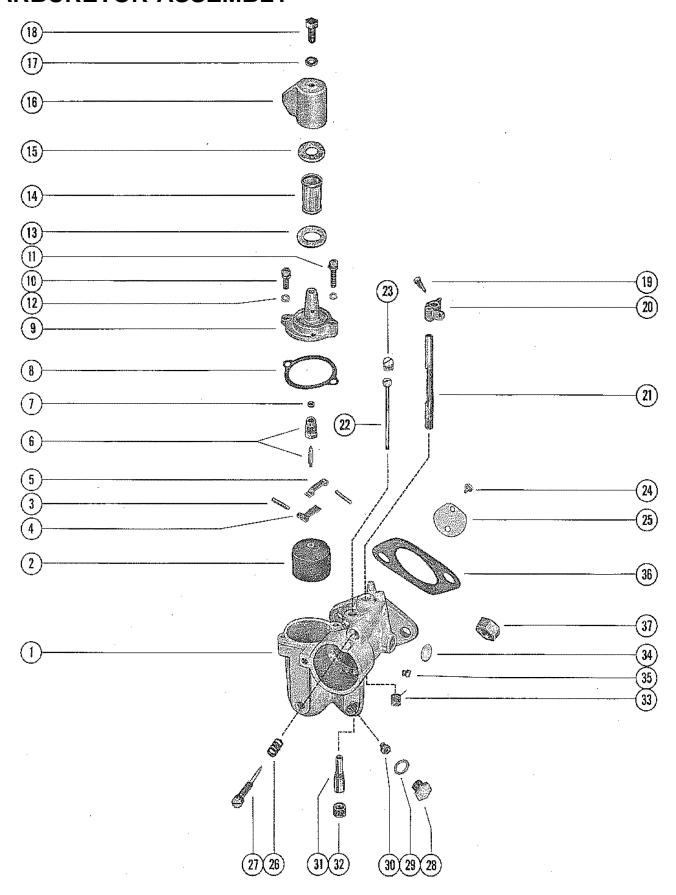


			I	CANDONE TON ASSEMBLT
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	1368-5038A1		3	CARURETOR ASSEMBLY (WMK-11)
2	1399-110A1		3	FLOAT ASSEMBLY
3			6	PIN, FLOAT LEVER PINION
4			3	LEVER, FLOAT (LOWER)
5			3	LEVER, FLOAT (UPPER)
6	4395-4868		3	INLET NEEDLE, SEAT AND GASKET
7			3	GASKET, INLET SEAT
8			3	GASKET, FLOAT BOWL COVER
9	1399-4559		3	COVER, FLOAT BOWL
10	10-52195		3	SCREW, FLOAT BOWL COVER (SHORT)
11	10-52196		3	SCREW, FLOAT BOWL COVER (LONG)
12	43-26995		6	LOCKWASHER, FLOAT BOWL COVER SCREW
13			3	GASKET, STRAINER COVER (LARGE)
14	1399-3938		3	SCREEN, FILTER
15			3	GASKET, STRAINER COVER (SMALL)
16	1399-4791		3	COVER, STRAINER
17			3	GASKET, STRAINER COVER SCREW
18	10-25822		3	SCREW, STRAINER COVER FASTENING
19	10-20847		3	SCREW, THROTTLE STOP LEVER
20	1399-97		3	LEVER, THROTTLE STOP USED ON CENTER AND LOWER CARBURETOR ONLYREPLACED WITH A-52518 CLUSTER ON UPPER CARBURETOR
21	1399-3527		3	SHAFT, THROTTLE
22			3	TUBE, IDLE
23	1395-4540		3	SCREW, BODY (IDLE TUBE)
24			6	SCREW AND LOCKWASHER, THROTTLE SHUTTER
25	1395-5108		3	SHUTTER, THROTTLE
26			3	SPRING, IDLE ADJUSTMENT SCREW
27	1399-3515		3	SCREW, IDLE ADJUSTMENT
28	1395-4541		3	SCREW, PLUG - MAIN FUEL JET CHANNEL
29			3	GASKET, JET CHANNEL PLUG SCREW
30	1399-3518		OPT.	JET, MAIN FUEL (.082)
	1399-3519		3	JET, MAIN FUEL (.080) - STANDARD
	1399-3520		OPT.	JET, MAIN FUEL (.0785)
	1399-3796		OPT.	JET, MAIN FUEL (.076)
31			3	NOZZLE, MAIN
32	1395-4542		3	SCREW, PLUG - MAIN NOZZLE
33			3	SPRING, THROTTLE SHAFT RETURN
34			3	WELCH PLUG, BODY CHANNEL

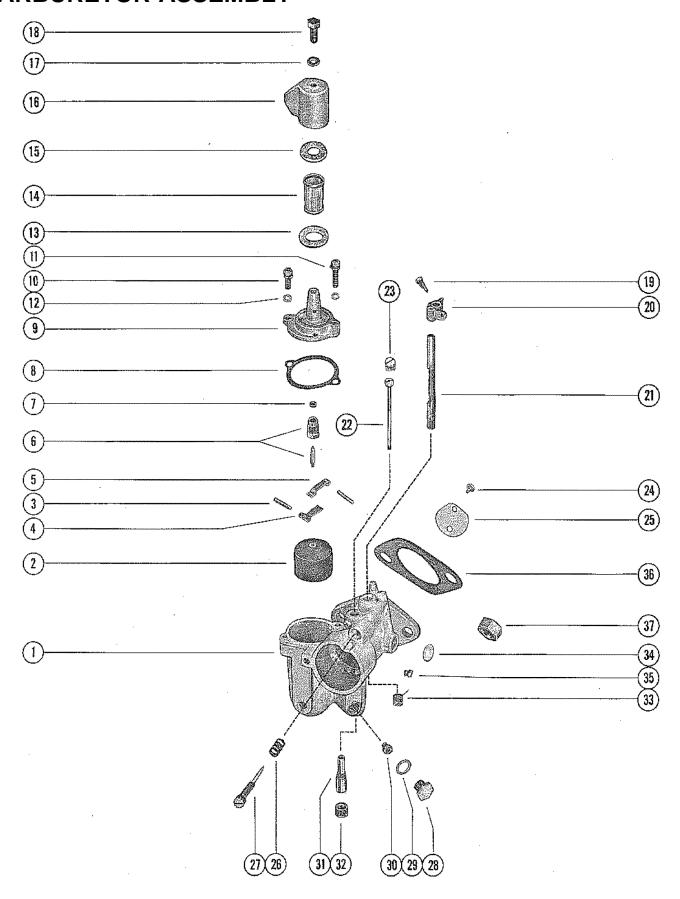


REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
35	1395-4543		3	SCREW, BODY CHANNEL
-	1399-3523		3	GASKET AND PACKAGING SET (1 PER CARBURETOR)
-	1395-5107		3	REPAIR PARTS KIT (1 PER CARBURETOR)
36	27-48164		3	GASKET, CARBURETOR FLANGE
37	11-46793		6	NUT, CARBURETOR MOUNTING STUD

# **FUEL PUMP AND FUEL LINE ASSEMBLY (SERIAL GROUP #1)**

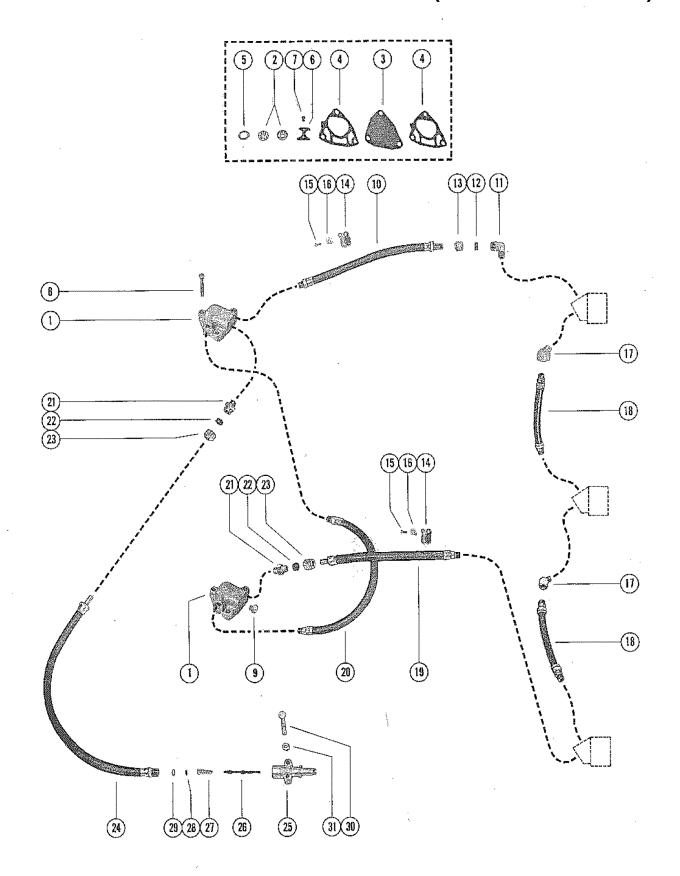

**FUEL PUMP AND FUEL LINE ASSEMBLY (SERIAL GROUP #1)** 

	CLI OWN F	AIND I	OLL	LINE ASSEMBLT (SERIAL GROUP #1)
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	55156A5		2	FUEL PUMP ASSEMBLY
2	21-30430A3		2	CHECK VALVE ASSEMBLY
3	55278A1		2	DIAPHRAGM KIT
4			4	GASKET, FUEL PUMP
5			4	GASKET, CHECK VALVE TO HOUSING
6	23004		2	RETAINER, CHECK VALVE
7	10-20037		4	SCREW, RETAINER TO HOUSING
8	10-27281		6	SCREW, FUEL PUMP MOUNTING (1 3
	10-27281		6	SCREW, FUEL PUMP MOUNTING (1 3/8")
9	22-32802		1	PLUG, PIPE - BOTTOM PUMP
10	32-33154A1		1	FUEL LINE ASSEMBLY, PUMP TO CARBURETOR (14 1/8")
11	22-30174		1	ELBOW, UPPER CARBURETOR STRAINER COVER (90)
12	22-30175		1	SLEEVE, CARBURETOR STRAINER COVER ELBOW
	22-30175		1	SLEEVE, CARBURETOR STRAINER COVER ELBOW
13	22-30177		1	NUT, UPPER CARBURETOR STRAINER COVER ELBOW
14	54-22627		2	CLIP, FUEL LINE TO CYLINDER BLOCK
15	10-30663		2	SCREW, FUEL LINE CLIP TO CYLINDER BLOCK (3/8")
16	22789		2	"D" WASHER, FUEL LINE CLIP SCREW
17	22-29085		2	ELBOW, FUEL LINE TO CARBURETOR (45)
18	32-31584A1		2	FUEL LINE ASSEMBLY, CARBURETOR TO CARBURETOR (6 9/16")
19	32-55827A1		1	FUEL LINE ASS'Y, PUMP TO CARB. (9 1/2")
20	32-55828A1		1	FUEL LINE ASS'Y, PUMP TO PUMP (13 3/4")
21	22-30468		2	FITTING, TOP AND BOTTOM PUMP
23	22-30177		2	NUT, TOP AND BOTTOM PUMP FITTING
24	32-55829		1	FUEL LINE, ADAPTOR TO LOWER FUEL PUMP (15")
25	30186		1	ADAPTOR, CHECK UNIT (FUEL LINE)
26	30187		1	STEM, CHECK UNIT ADAPTOR
27	24-30189		1	SPRING, ADAPTOR STEM
28	25-20415		1	"O" RING, ADAPTOR STEM
29	30188		1	CUP WASHER, ADAPTOR
30	10-37990		1	SCREW, ADAPTOR TO BOTTOM COWL (1 3/4")
	10-31471		1	SCREW, ADAPTOR TO BOTTOM COWL (3 1/4")
31	11-46887		2	NUT, ADAPTOR FASTENING SCREW

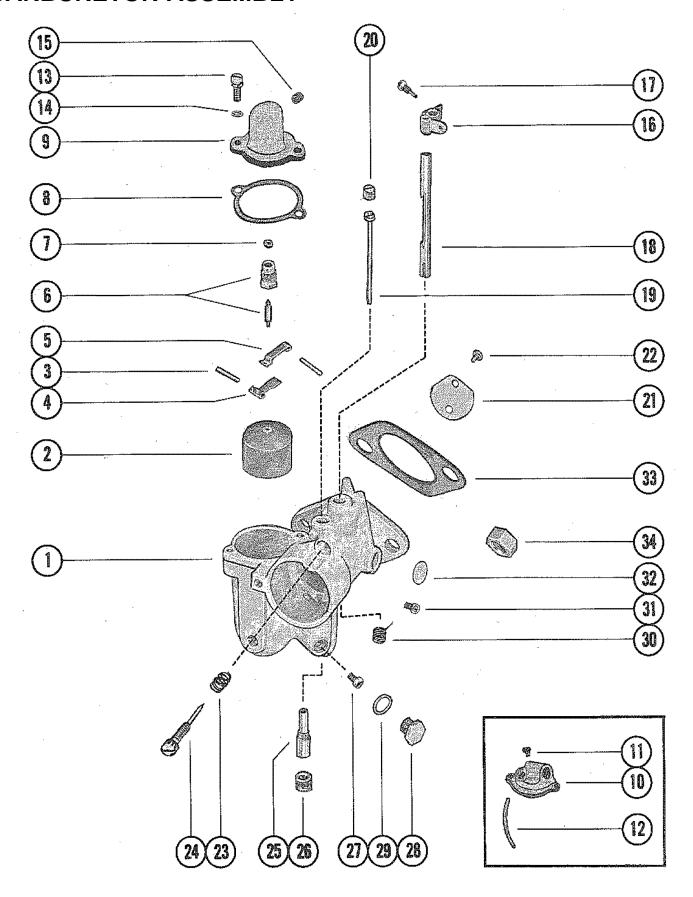


### **CARBURETOR ASSEMBLY**

			1	CARBURETUR ASSEMBLT
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	1368-5259A16		3	CARBURETOR ASSEMBLY(SHORT SHAFT)
	1368-5259A11		3	CARBURETOR ASSEMBLY(LONG SHAFT) UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
	1368-5701A5		3	CARBURETOR ASSEMBLY(LONG SHAFT) UNITED STATES 4121435 THRU 4602011 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7093097
	1368-5701A13		3	CARBURETOR ASSEMBLY(LONG SHAFT) UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
2	1395-5353		3	FLOAT ASSEMBLY
3			6	PIN, FLOAT LEVER PINION
4			3	LEVER, FLOAT (LOWER)
5			3	LEVER, FLOAT (UPPER)
6	1395-4868		3	INLET NEEDLE, SEAT AND GASKET
7			3	GASKET, INLET SEAT
8			3	GASKET, FLOAT BOWL COVER
9	1395-5261		3	COVER, FLOAT BOWL (SHORT SHAFT AND ) UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
10	1395-5680		3	COVER, FLOAT BOWL UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
11	1395-5733		3	JET, BOWL VENT UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
12	1395-5734		3	HOSE, ECONOMIZER UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
13	10-52195		6	SCREW, FLOAT BOWL COVER <b>UNITED STATES 3751850</b> THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
	10-52195		3	SCREW, FLOAT BOWL COVER UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
	1395-4804		3	SCREW, FLOAT BOWL COVER UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
14	13-26995		6	LOCKWASHER, FLOAT BOWL COVER SCREW
15	1395-4805		3	SCREEN, FILTER
16	1399-97		3	LEVER, THROTTLE STOP <b>USED ON CENTER AND LOWER</b> CARBURETOR ONLYREPLACED WITH A-52518 CLUSTER ON UPPER CARBURETOR.
17	10-20847		3	SCREW, THROTTLE STOP LEVER
18	1399-3527		3	SHAFT, THROTTLE
19			3	TUBE, IDLE
20	1395-4540		3	SCREW, BODY (IDLE TUBE)
21	1395-5666		3	SHUTTER, THROTTLE
22			6	SCREW AND LOCKWASHER, THROTTLE SHUTTER
23			3	SPRING, IDLE ADJUSTMENT SCREW
24	1399-3515		3	SCREW, IDLE ADJUSTMENT
25	<u> </u>		3	NOZZLE, MAIN
				,


**CONTINUED ON NEXT PAGE ■** 

## **CARBURETOR ASSEMBLY**

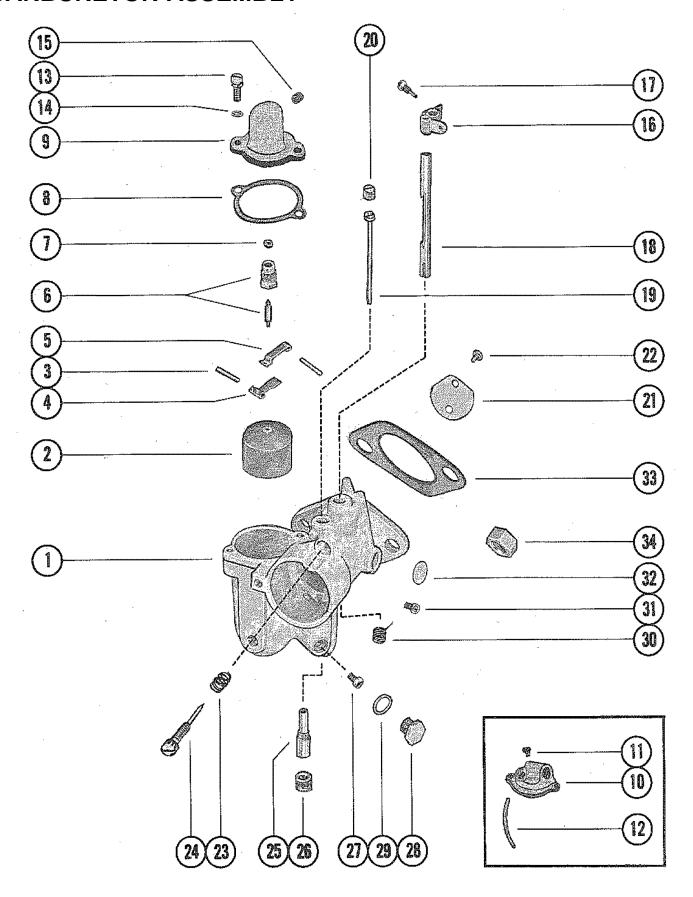


## **CARBURETOR ASSEMBLY**


REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
26	1395-4542		3	SCREW, PLUG - MAIN NOZZLE
27	1399-3518		3	JET, MAIN FUEL (.082) - STANDARD (SHORT RAFT)
	1399-3519		3	JET, MAIN FUEL (.080) - STANDARD (LONG SHAFT)
	1399-3520		OPT.	JET, MAIN FUEL (.0785)
	1399-3796		OPT.	JET, MAIN FUEL (.076)
28	1395-4541		3	SCREW, PLUG - MAIN FUEL JET CHANNEL
29			3	GASKET, JET CHANNEL PLUG SCREW
30			3	SPRING, THROTTLE SHAFT RETURN
31	1395-4543		3	SCREW, BODY CHANNEL
	1395-4543		3	SCREW, BODY CHANNEL
32			3	WELCH PLUG, BODY CHANNEL
-	1395-4808		3	GASKET AND PAKCING SET (1 PER CARBURETOR)
-	1395-5672		3	REPAIR PARTS KIT (1 PER CARBURETOR)-SHORT SHAFT
-	1395-5355		3	REPAIR PARTS KIT (1 PER CARBURETOR)-LONG SHAFT UNITED STATES 4602011 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7093097 AND BELOW
-	1395-6468		3	REPAIR PARTS KIT (1 PER CARBURETOR)-LONG SHAFT UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
33	27-48164		3	GASKET, CARBURETOR FLANGE
34	11-64809		6	NUT, CARBURETOR MOUNTING STUD

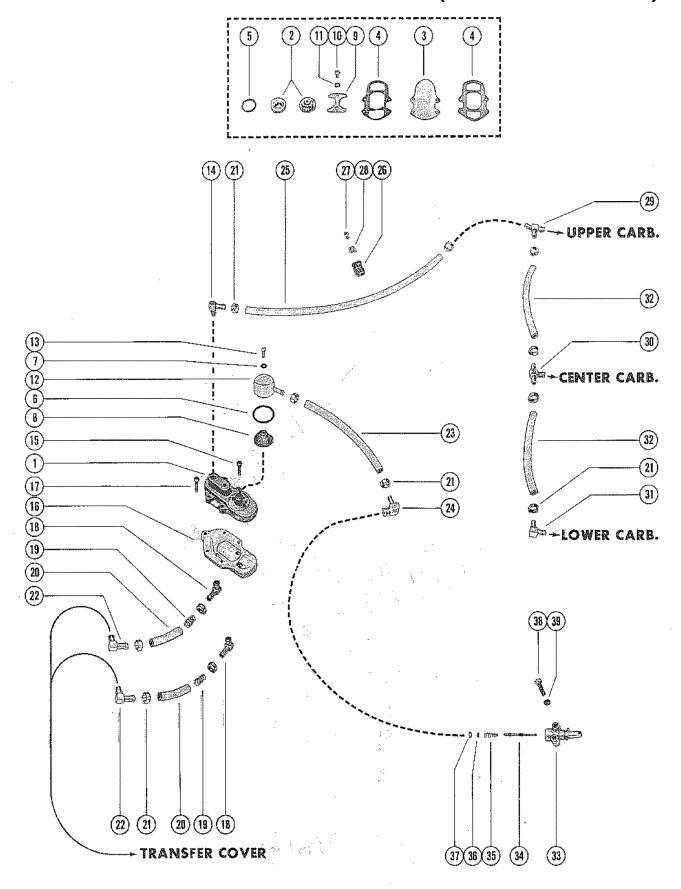


REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	66530A2	O 1 W.	1	FUEL PUMP ASSEMBLY
2	21-30430A7		1	CHECK VALVE ASSEMBLY
3	66599A1		1	DIAPHRAGM ASSEMBLY
4			2	GASEKT, DIAPHRAGM
5			2	GASKET, CHECK VALVE
6			1	"O" RING, COVER TO HOUSING
7			1	GASKET, NYLON - FILTER COVER SCREW
8	35-59072		1	SCREEN, FILTER - INLET
9	23004		1	RETAINER, CHECK VALVE
10	10-20037		2	SCREW, RETAINER TO FUEL PUMP (1/4")
11	13-26994		2	LOCKWASHER, RETAINER SCREW
12	59071		1	COVER, FUEL INLET
13	10-37370		1	SCREW, COVER TO FUEL PUMP (5/8")
14	22-64704		1	FITTING, FUEL OUTLET
15	10-66686		2	SCREW, FUEL PUMP TO BASE (1")
16	66575		1	BASE, FUEL PUMP
17	10-66687		3	SCREW, FUEL PUMP TO BOTTOM COWL (1 1/5")
18	22-64704		2	FITTING, PULSE LINE (90)
19	24-68434		2	SPRING, PULSE LINE
20	32-63146		2	PULSE LINE (3 1/4")
21	54-68424		12	CLAMP, FUEL LINE ATTACHING
22	22-64704		2	FITTING, PULSE LINE TO TRANSFER COVER (90)
23	32-63146		1	FUEL LINE, ADAPTOR TO FUEL PUMP (6 3/4")
24	22-63981		1	ELBOW, FUEL LINE TO ADAPTOR
25	32-63146		1	FUEL LINE, FULE PUMP TO UPPER CARBURETOR (15 3/4")
26	54-22627		1	CLIP, FUEL LINE ATTACHING
27	10-62568		1	SCREW, FUEL LINE CLIP (3/8")
28	69205		1	"D" WASHER, FUEL LINE CLIP SCREW
29	22-66328		1	FITTING, TEE - UPPER CARBURETOR
30	22-64706		1	FITTING, TEE - CENTER CARBURETOR
31	22-64704		1	FITTING, ELBOW - LOWER CARBURETOR
32	32-63146		2	FUEL LINE, CARBURETOR TO CARBURETOR (6 1/4")
33	30186		1	ADAPTOR, CHECK UNIT (FUEL LINE) UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
34	30187		1	STEM, CHECK UNIT ADAPTOR <b>UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782</b>
35	24-30189		1	SPRING, ADAPTOR STEM <b>UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782</b>
33	22833		1	ADAPTOR, CHECK UNIT (FUEL LINE) UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP

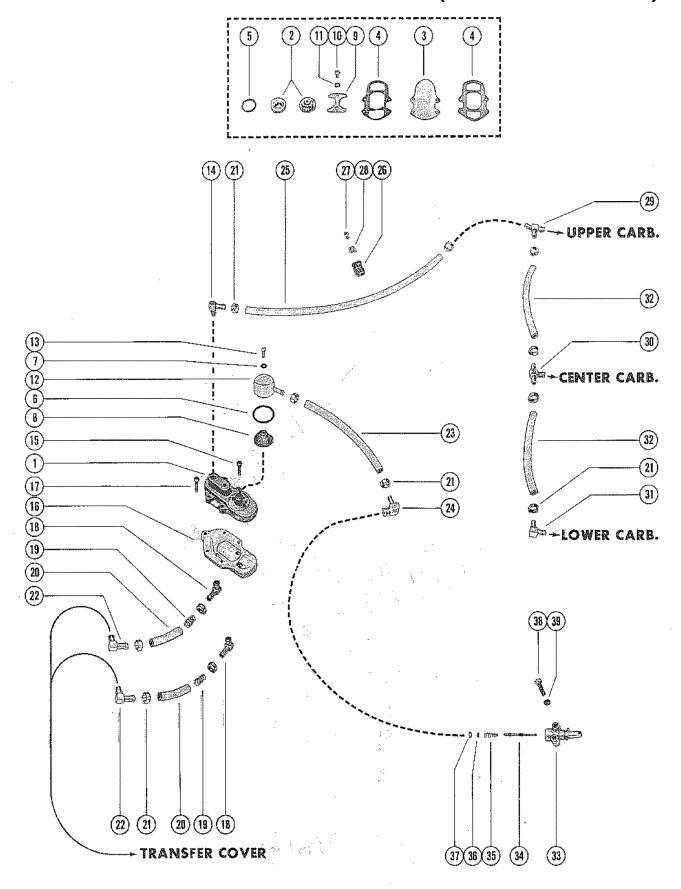

REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
34	23069		1	STEM, CHECK UNIT <b>UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP</b>
35	24-23067		1	SPRING, ADAPTOR STEM <b>UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP</b>
36	25-20415		1	"O" RING, ADAPTOR STEM
37	30188		1	CUP WASHER, ADAPTOR
38	10-37990		1	SCREW, ADAPTOR TO BOTTOM COWL (1 3/4") UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
	10-31471		1	SCREW, ADAPTOR TO BOTTOM COWL (3 1/4") UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
39	11-46887		2	NUT, ADAPTOR FASTENING SCREW <b>UNITED STATES 3751850</b> THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
38	10-69029		2	SCREW, ADAPTOR TO BOTTOM COWL (1 3/4") UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP

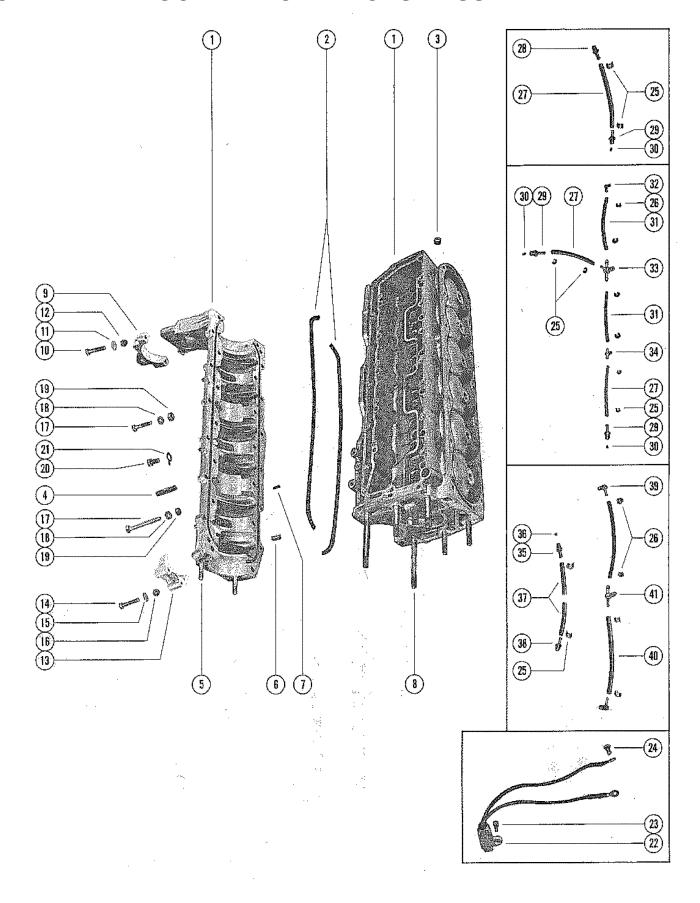


	_	1		LOOK AND OKANIKOAGE AGGENIDET
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	852-5033A5		1	CYLINDER BLOCK AND CRANKCASE ASS'Y UNITED STATES 3628317 AND BELOW AUSTRALIA 8008489 AND BELOW CANADA 7018152 AND BELOW
	852-5033A11		1	CYLINDER BLOCK AND CRANKCASE ASS'Y UNITED STATES 3628318 THRU 3751849 AUSTRALIA 8008490 THRU 8013389 CANADA 7018153 THRU 7024372
	852-5264A5		1	CYLINDER BLOCK AND CRANKCASE ASS'Y UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
	852-5574A1		1	CYLINDER BLOCK AND CRANKCASE ASS'Y UNITED STATES 4121435 THRU 4403386 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067847
-	852-6191A1		1	CYLINDER BLOCK AND CRANKCASE ASS'Y UNITED STATES 4403387 THRU 4602011
	852-6431A1		1	CYLINDER BLOCK AND CRANKCASE ASS'Y <b>UNITED STATES</b> 4602012 AND UP CANADA 7093038 AND UP
	852-5604A3		1	CYLINDER BLOCK AND CRANKCASE ASS'Y (MERC 1500XS) UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
	852-5595A3		1	CYLINDER BLOCK AND CRANKCASE ASS'Y (MERC 1500XS) UNITED STATES 4121435 THRU 4403386 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067847
	852-5595A3		1	CYLINDER BLOCK AND CRANKCASE ASS'Y (MERC 1500XS) UNITED STATES 4403387 THRU 4602011
	852-6451A3		1	CYLINDER BLOCK AND CRANKCASE ASS'Y (MAERC 1500XS) UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
2	27-53862		2	GASKET, CRANKCASE TO CYLINDER BLOCK
3	66517		5	RESTSRICTION, CRANKCASE BLEED
4	16-64280		6	STUD, CARBURATOR MOUNTING (1 3/16")
5	16-64281		2	STUD, CRANKCASE TO EXHA8UST EXTENSION PLATE (1 7/8")
6	17-63779		2	PIN, DOWEL-CRANKCASE TO CYLINDER BLOCK
7	17-63779		3	PIN, DOWWEL-DYLINDER BLOCK TO MAIN BEARING
8	76-F66193		6	STUD, CYLINDER BLOCK TO DRIVE SHAFT HSG. (4 3/16") SHORT SHAFT
	16-64282		6	STUD, CYLINDER BLOCK TO DRIVE SHAFT HSG. (4") - LONG SHAFT
9	56029		1	COVER, STARTER MOTOR BRACKET-TOP
10	10-26132		1	SCREW, TOP COVER ATTACHING (2 1/2") UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
	10-21449		1	SCREW, TOP COVER ATTACHING (2") UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
11	12-22753		2	WASHER, TOP COVER ATTACHING SCREWS UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
12	11-46793		1	NUT, COVER SCREW UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW

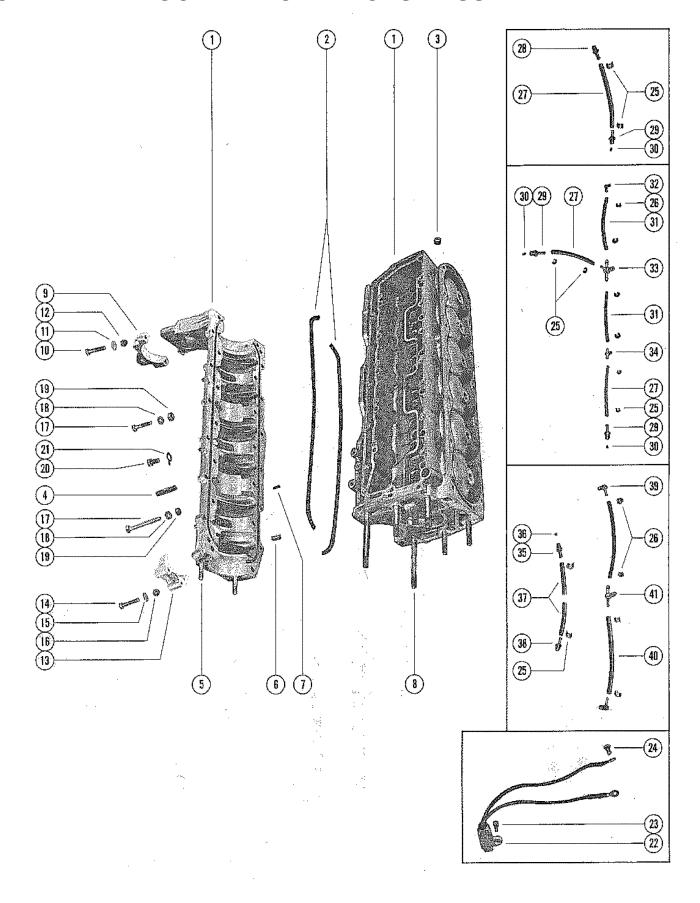


				LOCK AND CHANKCASE ASSEMBLE
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
10	10-69762		1	SCREW, TOP COVER ATTACHING (1 3/8") UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
	10-69267		1	SCREW, TOP COVER ATTACHING (1 3/4") UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
11	13-26992		2	WASHER, BOTTOM COVER ATTACHING SCREWS UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
13	76867		1	COVER, STARTER MOTOR BRACKET-BOTTOM UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
14	10-33473		1	SCREW, BOTTOM COVER ATTACHING (2 5/8") <b>UNITED</b> STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
	10-39767		1	SCREW, BOTTOM COVER ATTCHING (1 7/8") UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
15	12-22753		2	WASHER, BOTTOM COVER ATTACHING SCREWS UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
16	11-46793		2	NUT, COVER SCREW UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
14	10-69268		2	SCREW, BOTTOM COVER ATTACHING (1 7/8") UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
15	13-26993		2	WASHER, BOTTOM COVER ATTACHING SCREWS UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
17	10-33473		3	SCREW, CRANKCASE TO CYLINDER BLOCK (2 5/8") UNITED STATES 4403386 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7067847 AND BELOW
	10-32293		3	SCREW, CRANKCASE TO CYLINDER BLOCK (1 3/4") UNITED STATES 4403386 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7067847 AND BELOW
	10-21574		21	SCREW, CRANKCASE TO CYLINDER BLOCK (1 5/8") UNITED STATES 4403386 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7067847 AND BELOW
18	12-2253		26	WASHER, CRANKCASE SCREWS UNITED STATES 4403386 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7067847 AND BELOW
19	11-46793		26	NUT, CRANKCASE FASTENING SCREWS UNITED STATES 4403386 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7067847 AND BELOW
17	10-57841		3	SCREW, CRANKCASE TO CYLINDER BLOCK (2 3/4") UNITED STATES 4403387 AND UP
	10-32293		2	SCREW, CRANKCASE TO CYLINDER BLOCK (1 3/4") UNITED STATES 4403387 AND UP
	10-73657		21	SCREW, CRANKCASE TO CYLINDER BLOCK (1 1/2") UNITED STATES 4403387 AND UP

CONTINUED ON NEXT PAGE

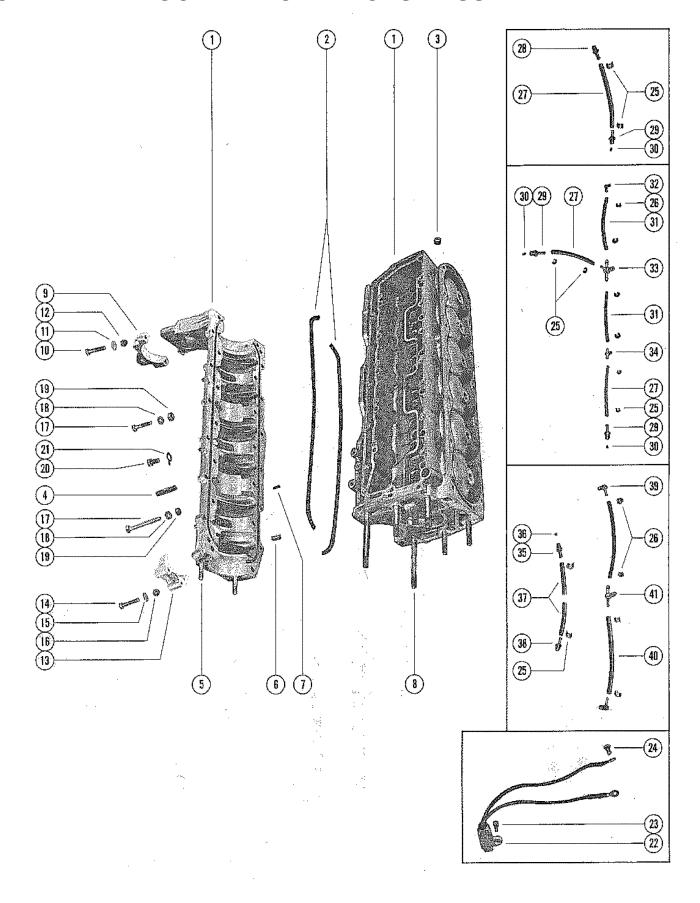


	<u> </u>			LOCK AND CRANKCASE ASSEMBLT
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
18	12-22753		26	WASHER, CRANKCASE SCREWS UNITED STATES 4403387 AND UP
19	11-29250		2	NUT, CRANKCASE SCREWS (LOWER) UNITED STATES 4403387 AND UP
20	10-20359		2	SCREW, CENTER MAIN BEARING LOCKING (1")
21	14-20091		2	TAB WASHER, BEARING LOCKING SCREW
22	58124A4		1	SWITCH, MERCURY
23	10-69235		1	SCREW, SWITCH TO FRONT MOUNTING BRACKET (1/2")
24	10-62568		1	SCREW, MERCURY SWITCH LEAD
25	54-20387		6	CLAMP, BLEED HOSE TO CONNECTOR
26	54-20386		4	CLAMP, BALANCE TUBE TO ELBOW AND TEE
27	32-54936		3	HOSE, BLEED (7 1/2", 6 1/2" AND 10") UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
28	22-65350		1	FITTING, UPPER CYLINDER BLEED <b>UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW</b>
29	22-65350A1		3	CHECK VALVE ASSEMBLY, BLEED HOSE UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
30	21-56011A2		3	CHECK VALVE ASSEMBLY <b>UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW</b>
31	32-33960		2	TUBE, BALANCE - MAIN BEARINGS (6 1/4") UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
32	22-20781		1	ELBOW, BALANCE TUBE TO MAIN BEARING SCRW UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
33	22-65349		1	TEE, BLEED HOSE TO CYLINDER BLOCK - CENTER UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
34	22-65348		1	TEE, BLEED HOSE TO CYLINDER BLOCK - LOWER UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
35	22-65350A2		1	CONNECTOR ASSEMBLY, BLEED HOSE - UPPER UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP
36	21-56011A2		1	CHECK VALVE ASSEMBLY <b>UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP</b>
37	32-54936		1	HOSE, BLEED (22") UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP
38	22-65670A1		1	CONNECTOR ASSEMBLY, BLEED HOSE - LOWER UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP
39	22-20781		1	ELBOW, BALANCE HOSE UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP
40	32-34395A1		2	HOSE, BALANCE - MAIN BEARING (6 1/4") <b>UNITED STATES</b> 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP


CONTINUED ON NEXT PAGE

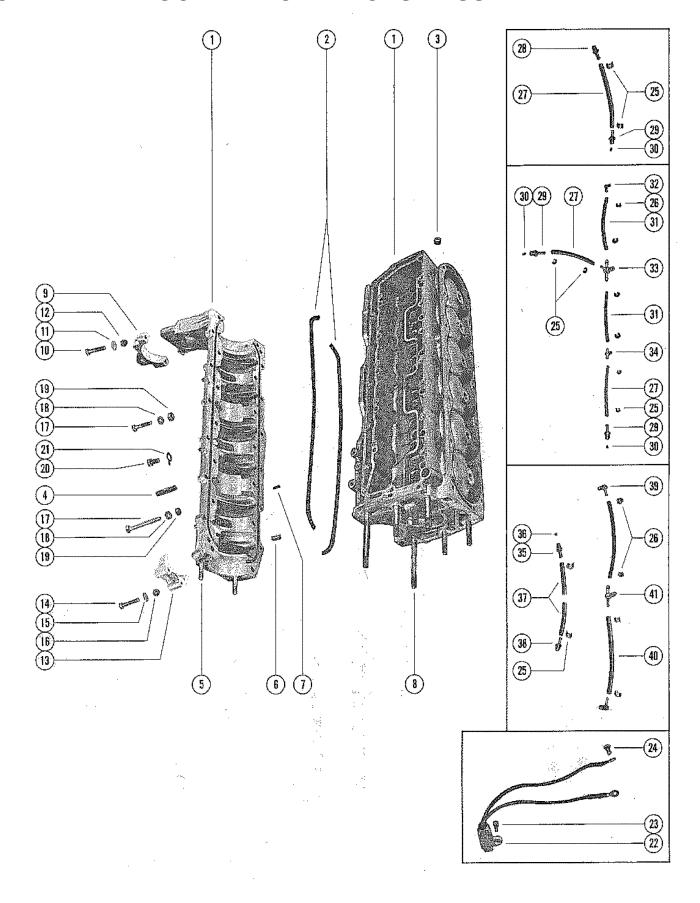


REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
41	22-20931		1	TEE, BALANCE HOSE <b>UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP</b>

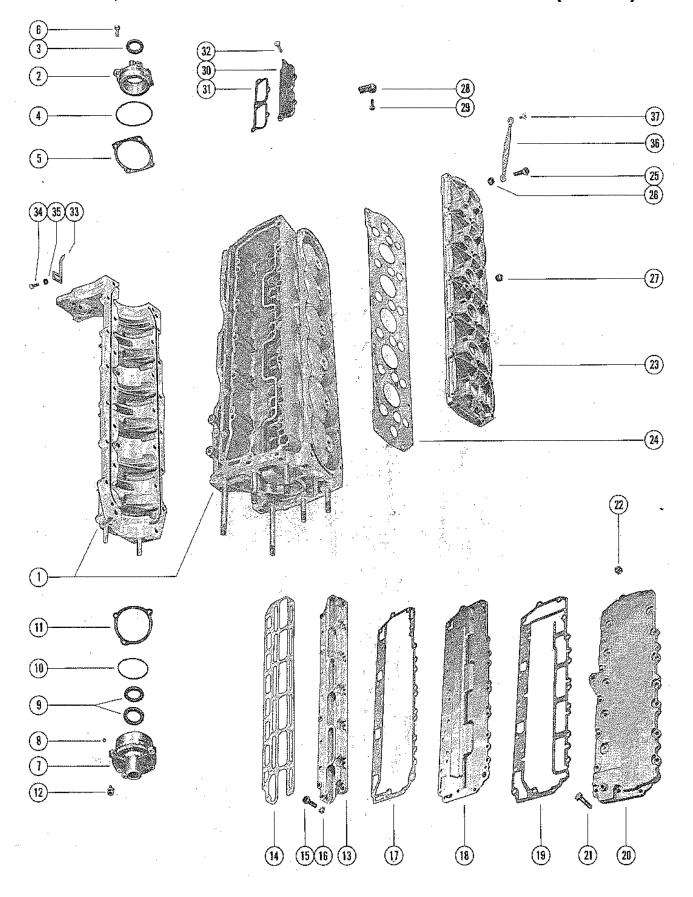


		 		DED AND EXHAUGH GOVERO (GONT)
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	852-5033A5		1	CYLINDER BLOCK AND CRANCASE ASS'Y <b>UNITED STATES</b> 3628317 AND BELOW AUSTRALIA 8008489 AND BELOW CANADA 7018152 AND BELOW
	852-5033A11		1	CYLINDER BLOCK AND CRANKCASE ASS'Y UNITED STATES 3628318 THRU 3751849 AUSTRALIA 8008490 THRU 8013389 CANADA 7018153 THRU 7024372
	852-5264A5		1	CYLINDER BLOCK AND CRANKCASE ASS'Y UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
	852-5574A1		1	CYLINDER BLOCK AND CRANKCASE ASS'Y UNITED STATES 4121435 THRU 4403386 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067847
	852-6191A1		1	CYLINDER BLOCK AND CRANKCASE ASS'Y <b>UNITED STATES</b> 4403387 THRU 4602011
	852-6431A1		1	CYLINDER BLOCK AND CRANKCASE ASS'Y <b>UNITED STATES</b> 4602012 AND UP CANADA 7093038 AND UP
	852-5604A3		1	CYLINDER BLOCK AND CRANKCASE ASS'Y (MERC 1500XS) UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
	852-5595A3		1	CYLINDER BLOCK AND CRANKCASE ASS'Y (MERC 1500XS) UNITED STATES 4121435 THRU 4403386 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067847
	852-6068A3		1	CYLINDER BLOCK AND CRANKCASE ASS'Y (MERC 1500XS) UNITED STATES 4403387 THRU 4602011
•	852-6451A3		1	CYLINDER BLOCK AND CRANKCASE ASS'Y (MERC 1500 XS) UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
2	1134-3197A1		1	END CAP ASSEMBLY, UPPER
3	26-29476		1	OIL SEAL, END CAP
4	25-47254		1	"O" RING
5	15-47248A1		AR	SHIM, END CAP TO CRANKCASE (.002-3-5-10)
6	10-30225		4	SCREW, END CAP MOUNTING (1")
7	1148-4594A1		1	END CAP ASSEMBLY, LOWER UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
	1148-5410A1		1	END CAP ASSEMBLY, LOWER <b>UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP</b>
8	21-56011A2		1	CHECK VALVE ASSEMBLY, END CAP <b>UNITED STATES</b> 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
9	26-29476		2	OIL SEAL, END CAP
10	25-32546		1	"O" RING, END CAP
11	15-20085A1		AR	SHIM, END CAP TO CRANKCASE (.002-3-5-10)
12	10-30225		3	SCREW, END CAP MOUNTING (1")
13	64944		1	COVER, WATER JACKET - CYLINDER BLOCK UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
14	27-60475		1	GASKET, WATER JACKET COVER UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW

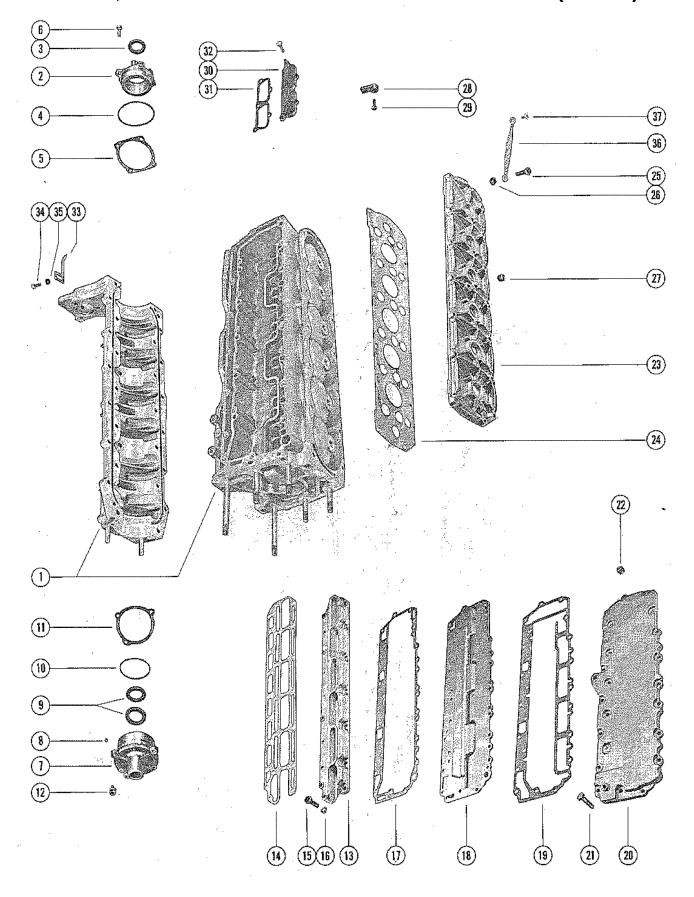


		<u> </u>		DLD AND EXHAUST COVERS (CONT)
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
13	71808		1	COVER, WATER JACKET - CYLINDER BLOCK UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
14	27-72142		1	GASKET, WATER JACKET COVER UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
15	10-53167		23	SCREW, WATER JACKET COVER TO CYLINDER BLOCK (7/8")
16	12-70132		23	WASHER, WATER JACKET COVER FASTENING SCREW
17	27-60476		1	GASKET, CYLINDER BLOCK TO BAFFLE PLATE
18	75778		1	PLATE, BAFFLE - EXHAUST MANIFOLD
19	27-60477		1	GASKET, BAFFLE PLATE TO EXHAUST MANIFOLD COVER
20	60431		1	COVER, EXHAUST MANIFOLD
21	10-53576		24	SCREW, MANIFOLD COVER MOUNTING (1 1/8")
22	22-32802		1	PLUG, PIPE - EXHUAST MANIFOLD COVER <b>UNITED STATES</b> 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP
23	1023-5070		1	COVER, CYLINDER BLOCK
24	27-64940		1	GASKET, CYLINDER BLOCK COVER
25	10-21091		16	SCREW, CYLINDER BLOCK COVER (1 1/8") UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
26	11-46887		16	NUT, COVER MOUNTING SCREW UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
25	10-53556		16	SCREW, CYLINDER BLOCK COVER (1") UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
27	22-32802		1	PLUG, PIPE - CYLINDER BLOCK COVER UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
28	37440		1	BRACKET, MOUNT SUPPORT - CYLINDER BLOCK
29	10-24234		1	SCREW, BRACKET TO CYLINDER BLOCK (1")
30	62301		2	COVER, TRANSFER (TOP AND MIDDLE)
	62978		1	COVER, TRANSFER (BOTTOM) UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
	66094		1	COVER, TRANSFER (BOTTOM) UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP
31	27-64941		1	GASKET, TRANSFER COVER
32	10-53556		16	SCREW, TRANSFER COVER MOUNTING (1")
	10-28636		11	SCREW, TRANSFER COVER MOUNTING (3/4")
33	76367		1	POINTER, TIMING UNITED STATES 3628318 AND UP AUSTRALIA 8008490 AND UP CANADA 7018153 AND UP
34	10-28636		1	SCREW, TIMING POINTER ATTACHING (3/4") UNITED STATES 3628318 AND UP AUSTRALIA 8008490 AND UP CANADA 7018153 AND UP
35	12-35462		1	WASHER, TIMING POINTER SCREW UNITED STATES 3628318 AND UP AUSTRALIA 8008490 AND UP CANADA 7018153 AND UP

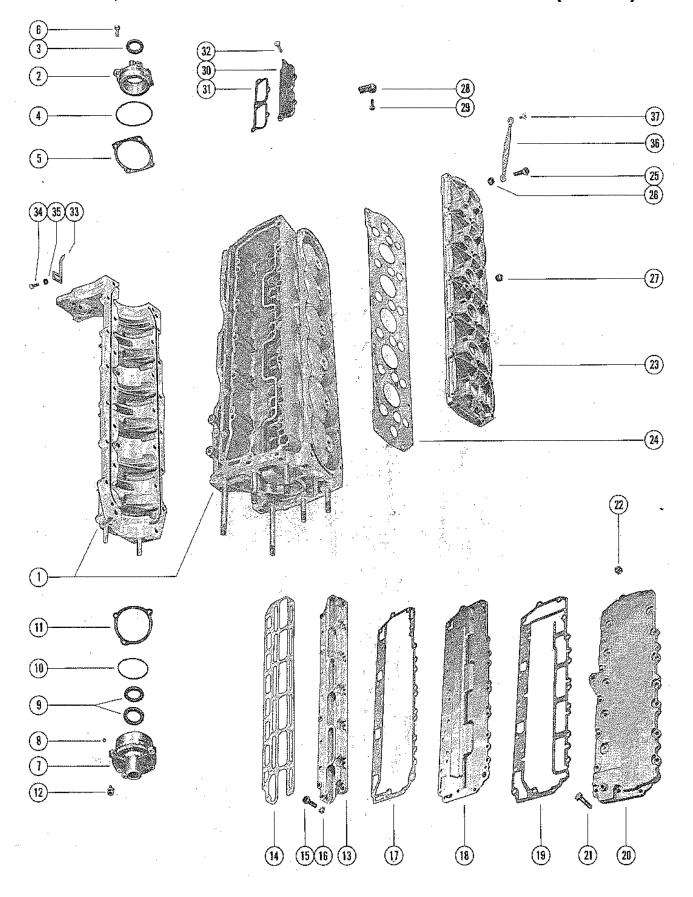


REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
36	46933A3		2	GROUND STRAP ASSEMBLY, EXHAUS COVER
37	10-62568		2	SCREW, GROUND STRAP ATTACHING (3/8")

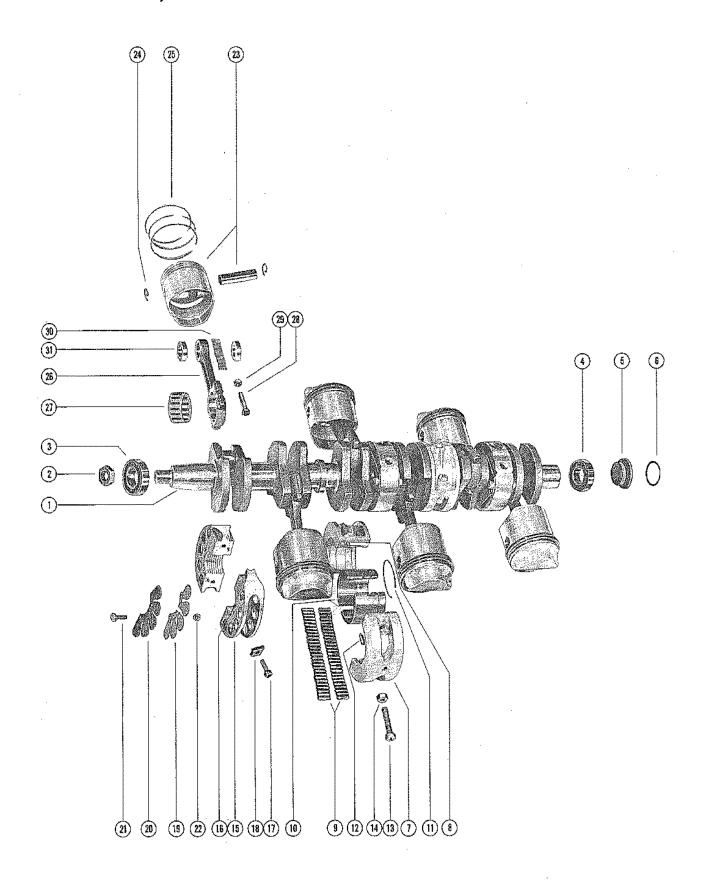

				, I TOTONO AND CONNECTING RODE
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	436-4842A3		1	CRANKSHAFT ASSEMBLY
2	11-52901		1	NUT, FLYWHEEL TO CRANKSHAFT
3	30-62567		1	BEARING, BALL - UPPER
4	30-63742		1	BEARING, BALL - LOWER
5	54196A6		1	CARRIER ASSEMBLY, "O" RING
6	65800		1	PACKING, CARRIER
7	535-3190A2		2	CENTER MAIN BEARING ASSEMBLY UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
	535-5397A4		2	CENTER MAIN BEARING ASSEMBLY <b>UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP</b>
8	17-20032		4	DOWEL PIN, CENTER MAIN BEARING
9	29-52168		112	BEARNG, NEEDLE - OUTER RACE
10	26113		2	RACE, OUTER (PAIR)
11	53-26933		2	RING, SNAP - OUTER RACE
12	17-47246		2	DOWEL PIN, STEPPED
13	10-22968		4	SCREW, CENTER MAIN BEARING CLAMPING (1 1/4")
14	11-46887		4	NUT, BEARING CLAMPING SCREW
15	540-5039A4		3	MAIN BEARING ASSEMBLY, VALVE TYPE <b>UNITED STATES</b> 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
	540-5266A4		3	MAIN BEARING ASSEMBLY, VALVE TYPE <b>UNITED STATES</b> 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP
16	17-20032		6	DOWEL PIN, MAIN BEARING
17	10-45775		6	SCREW, MAIN BEARING CLAMPING (9/16")
18	11-45774		6	NUT, MAIN BEARING CLAMPING SCREW
19	34-65312A1		3	REED SET, MATCHED - MAIN BEARING
20	34-65319		12	REED STOP, MAIN BEARING REED VALVES
21	10-62204		30	SCREW, REED STOP MOUNTING (1 3/8")
22	11-53153		30	NUT, REED STOP SCREW
23	745-6605A3		6	PISTON AND PISTON PIN ASSEMBLY
24	40-52035		12	LOCK RING, PISTON PIN
25	39-64715A12		2	RING, PISTON (1/16" THICK) UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
	39-45155A12		2	RING, PISTON (1/16" THICK) UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP
26	622-4850A3		6	CONNECTING ROD AND CAP ASSEMBLY
27	31-62596A1		6	BEARING ASSEMBLY, CRANKPIN
28	10-54803		12	SCREW, CONNECTING ROD
29	11-49091		12	NUT, CONNECTING ROD SCREW

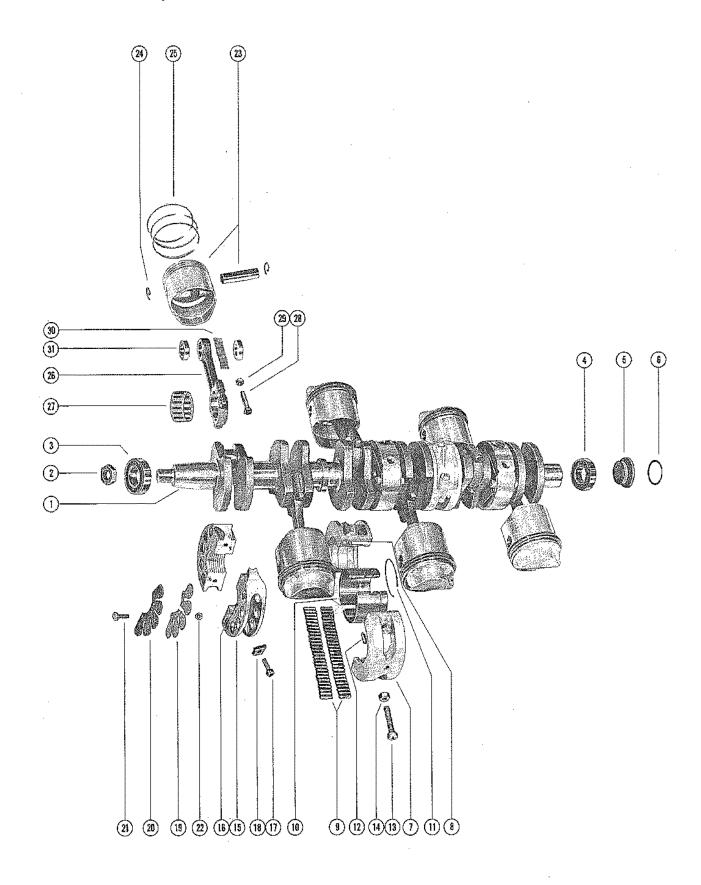


REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
30	29-47270		174	BEARING, NEEDLE - PISTON PIN
31	12-47247		12	WASHER, NEEDLE LOCATING
-	745-6697A2		6	PISTON AND PISTON PIN ASSSEMBLY .015 OVERSIZE PISTONS AND RINGS
-	39-49839A12		2	RING, PISTON (1/16" THICK) .015 OVERSIZE PISTONS AND RINGS UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
_	39-45204A12		2	RING, PISTON (1/16" THICK) .015 OVERSIZE PISTONS AND RINGS UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP

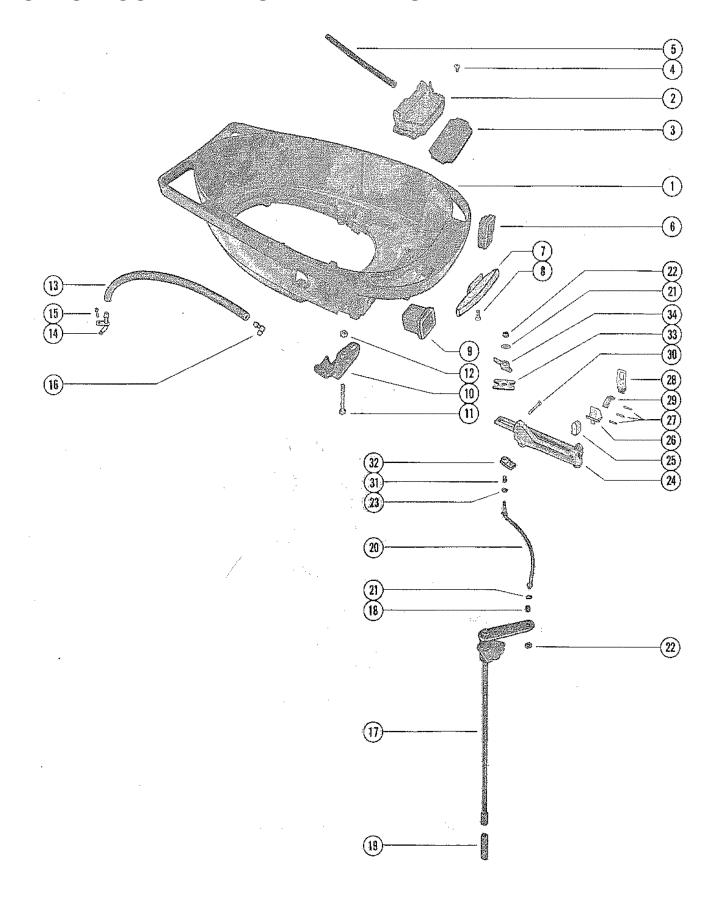


REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION		
1	2115-3919		1	COWL, BOTTOM UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW		
	2115-5269		1	COWL, BOTTOM UNITED STATES 3751850 THRU 4602011 AUSTRALIA 8013390 THRU 8034895 CANADA 7024373 THRU 7093097		
	2115-6462		1	COWL, BOTTOM UNITED STATES 4602012 AND UP CANADA 7093038 AND UP		
2	52862A2		1	DRIP TRAY ASSEMBLY, BOTTOM COWL		
3	37940		1	PAD, SOUND - DRIP TRAY		
4	10-48408		4	SCREW, DRIP TRAY TO BOTTOM COWL (1/2")		
5	32-34395A1		1	HOSE, DRIP TRAY TO BOTTOM COWL (8")		
6	39616		1	BOOT, CONTROL CABLES - BOTTOM COLW		
7	76369		1	SPACER, BOTTOM COWL (COWL FRONT COVER)		
8	10-48591		2	SCREW, SPACER TO BOTTOM COWL (1/2")		
9	37637		1	BOOT, FUEL CONNECTOR - BOTTOM COWL		
10	37445		1	SUPPORT, WIRING HARNESS - BOTTOM COWL		
11	10-37990		1	SCREW, SUPPORT TO BOTTOM COWL (1 3/4") UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW		
	10-31471		1	SCREW, SUPPORT TO BOTTOM COWL (3 1/4") UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW		
12	11-46887		2	NUT, SUPPORT SCREW UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW		
11	10-69029		2	SCREW, SUPPORT TO BOTTOM COWL (1 3/4") UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP		
13	32-34395A1		1	HOSE, TELL TALE - EXHAUST COVER TO BOTTOM COWL (16")		
14	52889		1	NOZZLE, TELL TALE HOSE TO BOTTOM COWL		
15	10-48408		1	SCREW, TELL TALE NOZZLE TO BOTTOM COWL (1/2")		
16	22-25885		1	ELBOW, TELL TALE HOSE TO EXHAUST COVER		
17	60304A15		1	SHIFT SHAFT ASSEMBLY, UPPER (SHORT SHAFT) <b>UNITED STATES 4403387 THRU 4602011</b>		
	60304A16		1	SHIFT SHAFT ASSEMBLY, UPPER (LONG SHAFT) <b>UNITED STATES 4403387 THRU 4602011</b>		
18	23-26600		1	BUSHING, SHIFT SHAFT <b>UNITED STATES 4403387 THRU 4602011</b>		
19	55692		1	COUPLING, SHIFT SHAFT <b>UNITED STATES 4403387 THRU 4602011</b>		
17	60304A45		1	SHIFT SHAFT ASSEMBLY, UPPER (SHORT SHAFT) <b>UNITED STATES 4602012 AND UP CANADA 7093038 AND UP</b>		
	60304A44		1	SHIFT SHAFT ASSEMBLY, UPPER (LONG SHAFT) <b>UNITED STATES 4602012 AND UP CANADA 7093038 AND UP</b>		
20	48047A1		1	LINK ROD ASSEMBLY		
21	12-35462		2	WASHER, LINK ROD		

CONTINUED ON NEXT PAGE

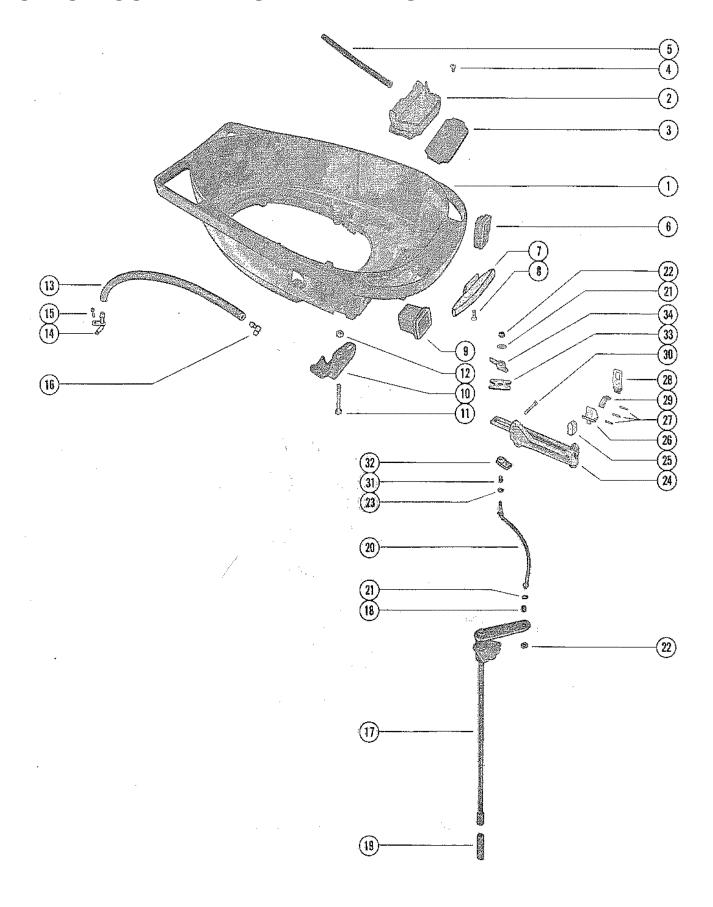


REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
22	11-35045		1	NUT, LINK ROD
23	13-29720		1	WASHER, WAVE - LINK ROD
24	52732		1	BRACKET, ANCHOR - CONTROL CABLES
25	39519		1	CAP, BARREL RETAINER - ANCHOR BRACKET
26	39618		1	LEVER, NYLON - SHIFT CABLE LOCKING
27	17-47175		3	PIN, LOCKING LEVER AND COVER FASTENING
28	39667		1	COVER, NYLON - SHIFT CABLE
29	65799		1	LINK, LOCKING LEVER TO COVER
30	10-24234		3	SCREW, ANCHOR BRACKET TO CYLINDER BLOCK (1")
31	24-20099		1	SPRING, LINK ROD TO GUIDE BLOCK
32	37896		1	GUIDE BLOCK, LINK ROD
33	52100		1	WEAR PLATE, LINK ROD
34	38279		1	LATCH, CONTROL CABLE FASTENING - ANCHOR BRACKET

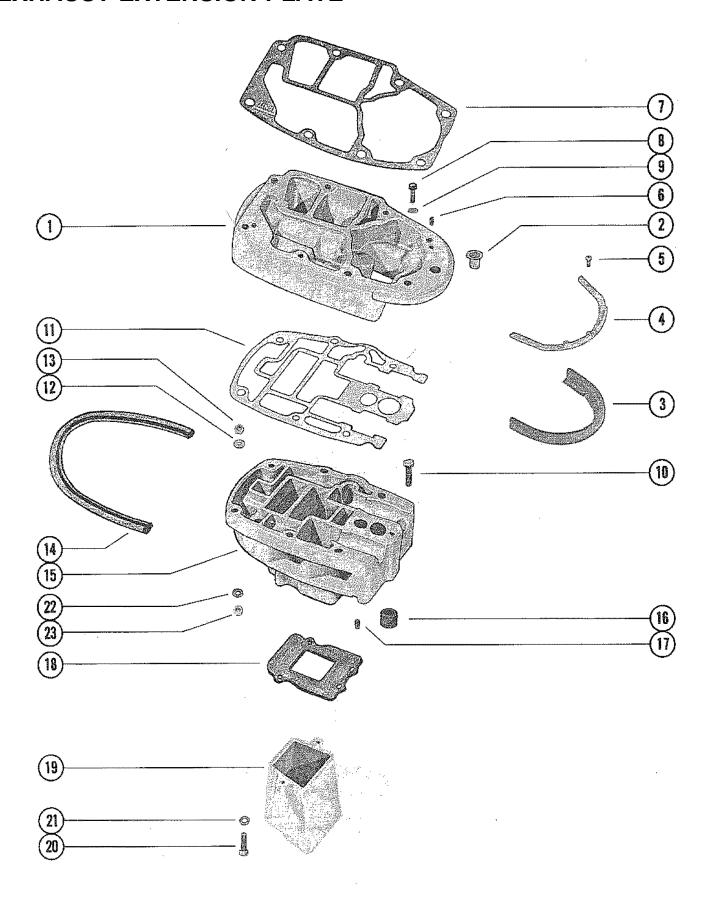


				I	
	DESCRIPTION	QTY.	SYM.	PART NO.	REF. NO.
LOW	PLATE ASSEMBLY, EXHAUT EXTESNION <b>UNITED STATE</b> 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW	1		64165A1	1
	PLATE ASSEMBLY, EXHASUT EXTENSION <b>UNITED STAT</b> 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP	1		66096A1	
	BUSHING, NYLON - EXHAUST EXTENSION PLATE UN STATES 3751850 AND UP AUSTRALIA 8013390 AND U CANADA 7024373 AND UP	1		23-27132	2
	SEAL, EXHAUST EXTENSION PLATE	1		37918	3
	STRIP, RETAINING - EXHAUST EXTENSION PLATE SE	1		38032	4
PLATE	SCREW, SEAL AND RETAINING STRIP TO EXT. PLATE (1/2")	5		10-37571	5
	DOWEL PIN, EXHAUST EXTENSION PLATE	2		17-23784	6
	GASKET, POWERHEAD TO EXTENSION PLATE UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW	1		27-64173	7
	GASKET, POWERHEAD TO EXTENSION PLATE UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 TH 8028039 CANADA 7024373 THRU 7048782	1		27-66101	
	GASKET, POWERHEAD TO EXTENSION PLATE UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP	1		27-69238	
	SCREW, ADAPTOR PALTE ATTACHING (5/16") UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW	1		10-62644	8
	LOCKWASHER, ADAPTOR PLATE SCREW UNITED STATI 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW	1		13-26993	9
	SCREW, ADAPTOR PLATE TO HOUSING PLATE (2") UNIT STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP	2		10-66023	8
2") UNITED O UP	SCREW, HOUSING PLATE TO DRIVE SHAFT HSG. (2") UN STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP	7		10-66023	10
	GASKET, PLATE TODRIVE SHAFT HSG. PLATE UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW	1		27-60945	11
	GASKET, PLATE TO DRIVE SHAFT HSG. PLATE <b>UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP</b>	1		27-66102	
	WASHER, DRIVES SHAFT HOUSING STUD UNITED STAT 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW	7		12-34437	12
	NUT, DRIVE SHAFT HOUSING STUD <b>UNITED STATES 37</b> : <b>AND BELOW AUSTRALIA 8013389 AND BELOW CANADA</b> <b>7024372 AND BELOW</b>	7		11-64809	13
	SEAL, DRIVE SHAFT HOUSING PLATE	1		26-60898	14
	PLATE ASSEMBLY, DRIVE SHAFT HOUSING UNITED STA 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW	1		64164A2	15
	CANADA 7048783 AND UP  SCREW, ADAPTOR PALTE ATTACHING (5/16") UNITISTATES 3751849 AND BELOW AUSTRALIA 8013389 BELOW CANADA 7024372 AND BELOW  LOCKWASHER, ADAPTOR PLATE SCREW UNITED S 3751849 AND BELOW AUSTRALIA 8013389 AND BE CANADA 7024372 AND BELOW  SCREW, ADAPTOR PLATE TO HOUSING PLATE (2") STATES 3751850 AND UP AUSTRALIA 8013390 AND CANADA 7024373 AND UP  SCREW, HOUSING PLATE TO DRIVE SHAFT HSG. (2 STATES 3751850 AND UP AUSTRALIA 8013390 AND CANADA 7024373 AND UP  GASKET, PLATE TODRIVE SHAFT HSG. PLATE UNIT STATES 3751849 AND BELOW AUSTRALIA 8013389 BELOW CANADA 7024372 AND BELOW  GASKET, PLATE TO DRIVE SHAFT HSG. PLATE UNIT STATES 3751850 AND UP AUSTRALIA 8013390 AND CANADA 7024373 AND UP  WASHER, DRIVES SHAFT HOUSING STUD UNITED S 3751849 AND BELOW AUSTRALIA 8013389 AND BE CANADA 7024372 AND BELOW  NUT, DRIVE SHAFT HOUSING STUD UNITED STATE AND BELOW AUSTRALIA 8013389 AND BE CANADA 7024372 AND BELOW  SEAL, DRIVE SHAFT HOUSING PLATE  PLATE ASSEMBLY, DRIVE SHAFT HOUSING UNITED S 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW SEAL, DRIVE SHAFT HOUSING PLATE	1 2 7 1 7 1		13-26993 10-66023 10-66023 27-60945 27-66102 12-34437 11-64809 26-60898	9 8 10 11 12 13

**CONTINUED ON NEXT PAGE ■** 

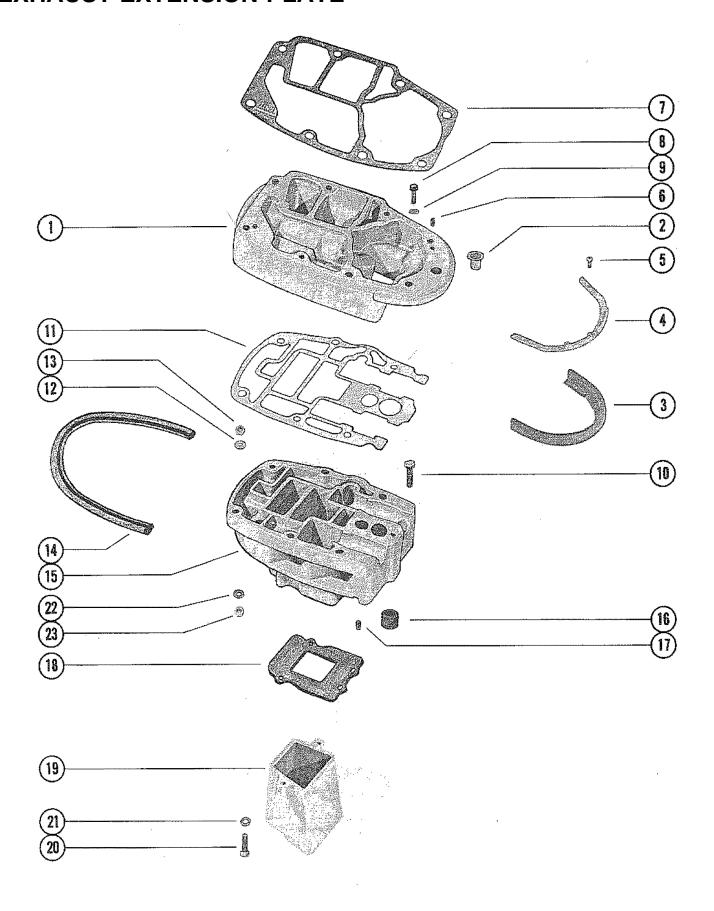

REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
15	66098A2		1	PLATE ASSEMBLY, DRIVE SHAFT HOUSING UNITED STATES 3751850 THRU 4403386 AUSTRALIA 8013390 THRU 8034895 CANADA 7024373 THRU 7067847
	74257A3		1	PLATE ASSEMBLY, DRIVE SHAFT HOUSING UNITED STATES 4403387 AND UP
16	26-38970		1	SEAL, RUBBER - WATER INTAKE TUBE (DRIVE SHAFT HSG.)
17	17-23784		2	DOWEL PIN, DRIVE SHAFT HOUSING PLATE
18	27-62362		1	GASKET, MEGAPHONE TO DRIVE SHAFT HOUSING PLATE
19	60437		1	MEGAPHONE, EXHAUST
20	10-60480		3	SCREW, MEGAPHONE TO DRIVE SHAFT HOUSING PALTE (1 1/8")
21	12-29245		3	WASHER, MEGAPHONE SCREW
22	12-25970		6	WASHER, POWERHEAD STUD
23	11-34932		6	NUT, POWERHEAD STUD


## **SWIVEL BRACKET ASSEMBLY**

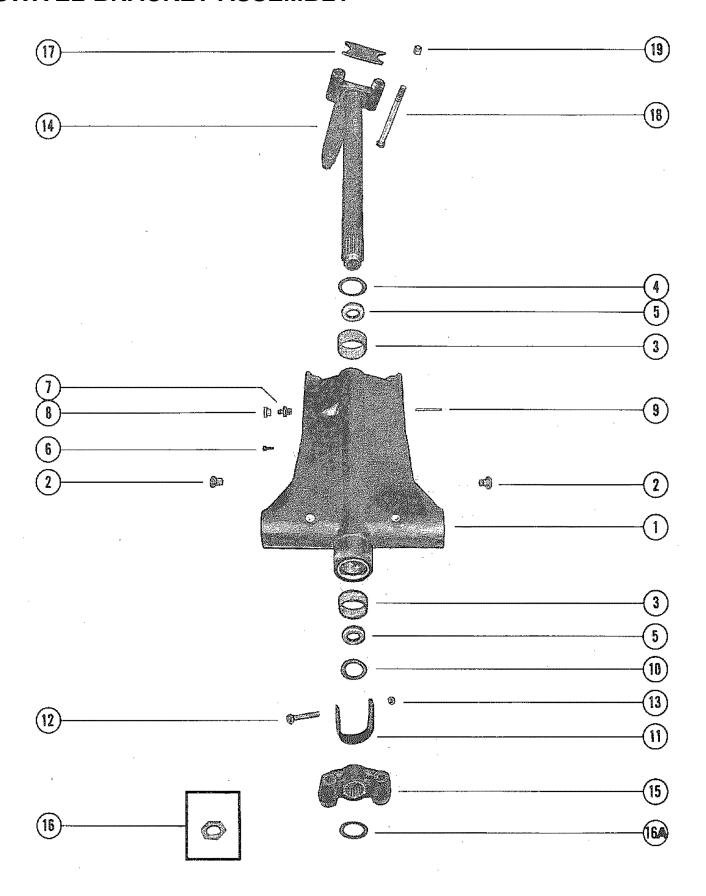

### **SWIVEL BRACKET ASSEMBLY**


		1		SWIVEL BRACKET ASSEMBLT
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	1453-5597A2		1	SWIVEL BRACKKET ASSEMBLY (SHOR SHAFT) UNITED STATES 4319879 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7067247 AND BELOW
	1447-5596A3		1	SWIVEL BRACKET ASSEMBLY (LONG SHAFT) <b>UNITED</b> STATES 4319879 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7067247 AND BELOW
	1453-6019A2		1	SWIVEL BRACKET ASSEMBLY (SHORT SHAFT) <b>UNITED STATES 4319880 THRU 4602011 CANADA 7067248 THRU 7093097</b>
	1447-6017A4		1	SWIVEL BRACKET ASSEMBLY (LONG SHAFT) <b>UNITED STATES 4319880 THRU 4602011 CANADA 7067248 THRU 7093097</b>
	1482-6386A4		1	SWIVEL BRACKET ASSEMBLY (LONG SHAFT) UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
2	23-69132		2	BUSHING, REVERSE LOCK PIVOT SHAFT <b>UNITED STATES</b> 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
3	23-69341		2	BUSHING, SWIVEL BRACKET <b>UNITED STATES 4121435</b> AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
4	12-69342		1	WASHER, SWIVEL PIN - UPPER UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
5	23-37448		2	OIL SEAL, SWIVEL BRACKET
6	10-47828		1	SCREW, DRIVE - SWIVEL BRACKET
7	22-69059		1	FITTING, GREASE - SWIVEL BRACKET <b>UNITED STATES</b> 4319879 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7067247 AND BELOW
8	29359		1	LUBRICAP, SWIVEL BRACKET GREASE FITTING UNITED STATES 4319879 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7067247 AND BELOW
7	22-74036		3	FITTING, GREASE - SWIVEL BRACKET <b>UNITED STATES</b> 4319880 THRU 4602011 CANADA 7067248 THRU 7093097
	22-74036		4	FITTING, GREASE - SWIVEL BRACKET <b>UNITED STATES</b> 4602012 AND UP CANADA 7093038 AND UP
9	17-25598		1	PIN, RAVERSE LOCK SPRING (NOT USED WITH FULL POWER TRIM)
10	12-69380		1	WASHER, SWIVEL PIN - LOWER
11	28205		1	STRAP STOP, DRIVE SHAFT HOUSING TO SWIVEL BRACKET
12	10-56743		1	SCREW, STOP TO DRIVE SHAFT HSG. (3 1/8") - SHORT SHAFT
	10-28200		1	SCREW, STOP TO DRIVE SHAFT HSG. (2 7/8") - LONG SHAFT
13	11-25269		1	NUT, STOP FASTENING SCREW
14	17-49841A1		1	SWIVEL PIN AND ARM ASSEMBLY (SHORT SHAFT) - YOKE IS ATTACHED YOKE IS ATTACHED WITH A NUT
	17-49840A1		1	SWIVEL PIN AND ARM ASSEMBLY (LONG SHAFT) <b>YOKE IS</b> ATTACHED WITH A NUT
15	37419		1	YOKE, BOTOM YOKE IS ATTACHED WITH A NUT
16	11-37424		1	NUT, BOTTOM YOKE ATTACHING YOKE IS ATTACHED WITH A NUT

## **SWIVEL BRACKET ASSEMBLY**

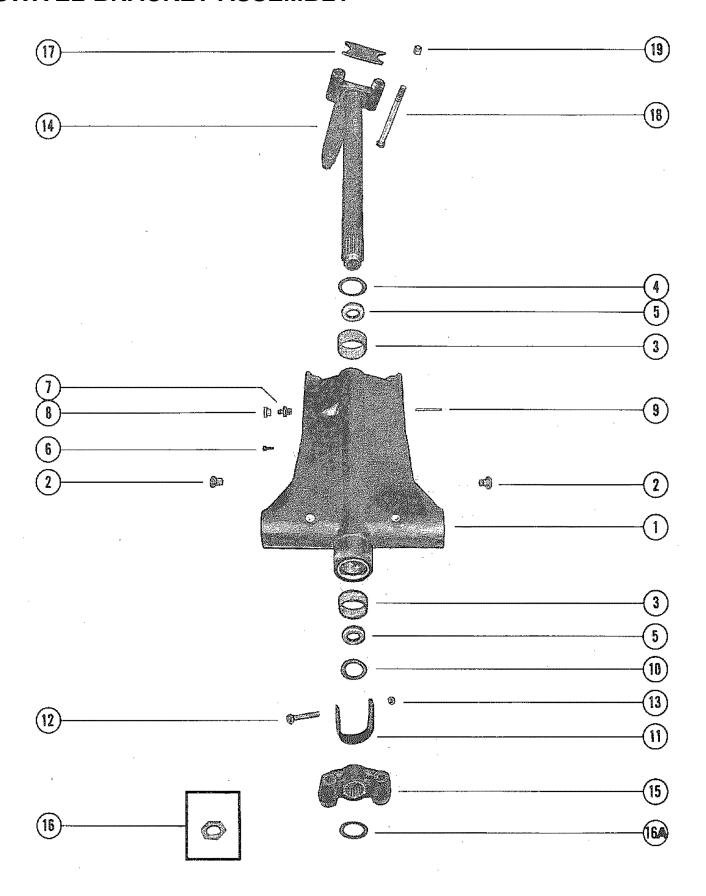


## **SWIVEL BRACKET ASSEMBLY**


REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
14	17-73594A1		1	SWIVEL PIN AND ARM ASSEMBLY (SHORT SHAFT) YOKE IS ATTACHED WITH A RETAINING RING
	17-73593A1		1	SWIVEL PIN AND ARM ASSEMBLY (LONG SHAFT) <b>YOKE IS ATTACHED WITH A RETAINING RING</b>
15	73984		1	YOKE, BOTTOM <b>YOKE IS ATTACHED WITH A RETAINING</b> RING
16A	53-73591		1	RETAINING RING, BOTTOM YOKE ATTACHING YOKE IS ATTACHED WITH A RETAINING RING
17	28203		1	BUMPER, STEERING ARM
18	10-49554		2	BOLT, STEERING ARM TO UPPER MOUNT (5 7/8")
19	11-34933		2	NUT, STEERTING ARM BOLT FASTENING

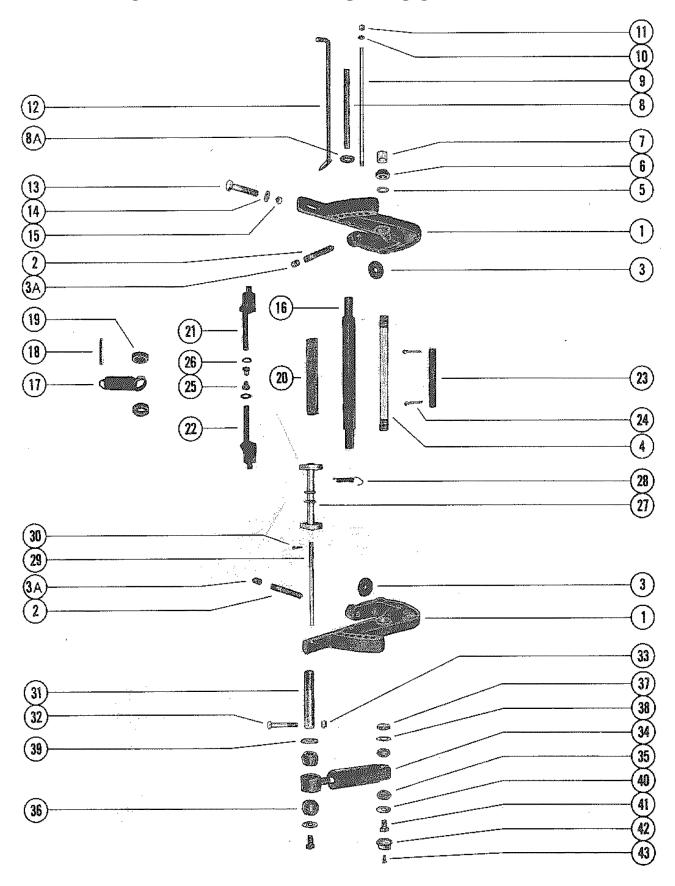


		1	<del>y L/</del>	WIF BRACKET AND REVERSE LUCK
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	1440-5520A1		2	CLAMP BRACKET ASSEMBLY UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
2	28403A3		2	THUM SCREW ASSEMBLY UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
3	12-28404		2	WASHER, THUMB SCREW UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
1	1440-5576A1		2	CLAMP BRACKET ASSEMBLY <b>UNITED STATES 4121435 THRU 4319879 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067284</b>
2	69214A1		2	THUMB SCREW ASSEMBLY <b>UNITED STATES 4121435</b> THRU 4319879 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067284
3	12-70988		2	WASHER, THUMB SCREW <b>UNITED STATES 4121435</b> THRU 4319879 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067284
1	1440-6044A2		2	CLAMP BRACKET ASSEMBLY UNITED STATES 4319880 AND UP CANADA 7067248 AND UP
2	10-73649A1		2	THUM SCREW ASSEMBLY UNITED STATES 4319880 AND UP CANADA 7067248 AND UP
3	75043		2	CAP, THUMB SCREW UNITED STATES 4319880 AND UP CANADA 7067248 AND UP
4	30664		1	TUBE, TILT - CLAMP BRACKET TO SWIVEL BRACKET
5	12-52864		2	WASHER, CLAMP BRACKET TILT TUBE
6	11-56041		2	NUT, TILT TUBE FASTENING
7	53078		2	CAP, PLASTIC - TILT TUBE
8	23-59624		1	SPACER, CLAMP BRACKET STUD
8A	12-36001		1	WASHER, CLAMP BRACKET STUD
9	16-59625		1	STUD, CLAMP BRACKET (NOT USED WITH FULL POWER TRIM)
10	13-26993		2	LOCKWASHER, CLAMP BRACKET STUD
11	11-28770		2	NUT, CLAMP BRACKET STUD
12	17-49930A1		1	TILT LOCK PIN ASSEMBLY (NOT USED WIHT FULL POWER TRIM)
13	10-68298		2	BOLT, CLAMP BRACKET TO BOAT TRANSON (LOWER)
	10-68299	1	2	BOLT, CLAMP BRACKET TO BOAT TRANSOM (UPPER)
14	12-68410	1	2	WASHER, CLAMP BRACKET BOLT (LOWER)
	12-68300		2	WASHER, CLMAP BRACKET BOLT (UPPER)
15	11-68411	1	4	NUT, CLAMP BRACKET BOLT
16	55-28416		1	PIN, UPPER SHOCK MOUNTING
17	24-28659		1	SPRING, COIL - SWIVEL BRACKET NOT USED WITH FULL POWER TRIM
18	17-38311		1	PIN, COIL SPRING MOUNTING NOT USED WITH FULL POWER TRIM
19	23-28688		2	SPACER, RUBBER - COIL SPRING POSITIONING NOT USED WITH FULL POWER TRIM

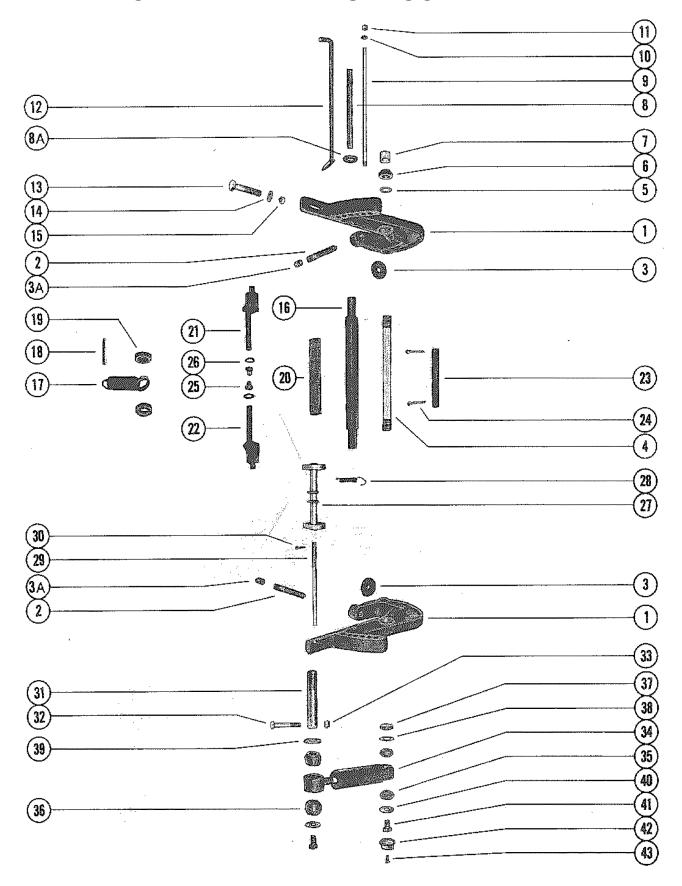

	CLAIMP BRACKET AND REVERSE LOCK						
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION			
20	63473		1	TUBE, CUSHION - SHOCK PIN (USED WITH FULL POWER TRIM) LONG SHAFT			
21	47799A1		1	TILT LOCK ASSEMBLY, STARBOARD UNITED STATES 4602011 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7093097 AND BELOW			
22	47800A1		1	TILT LOCK ASSEMBLY, PORT UNITED STATES 4602011 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7093097 AND BELOW			
23	47802		1	TUBE, TILT LOCK UNITED STATES 4602011 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7093097 AND BELOW			
24	23-47803		2	BUSHING, TILT LOCK UNITED STATES 4602011 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7093097 AND BELOW			
25	13-69150		2	WASHER, WAVE - TILT LOCK UNITED STATES 4602011 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7093097 AND BELOW			
21	76386		1	TILT LOCK ASSEMBLY, STARBOARD UNITED STATES 4602012 AND UP CANADA 7093038 AND UP			
22	76385		1	TILT LOCK ASSEMBLY, PORT UNITED STATES 4602012 AND UP CANADA 7093038 AND UP			
23	76387		1	TUBE, TILT LOCK UNITED STATES 4602012 AND UP CANADA 7093038 AND UP			
25	13-69150		1	WASHER, WAVE - TILT LOCK (STARBOARD SIDE ONLY) SER GROUP #19			
25A	26-22734		2	OIL SEAL, SWIVEL BRACKET (TILT LOCK) <b>UNITED STATES</b> 4602012 AND UP CANADA 7093038 AND UP			
25B	12-76388		1	WASHER, TILT LOCK (STARBOAR SIDE ONLY) <b>UNITED STATES 4602012 AND UP CANADA 7093038 AND UP</b>			
25C	25-62702		2	"O" RING, TILT LOCK UNITED STATES 4602012 AND UP CANADA 7093038 AND UP			
26	18-47959		2	COTTER PIN, TILT LOCK			
27	70692		1	REVERSE LOCK ASSEMBLY NOT USED WITH FULL POWER TRIM			
28	24-29821		1	SPRING, REVERSE LOCK TENSION NOT USED WITH FULL POWER TRIM			
29	56349		1	SHAFT, REVERSE LCOK PIVOT <b>NOT USED WITH FULL POWER TRIM</b>			
30	18-45882		1	COTTER PIN, REVERSE LOCK TO SHAFT <b>NOT USED WITH</b> FULL POWER TRIM			
31	55-65447		2	PIN, LOWER SHOCK MOUNTING (SHORT SHAFT)			
	55-28414		2	PIN, LOWER SHOCK MOUNTING - LONG SHAFT			
32	10-21937		2	SCREW, LOWER SHOCK PIN - LONG SHAFT			
33	11-46887		2	NUT, LOWER SHOCK PN SCREW - LONG SHAFT			
34	55-58780A2		2	SHOCK ABSORBER NOT USED WITH FULL POWER TRIM			
35	23-32171		4	BUSHIG, RUBBER - SHOCK ABSORBER (UPPER) NOT USED WITH FULL POWER TRIM			
36	23-28198		4	BUSHING, RUBBER - SHOCK ABSORBER (LOWER) NOT USED WITH FULL POWER TRIM			

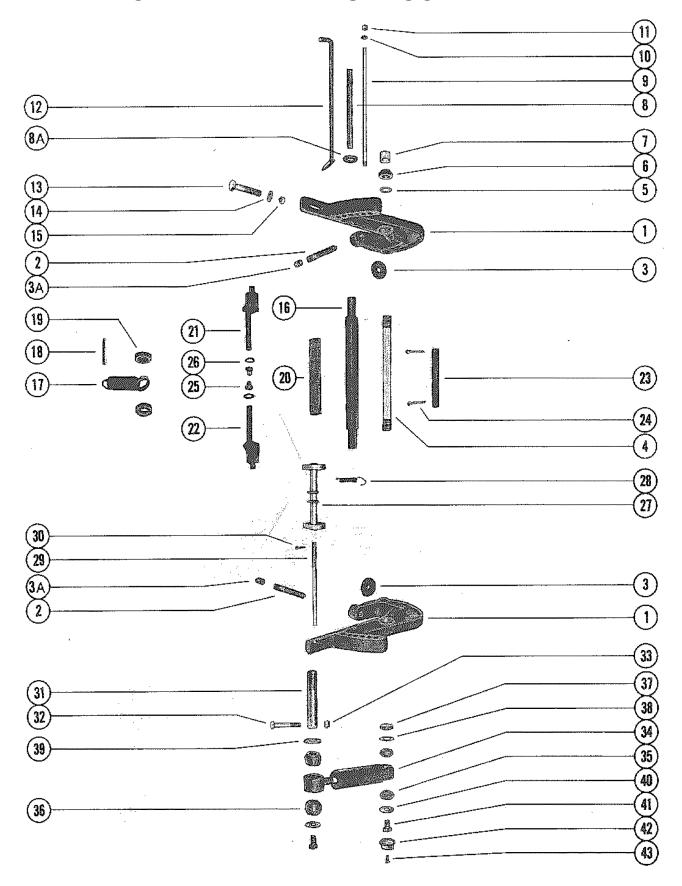


				THE DIAGREE AND REVERSE LOOK
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
37	23-28199		2	SPACER, UPPER SHOCK BUSHING TO CLAMP BRACKET- SERIAL. GROUP #18
	23-73203		2	SPACER, UPPER SHOCK BUSHING TO CLAMP BRACKET UNITED STATES 4319880 AND UP CANADA 7067248 AND UP
38	12-28196		2	WASHER, UPPER BUSHING RETAINER (INNER)
39	12-59378		2	WASHER, LOWER BUSHING RETAINER (INNER)
40	12-28421		4	WASHER, UPPER AND LOWER BUSHING RETAINER (OUTER) UNITED STATES 4602011 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7093097 AND BELOW
41	10-53077		4	SCREW, UPPER NAD LOWER SHOCK MOUNTING PIN UNITED STATES 4602011 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7093097 AND BELOW
40	12-69374		4	WASHER, UPPER AND LOWER BUSHING RETAINER (OUTER) UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
41	10-69375		4	SCREW, UPPER AND LOWER SHOCK MOUNTINGH PIN UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
42	70679		(2)4	COVER, UPER AND LOWER SHOCK MOUNTING PIN UNITED STATES 4602011 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7093097 AND BELOW
43	10-37655		(2)4	SCREW, COVER TO SHOCK MOUNTING SCREW UNITED STATES 4602011 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7093097 AND BELOW

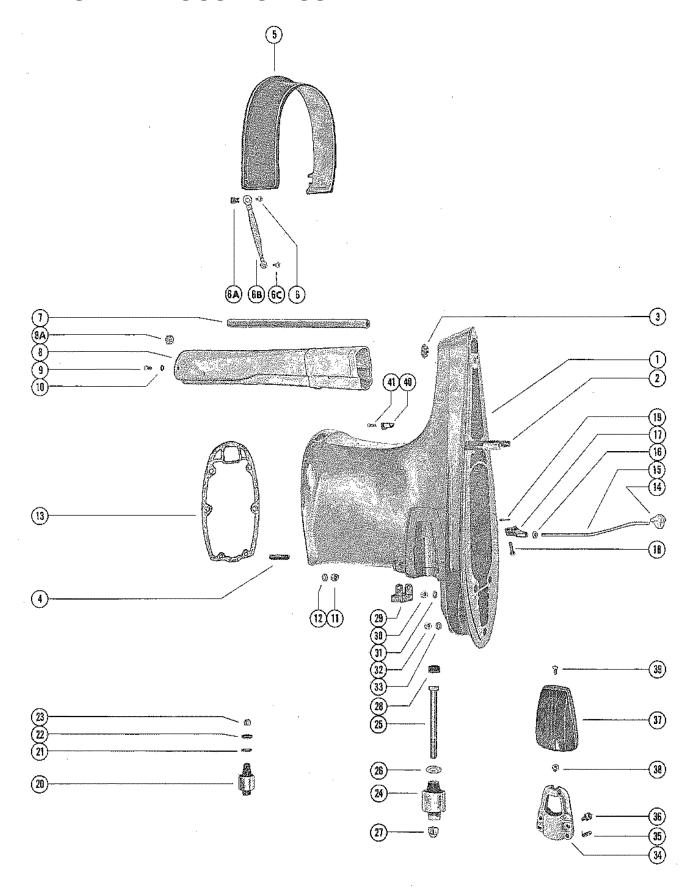


				DRIVE SHALL HOUSING ASSEMBLE
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	1575-4971A5		1	DRIVE SHAFT HOUSING ASSEMBLY (SHORT SHAFT UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
	1573-4933A3		1	DRIVE SHAFT HOUSING ASSEMBLY (LONG SHAFT) <b>UNITED</b> STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
	1575-5240A4		1	DRIVE SHAFT HOUSING ASSEMBLY (SHORT SHAFT) <b>UNITED</b> STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP
	1573-5239A4		1	DRIVE SHAFT HOUSING ASSEMBLY (LONG SHAFT) <b>UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP</b>
2	16-56295		2	STUD, DRIVE SHAFT HOUSING TO GEAR HOUSING (2 11/16")
3	19-64649		1	PLUG, PLASTIC - TRIM TAB SCREW HOLE
4	16-34378		7	STUD, DIRVE SHAFT HOUSING PLATE (2 5/16") <b>UNITED</b> STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
5	37417		1	COVER, TRIM - DRIVE SHAFT HOUSING
6	10-57807		4	SCREW, TRIM COVER TO BOTTOM COWL
6A	25-57806		4	GROMMET, PLASTIC - TRIM COVER SCREW
6B	46933A2		2	GROUND STRAP ASSEMBLY, TRIM COVER SCREW
6C	10-62568		2	SCREW, GROUND STRAP ATTACHING
7	32-62864		1	TUBE, WATER INLET - SHORT SHAFT
8	62863		1	TUBE, EXHAUST SHORT SHAFT UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
	65370		1	TUBE, EXHAUST SHORT SHAFT UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP
7	32-60897		1	TUBE, WATER INLET - LONG SHAFT
8	60435		1	TUBE, EXHAUST LONG SHAFT UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
	65369		1	TUBE, EXHAUST LONG SHAFT <b>UNITED STATES 3751850</b> AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP
8A	65638		2	BOOT, EXHASUT TUBE <b>UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP</b>
9	10-28636		2	SCREW, EXHAUST TUBE ATTACHING (3/4") UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
10	13-26992		2	LOCKWASHER, EXHAUST TUBE SCREW UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
11	11-69254		2	NUT, POWERHEAD STUDS (3/8-24)
12	12-25970		2	WASHER, POWERHEAD STUDS
13	27-64175		1	GASKET, PLATE TO DRIVE SHAFT HOUSING UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW


CONTINUED ON NEXT PAGE

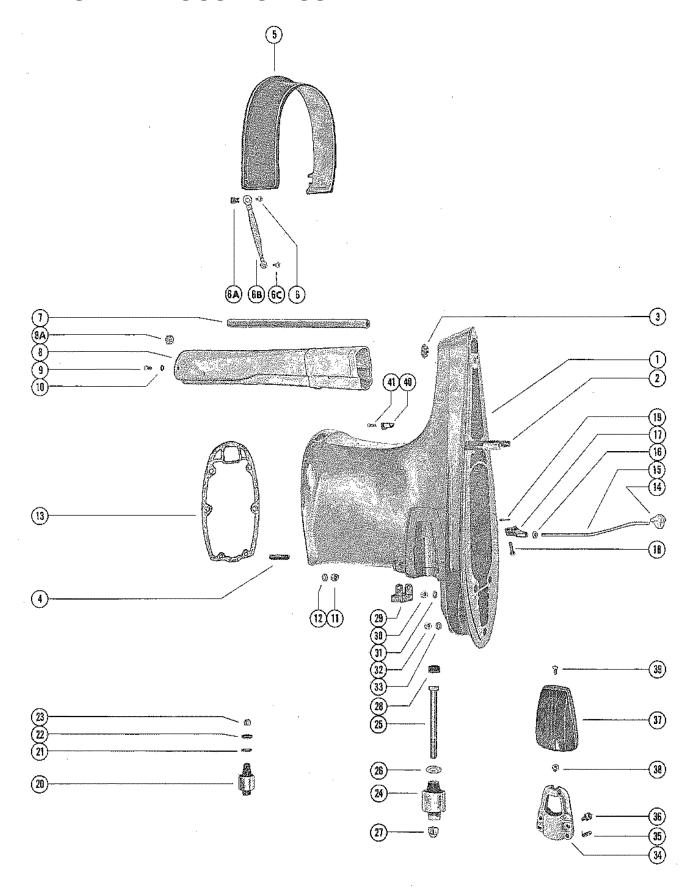

				DRIVE SHALL HOUSING ASSEMBLE
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
13	27-66335		1	GASKET, PLATE TO DRIVE SHAT HOUSING UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
14	52887		1	GUIDE, PUSH ROD - REVERSE LOCKING NOT USED WITH FULL POWER TRIM
15	47591		1	ROD, PUSH - REVERSE LOCK (SHORT SHAFT) NOT USED WITH FULL POWER TRIM
	47558		1	ROD,PUSH - REVERSE LOCK (LONG SHAFT) NOT USED WITH FULL POWER TRIM
16	11-47661		1	NUT, JAM - PUSH ROD NOT USED WITH FULL POWER TRIM
17	47559		1	YOKE, PUSH ROD NOT USED WITH FULL POWER TRIM
18	17-39023		1	PIN, PUSH ROD TO REVERSE LOCK NOT USED WITH FULL POWER TRIM
19	18-25191		1	COTTER PIN, PUSH ROD PIN NOT USED WITH FULL POWER TRIM
20	75297		2	MOUNT, RUBBER - UPPER (SHORT SHAFT)
	75296		2	MOUNT, RUBBER - UPPER (LONG SHAFT)
21	12-31263		2	WASHER, UPPER MOUNT BOLT
22	12-47840		2	WASHER, RUBBER - UPPER MOUNT BOLT
23	11-34933		2	NUT, UPPER MOUNT BOLT
24	75300		2	MOUNT, RUBBER -LOWER (SHORT SHAFT0
	75299		2	MOUNT, RUBBER - LOWER (LONG SHAFT)
25	10-49318		2	SCREW, LOWER MOUNT (5 1/2"0
26	12-49339		2	WASHER, LOWER MOUNT SCREW
27	11-25096		2	NUT, LOWER MOUNT SCREW
28	25067		2	BUMPER, RUBBER - LOWER MOUNTING SCREW
29	66336		1	BUMPER, RUBBER - DRIVE SHAFT HOUSING (SHORT SHAFT)
30	11-34933		2	NUT, GEAR HOSUING AND DRIVE SAHFT HOUSING STUDS
31	12-45176		2	WASHER, GEAR HOUSING TO DRIVE SHAFT HOUSING STUDS
32	11-29489		1	NUT, GEAR HOUSING AND DRIVE SHAFT HOUSING STUDS
33	12-45176		1	WASHER, GEAR HOUSING TO DRIVE SHAFT HOUSING STUDS
34	35608		2	CLAMP, LOWER MOUNT TO DRIVE SHAFT HOUSING
35	24-35522		4	SPRING, TENSION - LOWER MOUNT CLAMP
36	10-29256		4	SCREW, LOWER MOUNT CLAMP TO DRIVE SHAFT HOUSING (7/8")
37	35474		2	COVER, LOWER MOUNT CLAMP
38	11-35521		2	NUT, LOWER MOUNT CLAMP COVER
39	10-29722		2	SCREW, COVER TO LOWER CLAMP MOUNT (5/8")
40	62497		1	BRACKET, SUPPORT - DRIVE SHAFT -LONG SHAFT
41	10-48409		2	SCREW, SUPPORT BRACKET ATTACHING (5/8") -LONG SHAFT

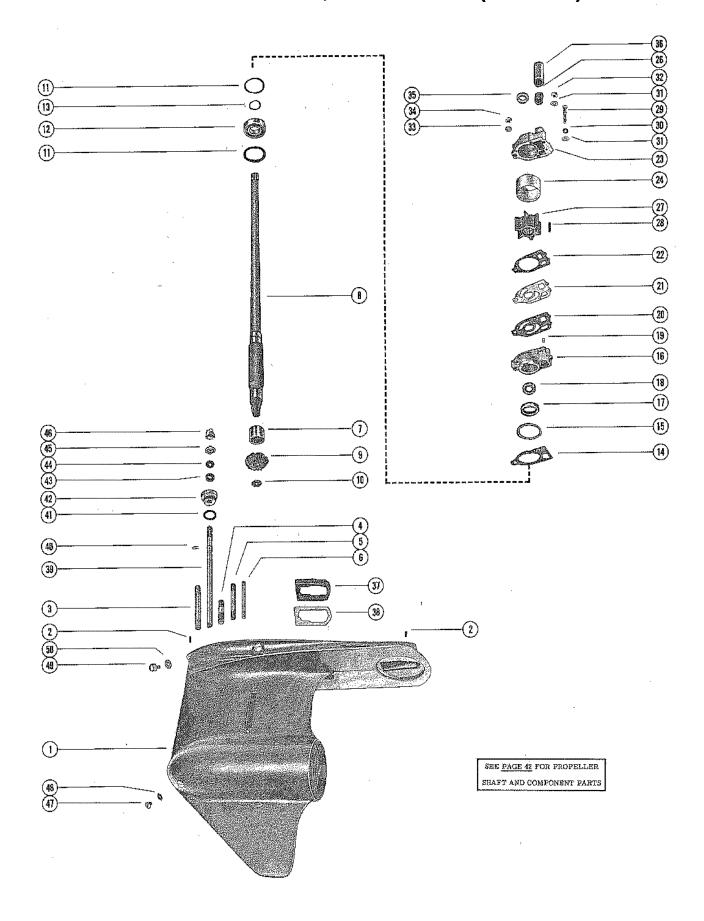


	<u> </u>			G ASSEMBLT, COMPLETE (FAGE T)
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
-	1623-4934A8		1	GEAR HOUSING ASS'Y, COMP. (SHORT SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
-	1655-7333A45		1	GEAR HOSUING ASS'Y COMP. (LONG SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
-	1623-5244A5		1	GEAR HOUSING ASS'Y, COMP (SHORT SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
-	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP. (LONG SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
-	1623-5829A6		1	GEAR HOUSING ASS'Y, COMP. (SHORT SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4121435 THRU 4403386 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067847
-	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP. (LONG SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4121435 THRU 4403386 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067847
-	1623-6048A4		1	GEAR HOUSING ASS'Y, COMP. (MERC 1500XS) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4403387 THRU 4602011
-	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP (MERC 1500 LONG) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4403387 THRU 4602011
-	1623-6048A4		1	GEAR HOUSING ASS'Y, COMP. (MERC 1500XS) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
-	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP. (MERC 1500 LONG) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
1	1623-4934A6		1	GEAR HOUSING ASS'Y <b>UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW</b>
	1623-5244A6		1	GEAR HOUSING ASS'Y <b>UNITED STATES 3751850 THRU</b> <b>4121434 AUSTRALIA 8013390 THRU 8028039 CANADA</b> <b>7024373 THRU 7048782</b>

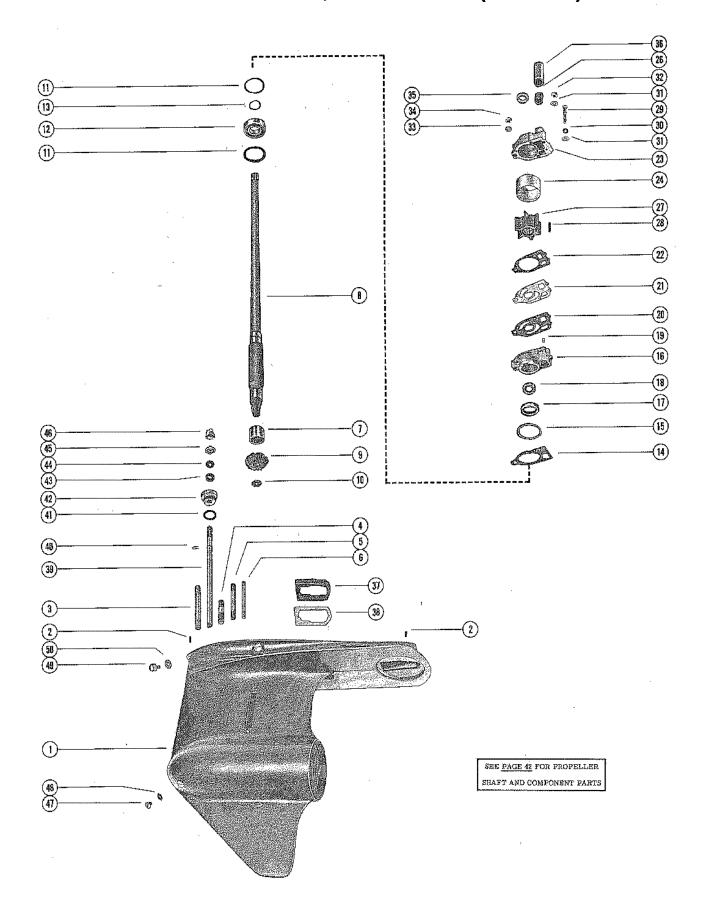


-				IG ASSEMBLT, COMPLETE (FAGE T)
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	1623-5829A8		1	GEAR HOUSING ASS'Y <b>UNITED STATES 4121435 THRU</b> <b>4403386 AUSTRALIA 8028040 THRU 8034895 CANADA</b> <b>7048783 THRU 7067847</b>
	1623-6048A3		1	GEAR HOUSING ASS'Y (MERC 1500XS) UNITED STATES 4403387 AND UP
	1623-6053A5		1	GEAR HOUSING ASS'Y (MERC 1500 LONG) <b>UNITED STATES 4403387 AND UP</b>
2	17-46912		2	DOWEL PIN, GEAR HOUSING LOCATING
3	16-57921		1	STUD, GEAR HOUSING TO DRIVE SHAFT HOUSING (4")
4	16-57920		2	STUD, GEAR HOUSING TO DRIVE SHAFT HOUSING (2 1/16")
5	16-56297		1	STUD, WATER PUMP BASE AND BODY TO GEAR HOUSING (3 3/8")
6	16-30667		2	STUD, WATER PUMP BASE AND BODY TO GEAR HOUSING (3 1/8")
7	31-32898		1	BEARING, ROLLER - DRIVE SHAFT
8	45-64388		1	DRIVE SHAFT (SHORT SHAFT) UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
	45-64389		1	DRIVE SHAFT (LONG SHAFT) <b>UNITED STATES 4121434</b> AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
	45-69250		1	DRIVE SHAFT (SHORT SHAFT) UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
	45-69251		1	DRIVE SHAFT (LONG SHAFT) <b>UNITED STATES 4121435</b> AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
9	43-68548		1	GEAR, PINION - DRIVE SHAFT
10	11-35921		1	NUT, PINION GEAR TO DRIVE SHAFT
11	15-30278A1		AR	SHIM, DRIVE SHAFT BALL BRG. TO GEAR HSG. (.002-3-5-10) UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
	15-30278A1		AR	SHIM, WATER PUMP BASE TO GEAR HSG. (.002-3-5-10) UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
12	30-63326		1	BEARING, BALL - DRIVE SHAFT <b>UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW</b>
13	53-30726		1	RING, RETAINING - BALL BEARING <b>UNITED STATES</b> 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
11	23-70412		1	SPACER, ROLLER BEARING TO WATER PUMP BASE UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
	15-57007A1		AR	SHIM, ROLLER BEARING TO WATER PUMP BASE <b>UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP</b>
12	31-69220		1	ROLLER BEARING, DRIVE SHAFT <b>UNITED STATES 4121435</b> <b>AND UP AUSTRALIA 8028040 AND UP CANADA 7048783</b> <b>AND UP</b>


CONTINUED ON NEXT PAGE

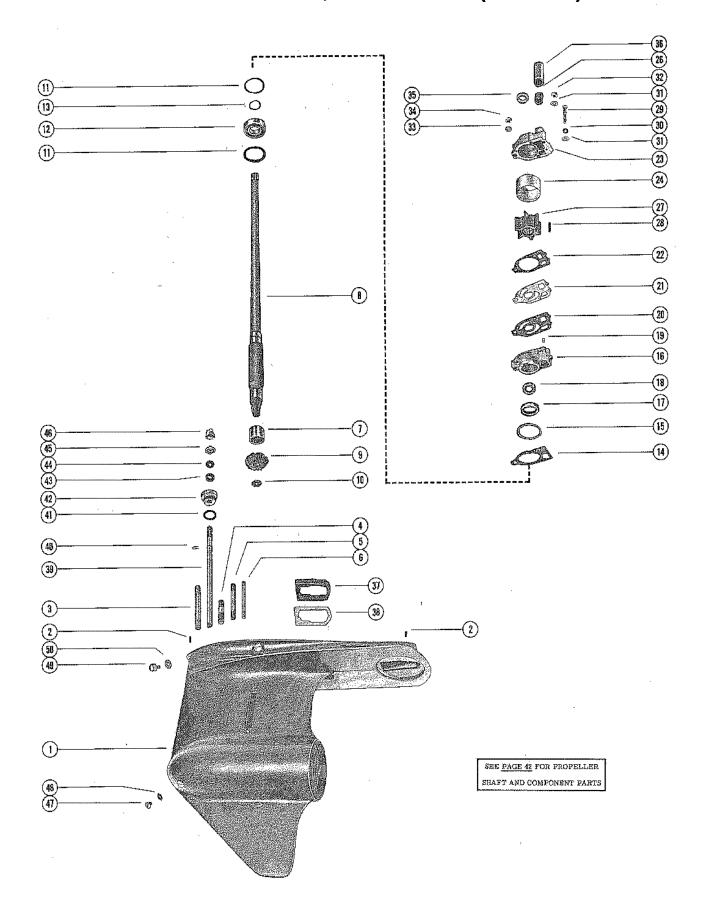


_				IG ASSEMBLT, COMPLETE (FAGE T)
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
14	27-32438		1	GASKET, WATER PUMP BASE TO GEAR HOUSING UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
15	25-30224		1	"O" RING, WATER PUMP BASE UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
14	27-33146		1	GASKET, WATER PUMP BASE TO GEAR HOUSING UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
15	25-33145		1	"O" RING, WATER PUMP BASE UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
-	1623-4934A8		1	GEAR HOUSING ASS'Y, COMP. (SHORT SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
-	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP. (LONG SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
-	1623-5244A5		1	GEAR HOUSING ASS'Y, COMP. (SHORT SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP. (LONG SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
-	1623-5829A6		1	GEAR HOUSING ASS'Y, COMP. (SHORT SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4121435 THRU 4403386 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067847
-	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP. (LONG SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4121435 THRU 4403386 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067847
-	1623-6048A4		1	GEAR HOUSING ASS'Y, COMP. (MERC 1500XS) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4403387 THRU 4602011
-	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP. (MERC 1500 LONG) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4403387 THRU 4602011
-	1623-6048A4		1	GEAR HOUSING ASS'Y, COMP. (MERC 1500XS) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4602012 AND UP CANADA 7093038 AND UP

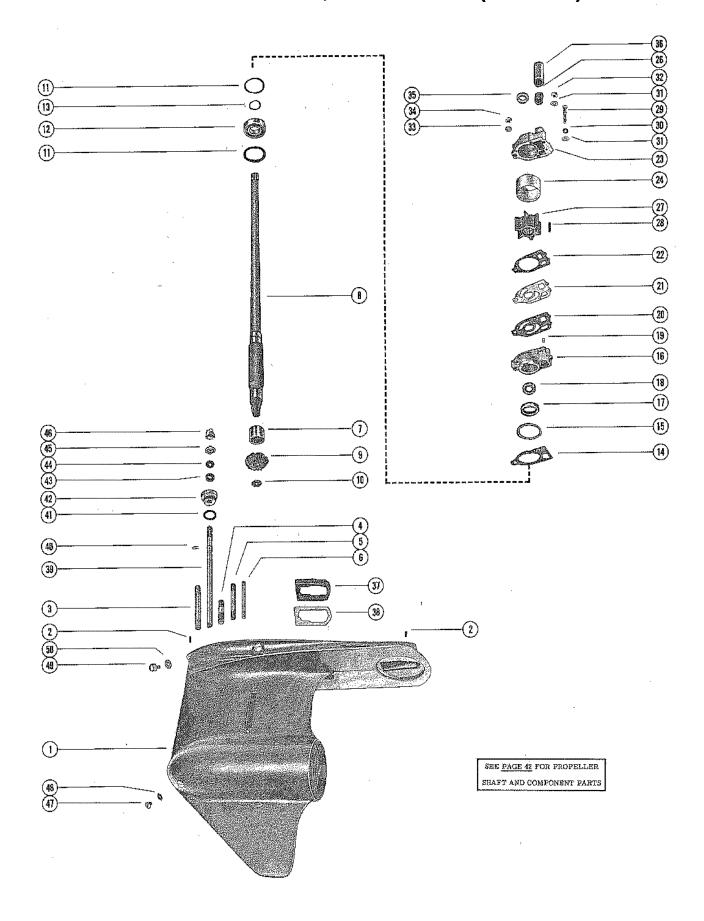


П				ONITELE (FAGE 1)
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
-	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP. (MERC 1500 LONG) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
1	1623-4934A6		1	GEAR HOUSING ASS'Y <b>UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW</b>
	1623-5244A6		1	GEAR HOUSING ASS'Y <b>UNITED STATES 3751850 THRU</b> 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
	1623-5829A8		1	GEAR HOUSING ASS'Y <b>UNITED STATES 4121435 THRU 4403386 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067847</b>
	1623-6048A3		1	GEAR HOUSING ASS'Y (MERC 1500XS) UNITED STATES 4403387 AND UP
	1623-6053A5		1	GEAR HOUSING ASS'Y (MERC 1500 LONG)
16	46-48747A1		1	WATER PUMP BASE ASSEMBLY UNITED STATES 4121434 AND BELOW AUSTRALIA 8028039 AND BELOW CANADA 7048782 AND BELOW
	46-69222A1		1	WATER PUMP BASE ASSEMBLY (WITH FLUSH HOLE) UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
	46-73804A1		1	WATER PUMP BASE ASSEMBLY (WITHOUT FLUSH HOLE) UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
17	26-31489		1	OIL SEAL, WATER PUMP BASE
18	26-31507		1	OIL SEAL, WATER PUMP BASE
19	17-35973		2	DOWEL PIN, WATER PUMP BASE TO WATER PUMP BODY
20	27-32433		1	GASKET, LOWER - WATER PUMP BASE TO FACE PLATE
21	32435		1	PLATE, FACE - WATER PUMP BASE TO WATER PUMP BODY
22	27-32434		1	GASKET, UPPER - FACE PALTE TO WATER PUMP BODY
23	46-64141A1		1	WATER PUMP BODY ASSEMBLY
24	48752		1	INSERT, WATER PUMP BODY
26	26-38970		1	SEAL, RUBBER - WATER INLET TUBE
27	47-65960		1	IMPELLER, WATER PUMP
28	28-56654		1	KEY, IMPELLER DRIVE
29	10-30720		1	SCREW, WATER PUMP BODY TO GEAR HOUSING (2 1/4")
30	13-26992		1	LOCKWASHER, WATER PUMP BODY SCREW
31	12-29245		3	WASHER, WATER PUMP BODY FASTENING SCREW AND STUD
32	11-35045		2	NUT, WATER PUMP FASTENING SCREW
33	12-36001		1	WASHER, WATER PUMP BODY FASTENING STUD
34	11-45592		1	NUT, WATER PUMP BODY FASTENING STUD
35	25-30271		1	RING, RUBBER - CENTRIFUGAL SLINGER (DRIVE SHAFT)
36	23-29804		1	SLEEVE, GUIDE - WATER INLET TUBE

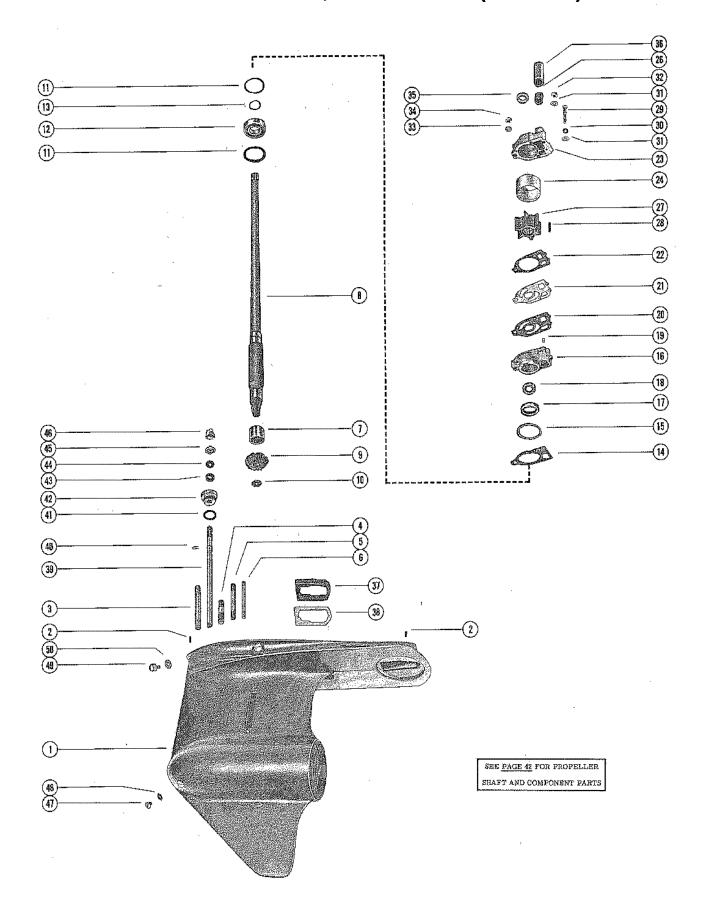


	<u> </u>	1 110	7011	G ASSEMBLT, COMPLETE (FAGE T)
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
37	60909		1	SEAL, EXHUAST TUBE <b>NOT PART OF GEAR HOUSING ASSEMBLY, COMPLETE UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW</b>
38	60910		1	PLATE, SUPPORT - EXHAUST TUBE SEAL NOT PART OF GEAR HOUSING ASSEMBLY, COMPLETE UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
37	37641		1	SEAL, EXHAUST TUBE <b>NOT PART OF GEAR HOUSING ASSEMBLY, COMPLETE UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP</b>
38	38051		1	PLATE, SUPPORT - EXHAUST TUBE SEAL NOT PART OF GEAR HOUSING ASSEMBLY, COMPLETE UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP
39	76062A1		1	SHAFT ASSEMBLY, SHIF - LOWER
40	53-29641		1	"E" RING, RETAINING - SHIFT SHAFT
41	25-25439		1	"O" RING, SHIFT SHAFT BUSHING
42	23-55419A1		1	BUSHING ASSEMBLY, SHIFT SHAFT
43	26-24590		1	OIL SEAL, SHIFT SHAFT HOUSING (LOWER)
	26-31249		1	OIL SEAL, SHIFT SHAFT HOUSING (UPPER)
44	12-31266		1	WASHER, RUBBER - SHIFT SHAFT BUSHING
45	39019		1	SPACER, LOWER - REVERSE LOCKING NOT USED WITH FULL POWER TRIM
46	39021		1	CAM, REVERSE LOCKING <b>NOT USED WITH FULL POWER TRIM</b>
47	10-28634		2	SCREW, GREASE FILLER AND VENT HOLE UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
	22-67892		1	SCREW, DRAIN (MAGNETIC) QUANTITY IS 1 UNITED STATES 4121435 AND UP AUSTRALIA 8028040 AND UP CANADA 7048783 AND UP
48	12-20260		2	WASHER, GREASE FILLER AND VENT HOLE SCREW
49	19-48750		1	PLUG, GEAR HOUSING FLUSHING HOLE <b>USE WHEN APPLICABLE</b>
50	12-49221		1	WASHER, GEAR HOUSING FLUSHING HOLE PLUG <b>USE</b> WHEN APPLICABLE

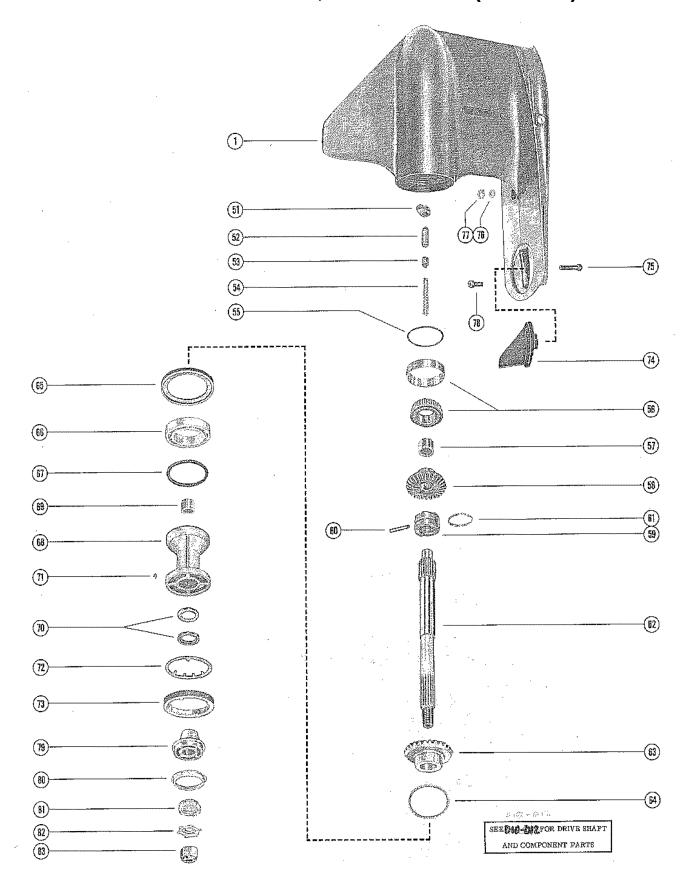


	<u> </u>			IG ASSEMBLT, COMPLETE (FAGE 2)
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
-	1623-4934A8		1	GEAR HOUSING ASS'Y, COMP. (SHORT SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
-	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP. (LONG SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
-	1623-5244A5		1	GEAR HOUSING ASS'Y, COMP. (SHORT SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
-	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP. (LONG SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
-	1623-5829A6		1	GEAR HOUSING ASS'Y, COMP. (SHORT SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4121435 THRU 4403386 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067847
-	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP. (LONG SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4121435 THRU 4403386 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067847
-	1623-60484		1	GEAR HOUSING ASS'Y, COMP. (MERC 1500XS) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4403387 THRU 4602011
-	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP. (MERC 1500 LONG) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4403387 THRU 4602011
-	1623-6048A4		1	GEAR HOUSING ASS'Y, COMP. (MERC 1500XS) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
-	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP. (MERC 1500 LONG) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
1	1623-4934A6		1	GEAR HOUSING ASS'Y <b>UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW</b>
	1623-5244A6		1	GEAR HOUSING ASS'Y <b>UNITED STATES 3751850 THRU</b> 4121434 <b>AUSTRALIA 8013390 THRU 8028039 CANADA</b> 7024373 THRU 7048782

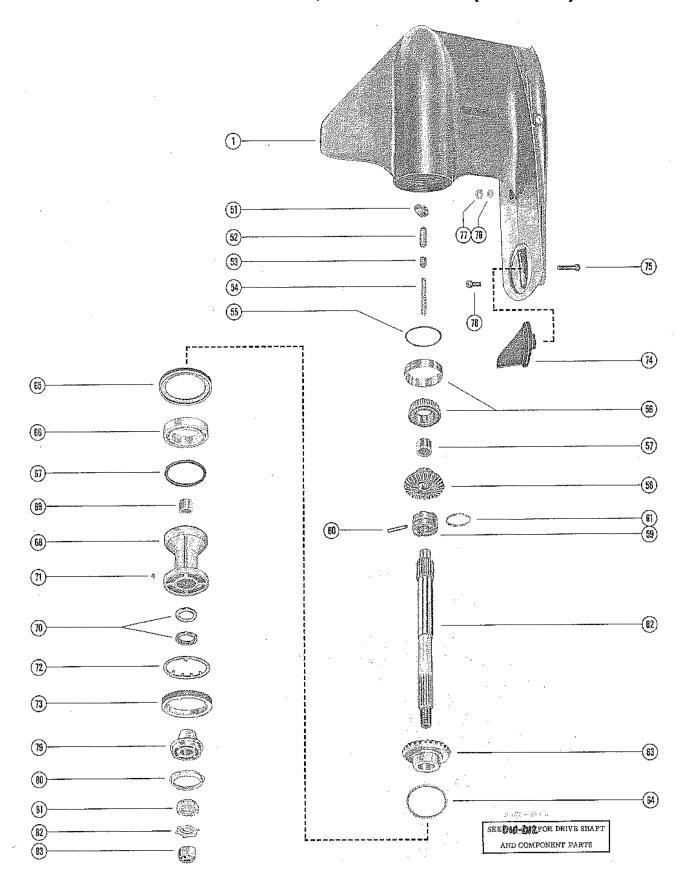

	OLA.	1100	<del> </del>	IG ASSEMBLT, COMPLETE (PAGE 2)
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	1623-5829A8		1	GEAR HOUSING ASS'Y <b>UNITED STATES 4121435 THRU 4403386 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067847</b>
	1623-6048A3		1	GEAR HOUSING ASS'Y (MERC 1500XS) UNITED STATES 4403387 AND UP
	1623-6053A5		1	GEAR HOUSING ASS'Y (MERC 1500 LONG) <b>UNITED</b> STATES 4403387 AND UP
51	54346		1	CAM, SHIFT
52	30625		1	FOLLOWER, CAM
53	30624		1	SLIDE, CROSS PIN
54	24-30622		1	SPRING,COMPRESS - CAM FOLLOWER
55	15-30923A1		AR	SHIM, BEARING OUTER RACE TO GEAR HSG. (.002-3-5-10)
56	31-30894A1		1	TAPERED ROLLER BEARING ASSEMBLY
57	31-30895		1	BEARING ROLLER - FORWARD GEAR
58	43-66342		1	FORWARD GEAR ASSEMBLY <b>UNITED STATES 3751849</b> AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
	43-68447		1	FORWARD GEAR ASSEMBLY <b>UNITED STATES 3751850</b> AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP
59	52-34239		1	RATCHET, SLIDING CLUTCH
60	17-30632		1	PIN, CROSS - RATCHET TO PROPELLER SHAFT
61	24-30893		1	SRPING, RETAINING - CROSS PIN
62	44-52542		1	SHAFT, PROPELLER
63	43-68015		1	REVERSE GEAR ASSEMBLY UNITED STATES 4403386 AND BELOW AUSTRALIA 8034895 AND BELOW CANADA 7067847 AND BELOW
	43-68347		1	REVERSE GEAR ASSEMBLY <b>UNITED STATES 4403387 AND UP</b>
64	15-29955A1		AR	SHIM, THRUST WASHER TO GEAR HSG. (.002-3-5-10-20) UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
-	1623-4934A8		1	GEAR HOUSING ASS'Y, COMP. (SHORT SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
-	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP. (LONG SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW
-	1623-5244A5		1	GEAR HOUSING ASS'Y, COMP. (SHORT SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782

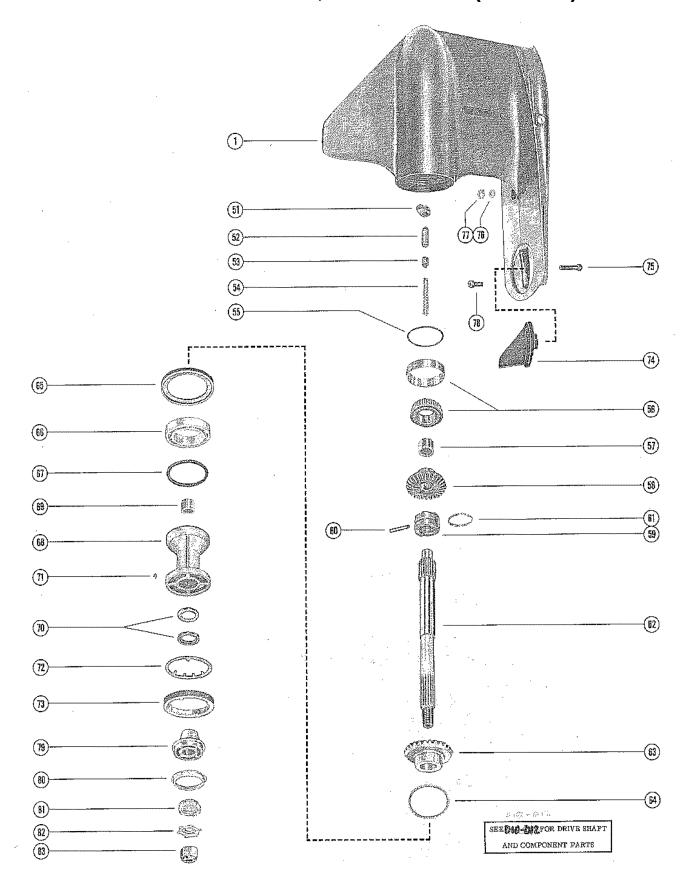


				IG ASSEMBLT, COMPLETE (PAGE 2)
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
-	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP. (LONG SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 3751850 THRU 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
-	1623-5829A6		1	GEAR HOUSING ASS'Y, COMP. (SHORT SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4121435 THRU 4403386 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067847
-	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP. (LONG SHAFT) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4121435 THRU 4403386 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067847
-	1623-6048A4		1	GEAR HOUSING ASS'Y, COMP. (MERC 1500XS) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4403387 THRU 4602011
-	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP. (MERC 1500 LONG) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4403387 THRU 4602011
-	1623-6048A4		1	GEAR HOUSING ASS'Y, COMP. (MERC 1500XS) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
-	1655-7333A45		1	GEAR HOUSING ASS'Y, COMP. (MERC 1500 LONG) THE ENCLOSED GEAR HOUSINGS INCLUDE ALL PARTS FROM REFERENCE #1 THRU #75 AS LISTED ON D10-D12-D14-E2 UNITED STATES 4602012 AND UP CANADA 7093038 AND UP
1	1623-4934A6		1	GEAR HOUSING ASS'Y <b>UNITED STATES 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW</b>
-	1623-5244A6		1	GEAR HOUSING ASS'Y <b>UNITED STATES 3751850 THRU</b> 4121434 AUSTRALIA 8013390 THRU 8028039 CANADA 7024373 THRU 7048782
	1623-5829A8		1	GEAR HOUSING ASS'Y <b>UNITED STATES 4121435 THRU 4403386 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067847</b>
	1623-6048A3		1	GEAR HOUSING ASS'Y (MERC 1500XS) UNITED STATES 4403387 AND UP
Ĺ	1623-6053A5		1	GEAR HOUSING ASS'Y (MERC 1500 LONG)
65	12-71143A1		1	WASHER, THRUST - BEARING CARRIER TO GEAR HOUSING
66	30-31265		1	BEARING, BALL - REVERSE GEAR
67	25-29976		1	"O" RING, BEARING CARRIER
68	73800A1		1	BEARING CARRIER ASSEMBLY (IDENTIFIED BY CASTING #73800)
	52132A1		1	BEARING CARRIER ASSEMBLY (IDENTIFIED BY CASTING 352132)
69	31-30956		1	BEARING, ROLLER - BEARING CARRIER

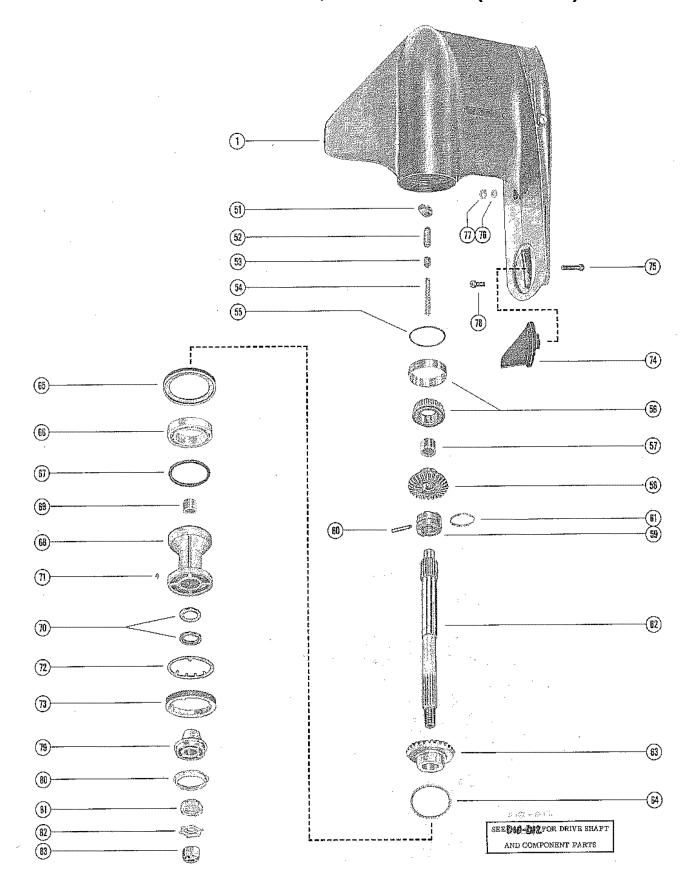


	OLAR HOUSING AGGEMBET, GOME ELTE (FAGE 2)						
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION			
70	26-76868		2	OIL SEAL, BEARING CARRIER			
-	25-32546		1	"O" RING, BEARING CARRIER (USE WITH A73800A1 ONLY)			
71	28-30281		1	KEY, LOCATING - BEARING CARRIER			
72	14-52700		1	TAB WASHER, GEAR HOUSING COVER			
73	52699		1	COVER, GEAR HOUSING			
74	31640A1		1	TRIM TAB, GEAR HOUSING			
75	10-66024		1	SCREW, TRIM TAB TO GEAR HOUSING (1 3/4")			
76	12-45176		2	WASHER, GEAR HOUSING TO DRIVE SHAFT HOUSING STUDS			
77	11-34933		2	NUT, GEAR HOUSING TO DRIVE SHAFT HOUSING STUDS			
78	10-65210		1	SCREW, GEAR HOUSING TO DRIVE SHAFT HOUSING (1")			
79	46961A1		1	THRUST HUB AND WASHER ASSEMBLY <b>UNITED STATES</b> 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW			
80	12-29590		1	WASHER, CUPPED - THRUST HUB <b>UNITED STATES</b> 3751849 AND BELOW AUSTRALIA 8013389 AND BELOW CANADA 7024372 AND BELOW			
79	65091		1	THRUST HUB <b>UNITED STATES 3751850 AND UP AUSTRALIA 8013390 AND UP CANADA 7024373 AND UP</b>			
81	12-31211		1	WASHER, SPLINED - PROPELLER NUT			
82	14-31210		1	TAB WASHER, PROPELLER NUT			
83	11-52707		1	NUT, PROPELLER INCLUDED ON ALL GEAR HOUSING ASSEMBLIES, COMPLETE			

## **HYDRAULIC PUMP ASSEMBLY**

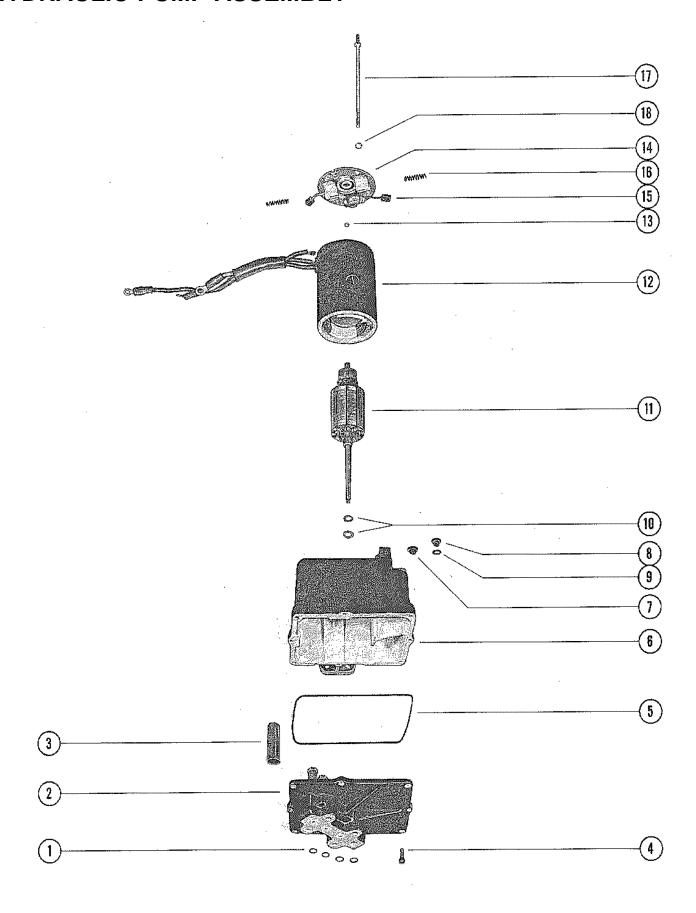


## **HYDRAULIC PUMP ASSEMBLY**

_				
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
-	64461A4		1	HYDRAULIC PUMP ASSEMBLY, COMPLETE
1	25-21720		4	"O" RING, HYDRAULIC PUMP
2	392-2936		1	VALVE BODY AND GEAR ASSEMBLY
3	392-2618		2	CAN, VALVE BODY
4	10-20411		8	SCREW, VALVE BODY TO RESERVIOR (5/8")
5	392-2937		1	SEAL, RESERVIOR TO VALVE BODY AND GEAR
6	392-2939		1	RESERVIOR ASSEMBLY
7	10-38257		1	SCREW, VENT - HYDRAULIC PUMP
8	10-28634		1	SCREW, FILLE - HYDRAULIC PUMP
9	12-20260		1	WASHER, SEALING - FILLER SCREW
10	392-2623		AR	WASHER, THRUST - ARMATURE
11	392-2943		1	ARMATURE, FIELD AND FRAME
12	392-2942		1	FIELD AND FRAME ASSEMBLY
13	392-2944		1	BALL, COMMUTATOR END PLATE
14	392-2940		1	PLATE ASSEMBLY, COMMUTATOR END
15	392-2941		1	BRUSH SET, COMMUTATOR END PLATE
16	392-2529		1	SPRING SET, BRUSH TENSION
17	392-2938		1	BOLT SET, THRU - PLATE AND FRAME TO RESERVOIR
18	13-26996		2	LOCKWASHER, THRU BOLT

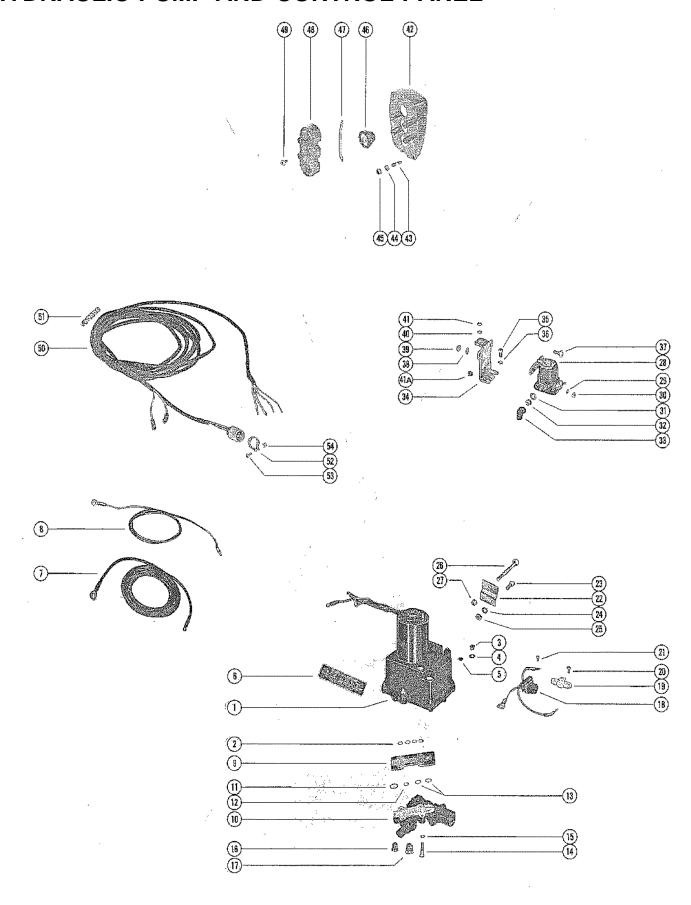


				AULIO I UIIII AND UUNTINUL I ANLL
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	64461A4		1	HYDRAULIC PUMP ASSEMBLY
2	25-21720		4	"O" RING, HYDRAULIC PUMP TO MANIFOLD PLATE
3	10-28634		1	SCREW, FILLER - HYDRAULIC PUMP
4	12-20260		1	WASHER, SEALING - HYDRAULIC PUMP FILLER SCREW
5	10-38257		1	SCREW, VENT - HYDRAULIC PUMP
6	37-55901		1	DECAL, INSTRUCTION - HYDRAULIC PUMP
7	32979		1	BATTERY LEAD (POSITIVE)
8	32988		1	BATTERY LEAD (NEGATIVE)
9	45336		1	PLATE, MANIFOLD
10	45197A2		1	CONTROL VALVE ASSEMBLY
-	25-21720		4	"O" RING, HYDRAULIC PUMP TO MANIFOLD PLATE
11	25-45254		1	"O" RING, CONTROL VALVE TO MANIFOLD PLATE (3/4"O.D.)
12	25-21720		1	"O" RING, CONTROL VALVE TO MANIFOLD PLATE (1/2"O.D.)
13	25-45253		2	"O" RING, CONTROL VALVE TO MANIFOLD PLATE (5/8"O.D.)
14	10-56500		4	SCREW, CONTROL VALVE AND MANIFOLD PLATE TO HYDRAULIC PUMP (1 1/4")
15	13-26992		4	LOCKWASHER, CONTROL VALVE AND MANIFOLD PLATE SCREW
16	22-38609		2	PLUG, CONTROL VALVE (3/8-24")
17	22-46008		2	PLUG, CONTROL VALVE (1/2-20")
18	45325		1	CONNECTOR AND HARNESS
19	45559		1	TERMINAL BLOCK, HYDRAULIC PUMP
20	10-35519		2	SCREW, TERMINAL BLOCK TO HYDRAULIC PUMP (1/2")
21	10-30663		2	SCREW, HARNESS LEADS TO TERMINAL BLOCK (3/8")
22	45377		2	BRACKET, MOUNTING - HYDRAULIC PUMP TO BOAT
23	10-24234		4	SCREW, MOUNTING BRACKET TO HYDRAULIC PUMP (1")
24	13-39107		4	LOCKWASHER, MOUNTING BRACKET SCREW
25	11-21908		4	NUT, MOUNTING BRACKET SCREW
26	10-28009		2	BOLT, HYDRAULIC PUMP TO BOAT (3 1/4")
27	11-35304		2	NUT, HYDRAULIC PUMP BOLT
28	25661		1	STARTER SOLENOID
29	13-26996		2	LOCKWASHER, STARTER SOLENOID TERMINAL (#10)
30	11-20645		2	NUT, STARTER SOLENOID TERMINAL (#10)
31	13-26993		2	LOCKWASHER, STARTER SOLENOID TERMINAL (5/16")
32	11-20083		2	NUT, STARTER SOLENOID TERMINAL (5/16")
33	46265		2	BOOT, RUBBER - STARTER SOLENOID TERMINAL
34	45321		1	BRACKET, MOUNTING - STARTER SOLENOID
35	10-21140		2	SCREW, MOUNTING BRACKET TO HYDRAULIC PUMP (1/2")
36	13-26992		2	LOCKWASHER, MOUNTING BRACKET SCREW
37	10-34290		2	SCREW, STARTER SOLENOID TO MOUNTING BRACKET (5/8")
38	13-26992		2	LOCKWASHER, STARTER SOLENOID SCREW

CONTINUED ON NEXT PAGE

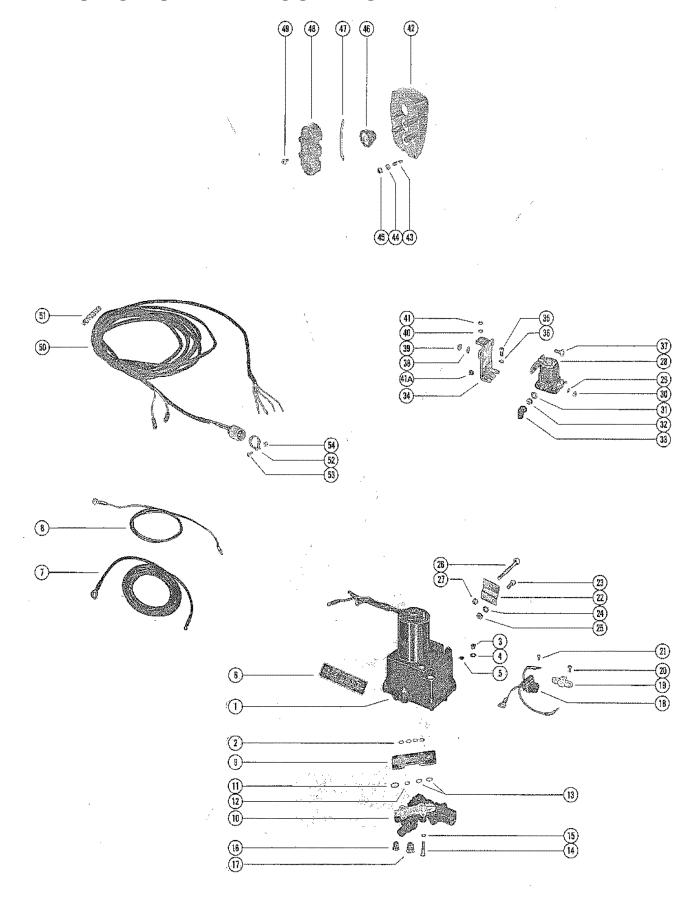

				AUDIO I UNII AND UUNINUL I ANEL
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
39	11-21825		2	NUT, STARTER SOLENOID SCREW
40	13-27660		1	LOCKWASHER, HYDRAULIC PUMP THRU BOLT
41	11-20645		1	NUT, MOUNTING BRACKET TO HYDRAULIC PUMP THRU BOLT
41A	49342		1	BUMPER, RUBBER - SOLENOID BRACKET
-	55642A7		1	CONTROL PANEL ASSEMBLY, COMPLETE
42	55642A1		1	PANEL, CONTROL
43	16-55422		4	STUD, CONTROL PANEL TO BAOT (2")
44	12-24676		4	WASHER, CONTROL PANEL STUD
45	11-27164		4	NUT, CONTROL PANEL STUD
46	55738A1		3	SWITCH, PUSH BUTTON - CONTROL PANEL
47	48078		1	JUMPER WIRE, PUSH BUTTON SWITCH (RED - 3-1/4")
	53107		1	JUMPER WIRE, PUSH BUTTON SWITCH (PURPLE - 3")
48	55641		1	RETAINER, PUSH BUTTON SWITCH
49	10-62568		4	SCREW, SWITCH RETAINER TO CONTROL PANEL (3/8")
50	45341-20		1	HARNESS, CONTROL PANEL (20 FEET)
51	33865		1	BINDER, NYLON - CONTROL PANEL HARNESS
52	54-46770		1	CLAMP, HARNESS FASTENING
53	10-29227		1	SCREW, HARNESS FASTENING CLAMP (1/2")
54	11-34388		1	NUT, HARNESS FASTENING SCREW

## TRIM CYLINDERS AND HYDRAULIC HOSES

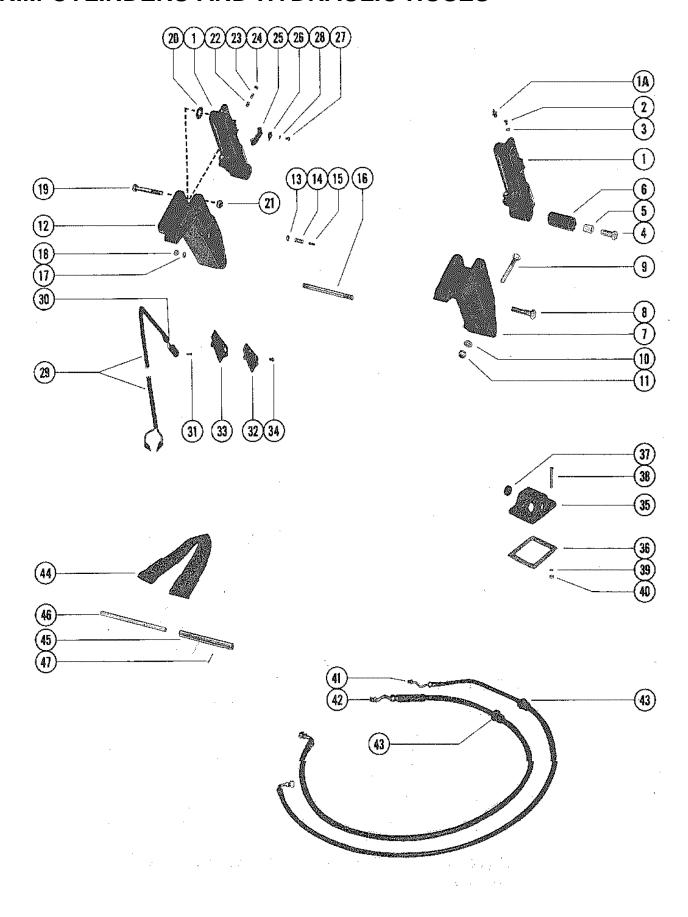


#### TRIM CYLINDERS AND HYDRAULIC HOSES

I	TRIM CILINDERS AND HIDRAULIC HUSES							
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION				
1	45194A18		2	TRIM CYLINDER ASSEMBLY SEE PAGE 49 FOR REPAIR KIT BREAKDOWN UNITED STATES 4403387 THRU 4602011				
	76509A3		2	TRIM CYLINDER ASSEMBLY SEE PAGE 49 FOR REPAIR KIT BREAKDOWN UNITED STATES 4602012 AND UP CANADA 7093038 AND UP				
1A	22-74036		2	FITTING, GREASE SEE PAGE 49 FOR REPAIR KIT BREAKDOWN UNITED STATES 4602012 AND UP CANADA 7093038 AND UP				
2	10-45265		4	SCREW, BLEED - SHOCK CYLINDER				
3	25-45016		4	"O" RING, SHOCK CYLINDER BLEED SCREW				
4	10-45264		2	SCREW, SHOCK CYLINDER TO LOWER SHOCK PIN (1 9/16")				
5	23-45280		2	SPACER, SHOCK CYLINDER - LOWER				
6	23-45281		2	BUSHING, RUBBER - SHOCK CYLINDER				
7	66084		1	BRACKET, MOUNTING - SHOCK CYLINDER (PORT)				
8	10-45263		2	SCREW, MOUNTING BRACKET TO UPPER SHOCK PIN (2 1/4")				
9	10-68298		6	BOLT, MOUNTING BRACKET TO BOAT TRANSOM (3 1/4")				
10	12-68410		6	WASHER, MOUNTING BRACKET BOLT				
11	11-68411		6	NUT, MOUNTING BRACKET BOLT				
12	45196A2		1	BRACKET ASSEMBLY, MOUNTING - SHOCK CYLINDER (STARBOARD)				
13	26-70608		1	OIL SEAL, STARBOARD MOUNTING BRACKET				
14	45286		1	PLUNGER, LIMIT SWITCH ACTUATING				
15	24-45272		1	SPRING, TENSION - LIMIT SWITCH PLUNGER				
16	16-45282		1	STUD, MOUNTING BRACKET AND CLAMP BRACKET				
17	13-26993		2	LOCKWASHER, MOUNTING BRACKET TO CLAMP BRACKET STUD				
18	11-28770		2	NUT, MOUNTING BRACKET TO CLAMP BRACKET STUD				
19	10-45328		2	SCREW, SHOCK CYLINDER TO MOUNTING BRACKET (3 9/16")				
20	12-37807		1	WASHER, SHOCK CYLINDER SCREW (STARBOARD ONLY)				
21	11-20696		2	NUT, SHOCK CYLINDER SCREW				
22	24-24390		1	SPRING, TENSION - ADJUSTING STUD				
23	16-21085		1	STUD, ADJUSTING - CUT-OUT LIMIT SWITCH (15/16")				
24	11-45812		1	NUT, JAM - LIMIT SWITCH ADJUSTING STUD				
25	45508		1	CAM, LIMIT SWITCH ADJUSTING STUD				
26	45509		1	PLATE, RETAINING - LIMIT SWITCH CAM				
27	10-68513		1	SCREW, RETAINING PLATE AND CAM TO SHOCK CYLINDER (3/8")				
28	13-26996		1	LOCKWASHER, RETAINING PLATE AND CAM SCREW				
29	45326A2		1	SWITCH ASSEMBLY, CUT-OUT LIMIT				
30	23-45354		1	BUSHING, RUBBER - CUT-OUT LIMIT SWITCH				
31	10-47255		2	SCREW, CUT-OUT LIMIT SWITCH TO MOUNTING BRACKET (9/16")				
32	45287		1	COVER, LIMIT SWITCH				
33	27-45275		1	GASKET, LIMIT SWITCH COVER				
34	10-24942		5	SCREW, LIMIT SWITCH COVER TO MOUNTING BRACKET (7/16")				


CONTINUED ON NEXT PAGE

# TRIM CYLINDERS AND HYDRAULIC HOSES

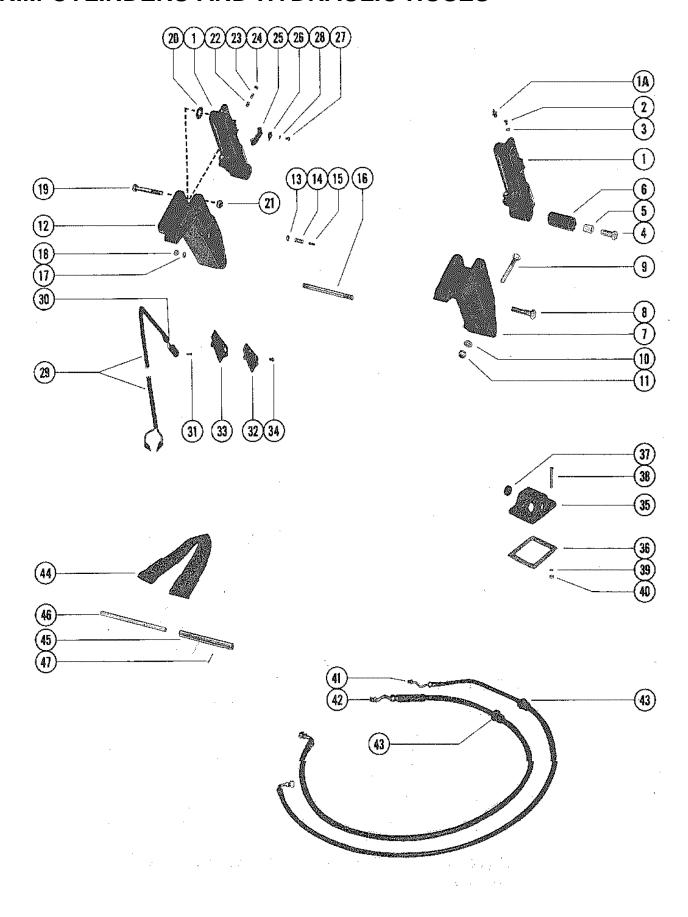

#### TRIM CYLINDERS AND HYDRAULIC HOSES

		1		TENDERS AND ITTORAGEIG HOSES
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
35	45289		1	COVER, INLET - TRANSOM
36	27-45274		1	GASKET, INLET COVER
37	25-45507		1	GROMMET, RUBBER - INLET COVER
38	10-32866		4	SCREW, INLET COVER TO BOAT (2")
39	12-20878		4	WASHER, INLET COVER SCREW
40	11-29488		4	NUT, INLET COVER SCREW
41	32-45327		2	HOSE, TRIM - CYLINDER TO CONTROL VALVE (5') - 13/32" O.D.
42	32-45959		2	HOSE, LIFT - CYLINDER TO CONTROL VALVE (5') - 17/32" O.D.
43	23-35977		4	GROMMET, RUBBER - LIFT HOSE AND TRIM HOSE
44	73519A1		1	TILT STOP
45	63441		1	TUBE, MOUNTING-TILT STOP UNITED STATES 3752619 AND BELOW AUSTRALIA 8013419 AND BELOW CANADA 7024372 AND BELOW
46	17-63442		1	PIN, MOUNTING TUBE <b>UNITED STATES 3752619 AND BELOW AUSTRALIA 8013419 AND BELOW CANADA 7024372 AND BELOW</b>
45	69259		1	TUBE, MOUNTING - TILT STOP <b>UNITED STATES 4121435</b> THRU 4319879 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067284
46	69258		1	PIN, MOUNTING TUBE <b>UNITED STATES 4121435 THRU 4319879 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067284</b>
47	18-36391		1	COTTER PIN, MOUNTING TUBE PIN UNITED STATES 4121435 THRU 4319879 AUSTRALIA 8028040 THRU 8034895 CANADA 7048783 THRU 7067284
-	48664A1		1	REPAIR KIT (SEE NOTE A ABOVE)

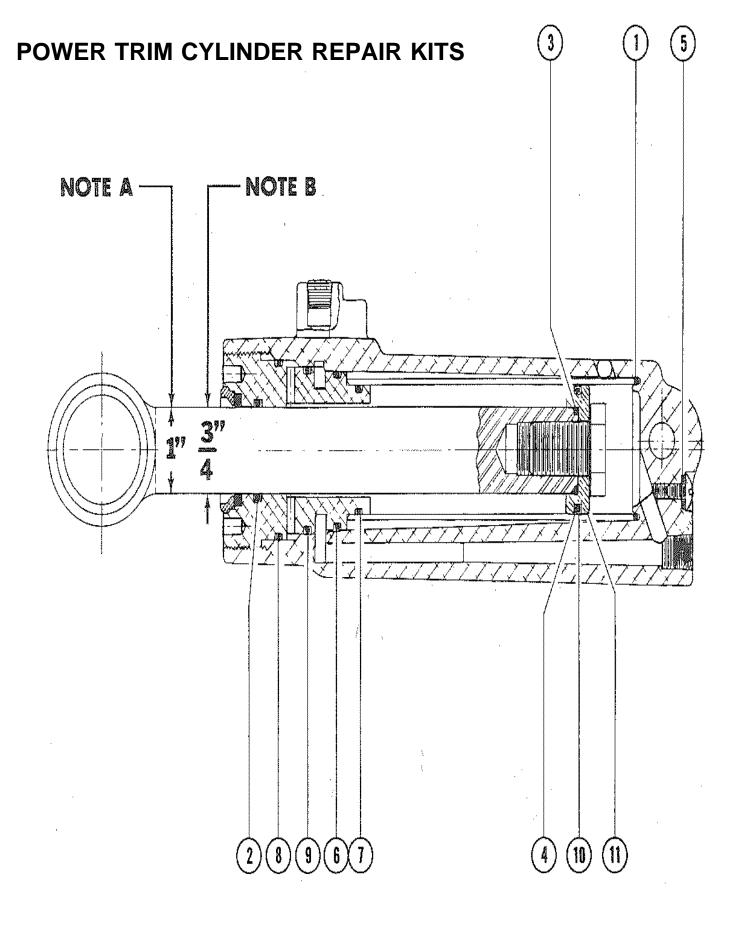

# **POWER TRIM CYLINDER REPAIR KITS**

			<u> </u>	TANEN TIMIN CILINDEN NEI AIN NITO
REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	N.S.S.		1	"O" RING (1 1/2" X 1 5/8" X 1/16")
2	N.S.S.		1	"O" RING (1" X 1 3/16" X 3/32")
3	N.S.S.		1	"O" RING (7/8" X 1" X 1/16")
4	N.S.S.		1	"O" RING (1 1/4" X 1 7/16" X 1/16")
5	N.S.S.		2	"O" RING (7/32" X 11/32" X 1/16")
6	N.S.S.		1	"O" RIG (1 5/8" X 1 13/16" X 1/8")
7	N.S.S.		1	"O" RING (1 5/16" X 1 1/2" X 1/8")
8	N.S.S.		1	"O" RING (1 7/8" X 2" X 1/8")
9	N.S.S.		1	"O" RING (1 3/4" X 1 5/16" X 1/8")
10	N.S.S.		1	SEAL, SLIPPER - PISTON
11	N.S.S.		1	PISTON, ROD - STANDARD
-	64507A1		1	REPAIR KIT (SEE NOTE B ABOVE)
1	N.S.S.		1	"O" RING (1 1/2" X 1 5/8" X 1/16")
2	N.S.S.		1	"O" RING (3/4" X 15/16" X 1/8")
3	N.S.S.		1	"O" RING (5/8" X 3/4" X 1/16")
4	N.S.S.		1	"O" RING (1 1/4" X 1 7/16" X 1/16")
5	N.S.S.		2	"O" RING (7/32" X 11/32" X 1/16")
6	N.S.S.		1	"O" RING (1 5/8" X 1 13/16" X 1/8")
7	N.S.S.		1	"O" RING (1 5/16" X 1 1/2" X 1/8")
8	N.S.S.		1	"O" RING (1 7/8" X 2" X 1/8")
9	N.S.S.		1	"O" RING (1 3/4" X 1 15/16" X 1/8")
10	N.S.S.		1	SEAL, SLIPPER - PISTON
11	N.S.S.		1	PISTON, ROD - HEAVY DUTY

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
20121	CONNECTOR, SPARK PLUG			30624	SLIDE, CROSS PIN	95	53
00440	LEAD	11		30625	FOLLOWER, CAM	95	52
20140	BELT, TIMING	19	57	30664	TUBE, TILT - CLAMP		
22789	"D" WASHER, FUEL LINE CLIP SCREW	33	16		BRACKET TO SWIVEL BRACKET	73	4
22833	ADAPTOR, CHECK UNIT	33	10	31014	MOUNT, RUBBER - REAR	13	4
22033	(FUEL LINE)	39	33	31014	SUPPORT BRACKET	3	21
23004	RETAINER, CHECK VALVE .	33	6	31089	STRIP, SOUND ABSORBING	7	7
23004	RETAINER, CHECK VALVE .	39	9	31640A1	TRIM TAB, GEAR HOUSING	99	74
23069	STEM, CHECK UNIT	41	34	32197	STOP, SPARK ADVANCE -		
25067	BUMPER, RUBBER - LOWER				DISTRIBUTOR HOUSING .	17	2
	MOUNTING SCREW	81	28	32435	PLATE, FACE - WATER		
25596	CABLE, WIRE - STARTER				PUMP BASE TO WATER		
	MOTOR TO FRONT				PUMP BODY	89	21
	SUPPORT BRACKET		20	32979	BATTERY LEAD (POSITIVE)	103	7
25661	SOLENOID, STARTER		28	32988	BATTERY LEAD (NEGATIVE)	103	8
25661	STARTER SOLENOID	103	28	33865	BINDER, NYLON - CONTROL PANEL HARNESS	10E	E 1
25996A1	SWIVEL ADN LINK ROD ASSEMBLY - 3 PIECE			35474	COVER, LOWER MOUNT	105	51
	(SEE PHOTO)	17	10	33474	CLAMP	81	37
26113	RACE, OUTER (PAIR)		10	35496	PAD, BUMPER - TOP COWL	01	31
26901	BUMPER, RUBBER -	01	.0	00 100	RETAINER	3	3
	STARTER SOLENOID	23	31	35608	CLAMP, LOWER MOUNT TO	Ū	
27947	SWIVEL, LINKAGE -				DRIVE SHAFT HOUSING .	81	34
	ECONOMIZER COLLAR	17	9	35769	SEAL, SOUND ABSORBING -		
27948	SWIVEL, UPPER LINK ROD				UPPER	7	9
	TO THROTTLE CONTROL			37417	COVER, TRIM - DRIVE		
	LEVER		13		SHAFT HOUSING	79	5
28203	BUMPER, STEERING ARM .	71	17	37419	YOKE, BOTOM	69	15
28205	STRAP STOP, DRIVE SHAFT			37440	BRACKET, MOUNT		
	HOUSING TO SWIVEL	00	4.4		SUPPORT - CYLINDER	<b>-</b> 20	20
28403A3	BRACKET		11 2	37445	BLOCK	53	28
29359	LUBRICAP, SWIVEL	13	2	37443	HARNESS - BOTTOM		
20000	BRACKET GREASE				COWL	61	10
	FITTING	69	8	37587	SWIVEL, LOWER -	0.	
29787	HUB, FLYWHEEL PULLEY		10		THROTTLE CONTROL		
29788	FLANGE, FLYWHEEL				LEVER TO THROTTLE		
	PULLEY	9	8		CABLE	17	22
29906A1	DRIVEN PULLEY ASSEMBLY	19	52	37637	BOOT, FUEL CONNECTOR -		
29907	FLANGE, DRIVEN PULLEY .	19	54		BOTTOM COWL	61	9
30021	BLANKET, SOUND			37639	MOUNT, RUBBER - TOP	_	4.0
	ABSORBING - NON	7	4.4	07040	COWL FRAME	3	18
20106	LOUVERED	7	14	37640	MOUNT, RUBBER - SUPPORT BRACKET	5	24
30186	(FUEL LINE)	33	25	37641	SEAL, EXHAUST TUBE	5 91	34 37
30186	ADAPTOR, CHECK UNIT	33	23	37700	ROD, LINK - UPPER - 3	91	31
00100	(FUEL LINE)	39	33	01100	PIECE (SEE PHOTO)	17	12
30187	STEM, CHECK UNIT			37896	GUIDE BLOCK, LINK ROD	63	32
	ADAPTOR	33	26	37918	SEAL, EXHAUST		
30187	STEM, CHECK UNIT				EXTENSION PLATE	65	3
	ADAPTOR	39	34	37940	PAD, SOUND - DRIP TRAY .	61	3
30188	CUP WASHER, ADAPTOR	33	29	38032	STRIP, RETAINING -		
30188	CUP WASHER, ADAPTOR	41	37		EXHAUST EXTENSION		
30306	PULLEY, FLYWHEEL	9	9		PLATE SEAL	65	4
30413	HOOK, COWL LATCH	7	20	38051	PLATE, SUPPORT -	04	0.0
20442	FASTENING - LOUVERED	7	20	20270	EXHAUST TUBE SEAL	91	38
30413	HOOK, COWL LATCH FASTENING - NON			38279	LATCH, CONTROL CABLE FASTENING - ANCHOR		
	LOUVERED	7	13		BRACKET	63	34
	LOOVENED	•			DIVIONET	55	57

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
38675	BLANKET, SOUND	-	•	46785A1	COWL LATCH ASSEMBLY -	_	40
39019	ABSORBING SPACER, LOWER -	1	8	46933A2	LOUVERED	7	19
00010	REVERSE LOCKING	91	45	40000/1 <u>2</u>	ASSEMBLY, TRIM COVER		
39021	CAM, REVERSE LOCKING .		46		SCREW	79	6B
39519	CAP, BARREL RETAINER -			46933A3	GROUND STRAP		
00040	ANCHOR BRACKET	63	25		ASSEMBLY, EXHAUS		00
39616	BOOT, CONTROL CABLES - BOTTOM COLW	61	6	46961A1	COVER	55	36
39618	LEVER, NYLON - SHIFT	01	U	40301A1	ASSEMBLY	99	79
000.0	CABLE LOCKING	63	26	47341A1	ROPE, STARTER (FOR		. •
39667	COVER, NYLON - SHIFT				MANUAL STARTING		
45404440	CABLE			47000	ONLY)	3	9
45194A18 45196A2	TRIM CYLINDER ASSEMBLY BRACKET ASSEMBLY,	107	1	47398	BRACKET, REAR - WIRE RETAINER	13	32
45190A2	MOUNTING - SHOCK			47558	ROD,PUSH - REVERSE	13	32
	CYLINDER (STARBOARD)	107	12	17000	LOCK (LONG SHAFT)	81	15
45197A2	CONTROL VALVE			47559	YOKE, PÙSH ROD	81	17
	ASSEMBLY	103	10	47591	ROD, PUSH - REVERSE		
45286	PLUNGER, LIMIT SWITCH				LOCK (SHORT SHAFT)	81	15
45007	ACTUATING	107		47799A1	TILT LOCK ASSEMBLY,	75	04
45287 45289	COVER, LIMIT SWITCH COVER, INLET - TRANSOM	107 109		47800A1	STARBOARD TILT LOCK ASSEMBLY,	75	21
45321	BRACKET, MOUNTING -	109	33	47000A1	PORT	75	22
10021	STARTER SOLENOID	103	34	47802	TUBE, TILT LOCK	75	23
45325	CONNECTOR AND			48047A1	LINK ROD ASSEMBLY	61	20
	HARNESS	103	18	48078	JUMPER WIRE, PUSH		
45326A2	SWITCH ASSEMBLY, CUT-				BUTTON SWITCH (RED -		
45220	OUT LIMIT			40450	3-1/4")	105	47
45336 45341-20	PLATE, MANIFOLD HARNESS, CONTROL	103	9	48152	SHUTTER, CHOKE - CARBURETOR	25	25
45541-20	PANEL (20 FEET)	105	50	48203	ROD, CHOKE	25 25	22
45377	BRACKET, MOUNTING -	.00	00	48396	CABLE, WIRE - STARTER		
	HYDRAULIC PUMP TO				MOTOR TO SOLENOID	23	34
	BOAT	103	22	48664A1	REPAIR KIT (SEE NOTE A		
45391	SPACER, RUBBER - HIGH	4.0	0.4	4000044	ABOVE)	109	-
45202	TENSION LEADS	13	34	48666A1	ADAPTOR ASSEMBLY, DISTRIBUTOR	17	25
45392	BRACKET, FRONT - WIRE REAINER	13	31	48671	PLATE, THROTTLE	17	35
45392	BRACKET, FRONT - WIRE	10	01	40071	ACTUATOR	17	28
	RETAINER	13	31	48692	COLLAR, THROTTLE		
45409	WIRE RETAINER, HGIH				ACTUATOR	17	24
	TENSION LEADS	13	30	48752	INSERT, WATER PUMP		
45508	CAM, LIMIT SWITCH	107	25	49342	BODY	89	24
45509	ADJUSTING STUD PLATE, RETAINING - LIMIT	107	25	49342	BUMPER, RUBBER - SOLENOID BRACKET	105	41A
45509	SWITCH CAM	107	26	49589	STRAP, CHOKE KNOB TO	103	417
45559	TERMINAL BLOCK,		_0	.0000	CHOKE ROD	25	19
	HYDRAULIC PUMP	103	19	52023	CAP, NYLON - ACTUATOR		
45559	TERMINAL BLOCK, STATOR				COLLAR ADJUSING SCRW	17	27
	LEADS	21	13	52023	NYLON - STOP BRACKET		
46096	MOUNT, RUBBER - TOP			E2400	ADJUSTING SCREW	19	46
	COWL FRAME (HEAVY DUTY)	3	18	52100 52132A1	WEAR PLATE, LINK ROD BEARING CARRIER	63	33
46265	BOOT, RUBBER - STARTER	J	10	02 102/ (1	ASSEMBLY (IDENTIFIED		
	SOLENOID TERMINAL	103	33		BY CASTING 352132)	97	68
46265	BOOT, SOLENOID			52518	CLUSTER, THROTTLE		
	TERMINAL	23	37		LEVER (UPPER		_
46785A1	COWL LATCH ASSEBILY -	7	10	F0000	CARBUREOTR)		7
	NON LOUVERED	1	12	52699	COVER, GEAR HOUSING	99	73

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
52732	BRACKET, ANCHOR - CONTROL CABLES	63	24	56703	COLLAR, RUBBER - STARTER MOTOR MOUNT	21	24
52733A9	RETAINER ASSEBMLY, TOP COWL	3	2	56849	KNOB, COWL FRONT COVER FASTENING	7	2
52737	LEVER, COWL LATCH HINGE	3	11	57247	STOP, RUBBER - STARTER MOTOR	21	22
52739	HINGE, COWL LATCH - TOP COWL		10	57602	WIRE, GROUND - DIST. ADAPTOR TO FRONT		
52769	WIRING HARNESS, INTERNAL	21	1	58124A4	BRACKET	19 47	40 22
52862A2	DRIP TRAY ASSEMBLY, BOTTOM COWL	61	2	58454	CAM, THROTTLE  ACTUATOR PLATE	17	33
52887	GUIDE, PUSH ROD - REVERSE LOCKING	81	14	58807A1	FLAME ARRESTOR, VENT - DISTRIBUTOR CAP	11	23
52889	NOZZLE, TELL TALE HOSE TO BOTTOM COWL		14	58807A1	FLAME ARRESTOR, VENT - DISTRIBUTOR HOUSING .		7
53078		-	1 <del>4</del> 7	59071		11 39	7 12
53107	CAP, PLASTIC - TILT TUBE . JUMPER WIRE, PUSH BUTTON SWITCH	73	1	59757	COVER, FUEL INLET BRACKET, COIL LEAD RETAINER	25	13
53334	(PURPLE - 3")	105	47	60096	BOOT, HIGH TENSION CABLE	11	21
53417	TOP	7	10	60096	BOOT, SPARK PLUG LEAD TO DISTRIBUTOR	11	28
33417	ASSEMBLY, DISTRIBURTOR TO			60304A15	SHIFT SHAFT ASSEMBLY, UPPER (SHORT SHAFT) .		17
53665	CRANKCASE INSERT, THROTTLE	11	5	60304A16	SHIFT SHAFT ASSEMBLY, UPPER (LONG SHAFT)		17
53720A2	COUPLING THROTTLE PICK-UP	25	12	60304A44	SHIFT SHAFT ASSEMBLY, UPPER (LONG SHAFT)		17
54196A6	BRACKET ASSEMBLY CARRIER ASSEMBLY, "O"	25	10	60304A45	SHIFT SHAFT ASSEMBLY, UPPER (SHORT SHAFT) .		17
	RING	57	5	60431	COVER, EXHAUST		
54283A1	PLUNGER AND LINK ASSEMBLY, CHOKE	0.5	0	60435	MANIFOLD TUBE, EXHAUST LONG	53	20
E 4000 A 4	SOLENOID		6	00.407	SHAFT	79	8
54293A4	CHOKE SOLENOID		1	60437	MEGAPHONE, EXHAUST	67	19
54346	CAM, SHIFT		51	60478	LEVER, THROTTLE	4-	
54567	DISTRIBUTOR HOUSING	19	50	00000	CONTROL		14
54942	SCREW, COWL - LOWER - LOUVERED	7	17	60909 60910	SEAL, EXHUAST TUBE PLATE, SUPPORT -		37
54943	SCREEN, COWL - UPPER - LOUVERED	7	16	62301	EXHAUST TUBE SEAL COVER, TRANSFER (TOP		38
55156A5	FUEL PUMP ASSEMBLY	33	1	00054.4.4	AND MIDDLE)	53	30
55278A1 55455	DIAPHRAGM KIT	33	3	62351A1 62497	BRACKET, SUPPORT -	23	38
55641	REAR	3	13	02002	DRIVE SHAFT -LONG SHAFT	81	40
55642A1	SWITCH	105 105	40 42	62863	TUBE, EXHAUST SHORT SHAFT	79	8
55642A7	CONTROL PANEL			62978	COVER, TRANSFER		
55692	ASSEMBLY, COMPLETE . COUPLING, SHIFT SHAFT	105 61	 19	63194	(BOTTOM)PAD, RUBBER - IGNITION	53	30
55738A1	SWITCH, PUSH BUTTON - CONTROL PANEL	105	46	63195	COVER, IGNITION COIL	15 15	8 9
55804A1	ASSEMBLY	17	6	63441	TUBE, MOUNTING-TILT STOP	109	45
55805 56029	BRACKET, STOP COVER, STARTER MOTOR	19	41	63473	TUBE, CUSHION - SHOCK PIN (USED WITH FULL		<b>.</b> -
	BRACKET-TOP	43	9		POWER TRIM)	75	20

Part Number	Description	Pg.	Ref. No.	Part Number	Description	Pg.	Ref. No.
	•	- 3-			·	- 3-	
64165A1	PLATE ASSEMBLY, EXHAUT EXTESNION	65	1	70679	COVER, UPER AND LOWER SHOCK MOUNTING PIN .	77	42
64461A4	HYDRAULIC PUMP	00	1	70692	SHOCK MOUNTING PIN . REVERSE LOCK ASSEMBLY	75	42 27
04401A4	ASSEMBLY	103	1	71808	COVER, WATER JACKET -	75	21
64461A4	HYDRAULIC PUMP	103	1	7 1000	CYLINDER BLOCK	53	13
0440174	ASSEMBLY, COMPLETE .	101	_	73519A1	TILT STOP	109	44
64507A1	REPAIR KIT (SEE NOTE B	101	-	73755A1	KNOB, CHOKE ROD	25	17
04307A1	ABOVE)	111	_	73733A1 73800A1	BEARING CARRIER	23	17
64944	COVER, WATER JACKET -			70000711	ASSEMBLY (IDENTIFIED		
01011	CYLINDER BLOCK	51	13		BY CASTING #73800)	97	68
64954	BRACKET, TOP COWL	٠.	.0	73984	YOKE, BOTTOM	71	15
0.00.	SUPPORT - REAR	3	20	74257A3	PLATE ASSEMBLY, DRIVE	• •	. •
64979A3	BRACKET ASSEBMLY, TOP	-			SHAFT HOUSING	67	15
	COWL - FRONT	5	29	75043	CAP, THUMB SCREW	73	3
65091	THRUST HUB	99	79	75296	MOUNT, RUBBER - UPPER		
65369	TUBE, EXHAUST LONG				(LONG SHAFT)	81	20
	SHAFT	79	8	75297	MÒUNT, RUBBER - UPPER		
65370	TUBE, EXHAUST SHORT				(SHORT SHAFT)	81	20
	SHAFT	79	8	75299	MOUNT, RUBBER - LOWER		
65609A2	FRAME ASSEMBLY, TOP				(LONG SHAFT)	81	24
	COWL SUPPORT	3	16	75300	MOUNT, RUBBER -LOWER		
65638	BOOT, EXHASUT TUBE	79	8A		(SHORT SHAFT0	81	24
65799	LINK, LOCKING LEVER TO			75778	PLATE, BAFFLE - EXHAUST		
	COVER	63	29		MANIFOLD	53	18
65800	PACKING, CARRIER	57	6	75971A1	FRAME ASSEMBLY, TOP		
66084	BRACKET, MOUNTING -				COWL SUPPORT	3	16
	SHOCK CYLINDER (PORT)	107	7	76062A1	SHAFT ASSEMBLY, SHIF -		
66094	COVER, TRANSFER				LOWER	91	39
	(BOTTOM)	53	30	76367	POINTER, TIMING	53	33
66096A1	PLATE ASSEMBLY,			76369	SPACER, BOTTOM COWL		
	EXHASUT EXTENSION	65	1		(COWL FRONT COVER) .	61	7
66098A2	PLATE ASSEMBLY, DRIVE			76370	SHIELD,TOP COWL - REAR	3	6
0040540	SHAFT HOUSING	67	15	76385	TILT LOCK ASSEMBLY,		
66165A2	ADAPTOR ASSEMBLY,	47	0.5	70000	PORT	75	22
66336	DISTRIBUTOR BUMPER, RUBBER - DRIVE	17	35	76386	TILT LOCK ASSEMBLY,	75	21
00330	SHAFT HOUSING (SHORT			76387	STARBOARD TUBE, TILT LOCK		23
	SHAFT)	01	29	76509A3	TRIM CYLINDER ASSEMBLY		
66517	RESTSRICTION,	01	29	76867	COVER, STARTER MOTOR	107	I
00317	CRANKCASE BLEED	43	3	70007	BRACKET-BOTTOM	45	13
66530A2	FUEL PUMP ASSEMBLY	39	1	77103A3	BRACKET ASSEMBLY, TOP	75	10
66575	BASE, FUEL PUMP	39	16	77 100/10	COWL - FRONT	5	29
66599A1	DIAPHRAGM ASSEMBLY	39	3	N.S.S.	"O" RIG (1 5/8" X 1 13/16" X	•	
67469	ROD LINK - UPPER(1		Ü		1/8")	111	6
	PIECE)-SEE PHOTO	17	12A	N.S.S.	"O" RING (1 1/2" X 1 5/8" X		-
69190	PLATE, COIL MOUNTING	15	17		1/16")	111	1
69205	"D" WASHER, CLIP			N.S.S.	"O" RING (1 1/2" X 1 5/8" X		
	FASTENING SCREW	9	16		1/16")	111	1
69205	"D" WASHER, FUEL LINE			N.S.S.	"O" RING (1 1/4" X 1 7/16" X		
	CLIP SCREW	39	28		1/16")	111	4
69205	"D" WASHER, WIRING			N.S.S.	"O" RING (1 1/4" X 1 7/16" X		
	HARNESS CLIP SCREW .	21	12		1/16")	111	4
69214A1	THUMB SCREW ASSEMBLY	73	2	N.S.S.	"O" RING (1 3/4" X 1 15/16" X		
69234A2	BRACKET ASSEMBLY, TOP				1/8")	111	9
	COWL - FRONT	5	29	N.S.S.	"O" RING (1 3/4" X 1 5/16" X		
69240A2	FRAME ASSEMBLY, TOP				1/8")	111	9
	COWL SUPPORT	3	16	N.S.S.	"O" RING (1 5/16" X 1 1/2" X		
69258	PIN, MOUNTING TUBE	109	46		1/8")	111	7
69259	TUBE, MOUNTING - TILT	465	4	N.S.S.	"O" RING (1 5/16" X 1 1/2" X		_
	STOP	109	45		1/8")	111	1

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
N.S.S.	"O" RING (1 5/8" X 1 13/16" X			10-23015	SCREW, UPPER CARB.		
	1/8")	111			FILTER SCREEN TO		
N.S.S.	"O" RING (1 7/8" X 2" X 1/8")		8	40.04004	CARB. (1")	27	29
N.S.S.	"O" RING (1 7/8" X 2" X 1/8")	111	8	10-24234	SCREW, ANCHOR BRACKET TO CYLINDER BLOCK (1")	63	30
N.S.S.	"O" RING (1" X 1 3/16" X 3/32")	111	2	10-24234	SCREW, BRACKET TO	03	30
N.S.S.	"O" RING (3/4" X 15/16" X		2	10 2 120 1	CYLINDER BLOCK (1")	53	29
11.0.0.	1/8")	111	2	10-24234	SCREW, MOUNTING		
N.S.S.	"O" RING (5/8" X 3/4" X 1/16")	111	3		BRACKET TO HYDRAULIC		
N.S.S.	"O" RING (7/32" X 11/32" X				PUMP (1")	103	23
	1/16")	111	5	10-24942	SCREW, LIMIT SWITCH		
N.S.S.	"O" RING (7/32" X 11/32" X		_		COVER TO MOUNTING BRACKET (7/16")	107	24
N.C.C	1/16")	111		10-25299	SCREW, CHOKE SOLENOID	107	34
N.S.S. N.S.S.	"O" RING (7/8" X 1" X 1/16") . PISTON, ROD - HEAVY	111	3	10 20200	(3/4")	25	4
N.S.S.	DUTY	111	11	10-25822	SCREW, STRAINER COVER		
N.S.S.	PISTON, ROD - STANDARD	111	11		FASTENING	29	18
N.S.S.	SEAL, SLIPPER - PISTON	111	10	10-26132	SCREW, TOP COVER		
N.S.S.	SEAL, SLIPPER - PISTON	111	10		ATTACHING (2 1/2")	43	10
10-20037	SCREW, RETAINER TO			10-27281	SCREW, FUEL PUMP	33	8
	FUEL PUMP (1/4")	39	10	10-27281	MOUNTING (1 3	33	0
10-20037	SCREW, RETAINER TO	00	_	10-27201	MOUNTING (1 3/8")	33	8
10-20359	HOUSING	33	7	10-28009	BOLT, HYDRAULIC PUMP		-
10-20359	BEARING LOCKING (1")	47	20		TO BOAT (3 1/4")	103	26
10-20362	SCREW, DISTRIBUTOR	71	20	10-28200	SCREW, STOP TO DRIVE		
10 20002	HOUSING TO				SHAFT HSG. (2 7/8") -		
	CRANKCASE (1 1/2")	19	37	40.00004	LONG SHAFT	69	12
10-20411	SCREW, VALVE BODY TO			10-28634	SCREW, FILLE - HYDRAULIC PUMP	101	8
	RESERVIOR (5/8")	101	4	10-28634	SCREW, FILLER -	101	U
10-20776	SCREW, GROUND WIRE TO	0.4			HYDRAULIC PUMP	103	3
10-20847	BOTTOM COWL (1/2") SCREW, CLUSTER TO	21	8	10-28634	SCREW, GREASE FILLER		
10-20047	THROTTLE LEVER	25	8		AND VENT HOLE	91	47
10-20847	SCREW, THROTTLE STOP	20	O	10-28636	SCREW, DISTRIBUTOR		
	LEVER	29	19		ADAPTOR TO STOP BRACKET (3/4")	10	42
10-20847	SCREW, THROTTLE STOP			10-28636	SCREW, EXHAUST TUBE	19	42
	LEVER	35	17	10 20000	ATTACHING (3/4")	79	9
10-21091	SCREW, CYLINDER BLOCK			10-28636	SCREW, TIMING POINTER		
40.04440	COVER (1 1/8")	53	25		ATTACHING (3/4")	53	34
10-21140	SCREW, MOUNTING BRACKET TO HYDRAULIC			10-28636	SCREW, TRANSFER COVER		
	PUMP (1/2")	103	35	40 00007	MOUNTING (3/4")	53	32
10-21449	SCREW, TOP COVER	100	00	10-29227	SCREW, HARNESS FASTENING CLAMP (1/2")	105	53
	ATTACHING (2")	43	10	10-29256	SCREW, LOWER MOUNT	100	55
10-21574	SCREW, CRANKCASE TO			10 20200	CLAMP TO DRIVE SHAFT		
	CYLINDER BLOCK (1 5/8")	45	17		HOUSING (7/8")	81	36
10-21625	SCREW, SOLENOID TO COIL			10-29722	SCREW, COVER TO LOWER		
40.04007	BRACKET (3/4")	21	29		CLAMP MOUNT (5/8")	81	39
10-21937	SCREW, LOWER SHOCK PIN - LONG SHAFT	75	22	10-29794	SCRWE, SWITCH BOX (3/8")	21	17
10-22040	SCREW, DISTRIBUTOR	75	32	10-30225	SCREW, END CAP MOUNTING (1")	51	12
10 220 10	HOUSING TO			10-30225	SCREW, END CAP	51	12
	CRANKCASE (1 1/2")	19	37		MOUNTING (1")	51	6
10-22523	SCREW, LOWER CARB.			10-30663	SCREW, FUEL LINE CLIP TO		
	FITLER SCREEN TO CARB				CYLINDER BLOCK (3/8") .	33	15
40.00050	(3/4")	27	29	10-30663	SCREW, HARNESS LEADS		
10-22956	SCREW, REAR HOOK TO TOP COWL (7/8")	3	14		TO TERMINAL BLOCK (3/8")	102	21
	101 00VVL (7/6)	3	14		(5/6)	103	۷ ا

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
10-30720	SCREW, WATER PUMP BODY TO GEAR HOUSING			10-38257	SCREW, VENT - HYDRAULIC PUMP	101	7
10-31471	(2 1/4")SCREW, ADAPTOR TO	89	29	10-38257	SCREW, VENT - HYDRAULIC PUMP	103	5
10-31471	BOTTOM COWL (3 1/4") SCREW, ADAPTOR TO	33	30	10-38398	SCREW, PLATE AND HUB TO FLEXIBLE PLATE (7/8")	9	6
10-31471	BOTTOM COWL (3 1/4") SCREW, COIL MOUNTING	41	38	10-38601	SCREW, SOLENOID TO COIL BRACKET (3/4")	21	29
10-31471	BRACKET (3 1/4") SCREW, SUPPORT TO	15	4	10-39767	SCREW, BOTTOM COVER		
	BOTTOM COWL (3 1/4")	61	11	10-45263	ATTCHING (1 7/8") SCREW, MOUNTING	45	14
10-32293	SCREW, CRANKCASE TO CYLINDER BLOCK (1 3/4")	45	17		BRACKET TO UPPER SHOCK PIN (2 1/4")	107	8
10-32293	SCREW, CRANKCASE TO CYLINDER BLOCK (1 3/4")	45	17	10-45264	SCREW, SHOCK CYLINDER TO LOWER SHOCK PIN (1		
10-32417	SCREW, FLEXIBLE PLATE TO FLYWHEEL (5/8")	9	5	10-45265	9/16")SCREW, BLEED - SHOCK	107	4
10-32866	SCREW, INLET COVER TO BOAT (2")	109	38	10-45328	CYLINDERSCREW, SHOCK CYLINDER	107	2
10-33473	SCREW, BOTTOM COVER ATTACHING (2 5/8")	45	14	.0 .0020	TO MOUNTING BRACKET (3 9/16")	107	19
10-33473	SCREW, CRANKCASE TO CYLINDER BLOCK (2 5/8")			10-45775	SCREW, MAIN BEARING		
10-34290	SCREW, STARTER SOLENOID TO MOUNTING	45	17	10-47255	CLAMPING (9/16") SCREW, CUT-OUT LIMIT SWITCH TO MOUNTING		17
10-35519	BRACKET (5/8")	103	37	10-47828	BRACKET (9/16")	107 69	31 6
10-37370	(1/2") SCREW, COVER TO FUEL	103	20	10-48408	SCREW, DRIP TRAY TO BOTTOM COWL (1/2")	61	4
10-37370	PUMP (5/8") SCREW, SHIELD TO TOP	39	13	10-48408	SCREW, TELL TALE NOZZLE TO BOTTOM COWL (1/2")	61	15
10-37558	COWL (5/8")	3	7	10-48409	SCREW, SUPPORT BRACKET ATTACHING	•	. •
10-37559	COWL (1 1/4") SCREW, THROTTLE LEVER	3	4	10-48591	(5/8") -LONG SHAFT SCREW, SPACER TO	81	41
10-37339	TO EXHAUST COVER (1	47	40		BOTTOM COWL (1/2")	61	8
10-37562	3/4"0	17	18	10-48591	SCREW, STRAP TO CHOKE KNOB (1/2")	25	20
10-37562	BOTTOM COWL (1") SCREW, REAR BRACKET TO	5	27	10-48591	SCREW, STRAP TO CHOKE ROD (1/2")	25	23
10-37571	FRAMESCREW, SEAL AND RETAINING STRIP TO	5	24	10-48675	SCREW, ADJUSTING - THROTTLE ACTUATOR COLLAR (1 1/2")	17	25
10-37655	EXT. PLATE (1/2") SCREW, COVER TO SHOCK	65	5	10-49318	SCREW, LOWER MOUNT (5		
	MOUNTING SCREW	77	43	10-49554	BOLT, STEERING ARM TO		25
10-37656	SCREW, RECTIFIER TO FRONT BRACKET (5/8")	23	39	10-52195	UPPER MOUNT (5 7/8") SCREW, FLOAT BOWL	/1	18
10-37892	SCREW, THROTTLE ACTUATOR PLATE TO ECONOMIZER COLLAR			10-52195	COVERSCREW, FLOAT BOWL COVER	35 35	13 13
10-37941	(1")SCREW, COIL MOUNTING	17	29	10-52195	SCREW, FLOAT BOWL COVER (SHORT)	29	10
10-37990	BRACKET (1 3/4") SCREW, ADAPTOR TO	15	2	10-52196	SCREW, FLOAT BOWL COVER (LONG)		11
10-37990	BOTTOM COWL (1 3/4") SCREW, ADAPTOR TO	33	30	10-53077	SCREW, UPPER NAD LOWER SHOCK	20	
10-07 330	BOTTOM COWL (1 3/4")	41	38		MOUNTING PIN	77	41

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
10-53556	SCREW, CYLINDER BLOCK COVER (1")	53	25	10-65210	SCREW, GEAR HOUSING TO DRIVE SHAFT HOUSING		
10-53556	SCREW, TRANSFER COVER MOUNTING (1")	53	32	10-65263	(1") SCREW, REAR BRACKET TO	99	78
10-53576	SCREW, MANIFOLD COVER MOUNTING (1 1/8")	53	21	10-65774	FRAME (1") SCREW, DISTRIBUTOR CAP	3	24
10-54803 10-55511	SCREW, CONNECTING ROD SCRW, BRACKET TO TOP	57	28	10-66023	CLAMP (1 1/8") SCREW, ADAPTOR PLATE	11	16
10-56500	COWL FRAME (1 1/2") SCREW, CONTROL VALVE AND MANIFOLD PLATE	5	32	10-66023	TO HOUSING PLATE (2") . SCREW, HOUSING PLATE TO DRIVE SHAFT HSG.	65	8
10-56743	TO HYDRAULIC PUMP SCREW, STOP TO DRIVE SHAFT HSG. (3 1/8") -	103	14	10-66024	(2")	65 99	10 75
10-57807	SHORT SHAFT SCREW, TRIM COVER TO	69	12	10-66104	SCREW, THROTTLE BRACKET MOUNTING		
10-57841	BOTTOM COWL SCREW, CRANKCASE TO	79	6	10-66686	(3/4") SCREW, FUEL PUMP TO	25	11
10-60480	CYLINDER BLOCK (2 3/4") SCREW, MEGAPHONE TO	45	17	10-66687	BASE (1")	39	15
	DRIVE SHAFT HOUSING PALTE (1 1/8")	67	20	10-68298	BOTTOM COWL (1 1/5") BOLT, CLAMP BRACKET TO BOAT TRANSON (LOWER)	39 73	17 13
10-62204	SCREW, REED STOP MOUNTING (1 3/8")	57	21	10-68298	BOLT, MOUNTING BRACKET TO BOAT TRANSOM (3	7.5	10
10-62568	SCREW, FRONT AND REAR BRACKET ATTACHING	40	00	10-68299	1/4")BOLT, CLAMP BRACKET TO	107	9
10-62568	(3/8")	13 39	33 27	10-68513	BOAT TRANSOM (UPPER) SCREW, RETAINING PLATE	73	13
10-62568	SCREW, GROUND STRAP ATTACHING	79	6C		AND CAM TO SHOCK CYLINDER (3/8")	107	27
10-62568	SCREW, GROUND STRAP ATTACHING (3/8")	11	6	10-68554	SCREW, PULLEY CLAMPING (1/2")	19	56
10-62568	SCREW, GROUND STRAP ATTACHING (3/8")		37	10-69020	SCRW, WIRING HARNESS CLAMP TO BOTTOM	04	4
10-62568	SCREW, IGNITION COIL WIRE TO SWITCH BOX			10-69029	COWL (7/8")	21 41	4 38
10-62568	(3/8")	15	16	10-69029	SCREW, SUPPORT TO BOTTOM COWL (1 3/4")	61	11
10-62568	SCREW, STATOR LEAD CLIP	47	24	10-69035	SCRW, WIRE CABLE TO STARTER MOTOR (5/8") .	21	21
10-62568	FASTENING (3/8") SCREW, STATOR LEADS TO TERMINAL BLOCK (3/8") .	9	15 14	10-69046	SCREW, COIL TO CYLINDER BLOCK (2")	15	10
10-62568	SCREW, SWITCH RETAINER TO CONTROL PANEL	21	14	10-69092 10-69235	SCREW, BRACKET TO BOTTOM COWL (1 1/4") SCREW, SWITCH TO FRONT	5	30
10-62568	(3/8")	105	49	10-69267	MOUNTING BRACKET (1/2") SCREW, TOP COVER	47	23
10-62644	(3/8")SCREW, ADAPTOR PALTE	21	11	10-69268	ATTACHING (1 3/4") SCREW, BOTTOM COVER	45	10
10-63136	ATTACHING (5/16") SCREW, STATOR TO UPPER	65	8	10-69375	ATTACHING (1 7/8") SCREW, UPPER AND	45	14
10-64022	END CAP (7/8") SCREW, STOP BRACKET ADJUSTING (2 1/8")	9 19	13 44	10-69762	LOWER SHOCK MOUNTINGH PIN SCREW, TOP COVER	77	41
10-64278	SCREW, COIL BRACKET (1")	25	14		ATTACHING (1 3/8")	45	10
10-64278	SCREW, RECTIFIER TO MOUNTING BRACKET (1")	23	39	10-71908	SCREW. BRACKET TO BOTTOM COWL (1 1/2")	5	30

		_	Ref.			_	Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
10-73649A1 10-73657	THUM SCREW ASSEMBLY . SCREW, CRANKCASE TO		2	11-34933	NUT, GEAR HOUSING TO DRIVE SHAFT HOUSING		
10-76196	CYLINDER BLOCK (1 1/2") SCREW, STRAP TO CHOKE KNOB (USE WITH NYLON	45	17	11-34933	STUDS	99	77 19
	CHOKE KNOB)	25	20	11-34933	NUT, UPPER MOUNT BOLT	71 81	23
11-20083	NUT, DISTRIBUTOR	25	20	11-34933	NUT, LINK ROD	63	23 22
11-20003	HOUSING SCREW	19	39	11-35045	NUT, WATER PUMP	03	22
11-20083	NUT, STARTER SOLENOID TERMINAL (5/16")	103		11-353043	FASTENING SCREW	89	32
11-20110	NUT, CARBURETOR FILTER SCREEN FASTENING	100	02		NUT, HYDRAULIC PUMP BOLT	103	27
	SCREW	27	31	11-35521	NUT, LOWER MOUNT CLAMP COVER	81	38
11-20110	NUT, CHOKE SHUTTER TO		٠.	11-35888	NUT, RUBBER MOUNT TO	01	30
	CARBURETOR STUD	27	27	11-33000	TOP COWL FRAME	3	19
11-20509	NUT, THROTTLE CONTROL			11-35888	NUT, THROTTLE CABLE TO	3	19
	LEVER SCREW	17	21	11-33000	LOWER SWIVEL	17	23
11-20645	NUT, MOUNTING BRACKET			11-35888	NUT, UPPER LOINK ROD TO	17	23
	TO HYDRAULIC PUMP			11-33000	THROTTLE CONTROL		
	THRU BOLT	105	41		LEVER	17	17
11-20645	NUT, STARTER SOLENOID			11-35921	NUT, PINION GEAR TO	17	17
	TERMINAL (#10)	103	30	11-33921	DRIVE SHAFT	85	10
11-20645	NUT, WOLENOID TERMINAL	25	3	11-37424	NUT, BOTTOM YOKE	00	10
11-20696	NUT, SHOCK CYLINDER			11-3/424	ATTACHING	69	16
	SCREW	107	21	11-45076	NUT, FASTENING -	09	10
11-20890	NUT, STARTER MOTOR			11-45070	RECTIFIER STATOR		
	TERMINAL	21	27		LEADS	22	42
11-21825	NUT, STARTER SOLENOID			11-45076	NUT, IGNITION COIL	23	42
	SCREW	105	39	11-45076		15	11
11-21908	NUT, MOUNTING BRACKET			11 45076	TERMINAL (#10)	15	14
	SCREW	103	25	11-45076	NUT, STATOR LEADS TO RECTIFIER	23	42
11-25096	NUT, LOWER MOUNT			11-45076	NUT, SWITCH BOX	23	42
	SCREW	81	27	11-45070	TERMINAL	21	16
11-25269	NUT, STOP FASTENING			11-45592	NUT, WATER PUMP BODY	۷1	10
	SCREW	69	13	11-40092	FASTENING STUD	89	34
11-26768	NUT, DISTRIBUTOR CAP			11-45774	NUT, MAIN BEARING	09	J <del>4</del>
	CLAMP SCREW	11	17	11-40/14	CLAMPING SCREW	57	18
11-27164	NUT, CONTROL PANEL	40=	4-	11-45812	NUT, JAM - LIMIT SWITCH	01	10
44.00770	STUD	105	45	11 10012	ADJUSTING STUD	107	24
11-28770	NUT, CLAMP BRACKET	70	4.4	11-46438	NUT, STRAP TO CHOKE	107	- '
11-28770	STUD	13	11	11 10 100	ROD SCREW	25	24
11-20//0	TO CLAMP BRACKET			11-46793	NUT, CARBURETOR		
	STUD	107	18		MOUNTING STUD	31	37
11-28770	NUT, RUBBER MOUNT	5	36	11-46793	NUT, COVER SCREW	43	12
11-29250	NUT, CRANKCASE SCREWS	J	30	11-46793	NUT, COVER SCREW	45	16
11-29250	(LOWER)	47	19	11-46793	NUT, CRANKCASE		
11-29488	NUT, INLET COVER SCREW	109	40		FASTENING SCREWS	45	19
11-29489	NUT, GEAR HOUSING AND	100	.0	11-46887	NUT, ADAPTOR FASTENING		
11 20 100	DRIVE SHAFT HOUSING				SCREW	33	31
	STUDS	81	32	11-46887	NUT, ADAPTOR FASTENING		
11-29598	NUT, RUBBER MOUNT TO	٠.	-		SCREW	41	39
	REAR SUPPORT			11-46887	NUT, BEARING CLAMPING		
	BRACKET	3	23		SCREW	57	14
11-34388	NUT, HARNESS FASTENING			11-46887	NUT, CHOKE ROD SPRING		
	SCREW	105	54		TO CARBURETOR STUD .	27	35
11-34932	NUT, POWERHEAD STUD	67	23	11-46887	NUT, COIL BRACKET		
11-34933	NUT, GEAR HOSUING AND				SCREW	25	16
	DRIVE SAHFT HOUSING			11-46887	NUT, COIL MOUNTING		
	STUDS	81	30		BRACKET SCREW	15	6

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
11-46887	NUT, LOWER SHOCK PN SCREW - LONG SHAFT	75	33	12-22753	WASHER, BOTTOM COVER ATTACHING SCREWS	45	15
11-46887	NUT, RECTIFIER MOUNTING			12-22753	WASHER, CRANKCASE		
44 40007	SCREW	23	40	40.00750	SCREWS	47	18
11-46887	NUT, SUPPORT SCREW	61	12	12-22753	WASHER, TOP COVER	40	4.4
11-46887	NUT, SWITCH BOX SCREW	21	19	40.04004	ATTACHING SCREWS	43	11
11-47661	NUT, JAM - PUSH ROD	81	16	12-24391	WASHER, STOP BRACKET	40	440
11-49091	NUT, CONNECTING ROD			10.04676	ADJUSTING SCREW	19	44A
	SCREW	57	29	12-24676	WASHER, CONTROL PANEL	405	4.4
11-52707	NUT, PROPELLER	99	83	40.05070	STUD	105	44
11-52901	NUT, FLYWHEEL TO		_	12-25970	WASHER, POWERHEAD	67	22
	CRANKSHAFT	57	2	10 05070	STUD	67	22
11-52901	NUT, FLYWHEEL(PART OF			12-25970	WASHER, POWERHEAD	70	10
	1-436-4842A3			12-27939	STUDS	79	12
	CRANKSHAFT			12-27939		10	47
	ASSEMBLY)		2	12-28196	HOUSING	19	47
11-53153	NUT, REED STOP SCREW .	57	22	12-20190	RETAINER (INNER)	77	38
11-54209	NUT, ROTOR SHAFT TO			12-28404	WASHER, THUMB SCREW .	77 73	3
	DISTRIBUTOR HOUSING .	11	2	12-28421		13	3
11-56041	NUT, TILT TUBE FASTENING	73	6	12-20421	WASHER, UPPER AND LOWER BUSHING		
11-60049	NUT, REAR BRACKET				RETAINER (OUTER)	77	40
	SCREW	3	25	12-29245	WASHER, COIL BRACKET	11	40
11-60049	NUT, SUPPORT BRACKET			12-29243	SCREW	25	15
	SCREW	5	31	12-29245	WASHER, MEGAPHONE	23	13
11-64015	NUT, STOP BRACKET			12-29243	SCREW	67	21
	ADJUSTING SCREW	19	45	12-29245	WASHER, THROTTLE	07	۷1
11-64015	NUT, THROTTLE ACTUATOR			12-23243	CONTROL LEVER SWIVEL	17	16
	COLLAR ADJUSTING			12-29245	WASHER, WATER PUMP	17	10
	SCREW	17	26	12-232-3	BODY FASTENING		
11-64278	SCRW, RECTIFIER TO				SCREW AND STUD	89	31
	MOUNTING BRACKET (1")	23	39	12-29395	WASHER, THROTTLE	00	01
11-64484	NUT, UPPER LINK ROD			12 20000	CONTROL LEVER SCREW	17	19
	ADJUSTING - 3 PIECE			12-29590	WASHER, CUPPED -	''	10
	(SEE PHOTO)	17	11	12 20000	THRUST HUB	99	80
11-64809	NUT, CARBURETOR			12-30164	WASHER, COIL SCREW	15	11
	MOUNTING STUD	37	34	12-30164	WASHER, RECTIFIER		• •
11-64809	NUT, DRIVE SHAFT				SCREW	23	41
	HOUSING STUD	65	13	12-30164	WASHER, THROTTLE		
11-68219	NUT, SOLENOID TERMINAL				ACTUALTOR PLATE		
	(#10)	23	33		FASTENING SCREW	17	30
11-68292	NUT, WOLENOID TERMINAL			12-30164	WASHER, WIRING HARNESS		
	(5/16")	23	36		CLAMP SCREW	21	6
11-68411	NUT, CLAMP BRACKET			12-30771	WASHER, COVER		
	BOLT	73	15		FASTENING KNOB		
11-68411	NUT, MOUNTING BRACKET				(RUBBER)	7	3
	BOLT	107	11	12-31211	WASHER, SPLINED -		
11-69254	NUT, POWERHEAD STUDS				PROPELLER NUT	99	81
	(3/8-24)	79	11	12-31263	WASHER, UPPER MOUNT		
12-20084	WASHER, DISTRIBUTOR				BOLT	81	21
	HOUSING SCREW	19	38	12-31266	WASHER, RUBBER - SHIFT		
12-20260	WASHER, GREASE FILLER				SHAFT BUSHING	91	44
	AND VENT HOLE SCREW	91	48	12-33001	WASHER, FLYWHEEL NUT .	9	3
12-20260	WASHER, SEALING - FILLER			12-34437	WASHER, DRIVES SHAFT		
	SCREW	101	9		HOUSING STUD	65	12
12-20260	WASHER, SEALING -			12-35462	WASHER, LINK ROD	61	21
	HYDRAULIC PUMP FILLER			12-35462	WASHER, STOP BRACKET		
	SCREW	103	4		FASTENING SCREW	19	43
12-20878	WASHER, INLET COVER			12-35462	WASHER, TIMING POINTER		
	SCREW	109	39		SCREW	53	35

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
12-36001	WASHER, CLAMP BRACKET STUD	73	8A	13-26992	LOCKWASHER, CONTROL VALVE AND MANIFOLD		
12-36001	WASHER, WATER PUMP BODY FASTENING STUD	89	33	13-26992	PLATE SCREW LOCKWASHER, EXHAUST	103	15
12-37807	WASHER, SHOCK CYLINDER SCREW			13-26992	TUBE SCREW LOCKWASHER, GROUND	79	10
12-45176	(STARBOARD ONLY) WASHER, GEAR HOUSING	107	20	13-26992	WIRE SCREW LOCKWASHER, MOUNTING	21	9
	TO DRIVE SHAFT HOUSING STUDS	81	31	13-26992	BRACKET SCREW LOCKWASHER, REAR HOOK	103	36
12-45176	WASHER, GEAR HOUSING TO DRIVE SHAFT			13-26992	MOUNTING SCREW LOCKWASHER, RUBBER	3	15
	HOUSING STUDS	81	33		MOUNT TO REAR		
12-45176	WASHER, GEAR HOUSING			40.00000	SUPPORT BRACKET	3	22
	TO DRIVE SHAFT HOUSING STUDS	99	76	13-26992	LOCKWASHER, STARTER  MOTOR TERMINAL	21	26
12-46246	WASHER, ADAPTOR -	33	70	13-26992	LOCKWASHER, STARTER	۷ ۱	20
	DISTRIBUTOR HOUSING .	17	34	.0 _000_	SOLENOID FASTENING		
12-47247	WASHER, NEEDLE				SCREW	23	30
10 17010	LOCATING	59	31	13-26992	LOCKWASHER, STARTER	400	
12-47840	WASHER, RUBBER - UPPER	01	22	13-26992	SOLENOID SCREW LOCKWASHER, WATER	103	38
12-49221	MOUNT BOLT WASHER, GEAR HOUSING	81	22	13-20992	PUMP BODY SCREW	89	30
12 10221	FLUSHING HOLE PLUG	91	50	13-26992	WASHER, BOTTOM COVER	00	00
12-49339	WASHER, LOWER MOUNT				ATTACHING SCREWS	45	11
	SCREW	81	26	13-26993	LOCKWASHER, ADAPTOR		
12-52864	WASHER, CLAMP BRACKET		_		PLATE SCREW	65	9
10 50540	TILT TUBE	73	5	13-26993	LOCKWASHER, BRACKET	E	24
12-53540	WASHER, ECONOMIZER COLLAR - DISTRIBUTOR			13-26993	SCREW	5	31
	HOUSING	17	5	10 20000	SOLENOID SCREW	25	5
12-59378	WASHER, LOWER BUSHING			13-26993	LOCKWASHER, CLAMP		-
	RETAINER (INNER)	77	39		BRACKET STUD	73	10
12-59572	WASHER, COVER			13-26993	LOCKWASHER, MOUNTING		
	FASTENING KNOB	7	4		BRACKET TO CLAMP	407	47
12-68300	(PLASTIC)	1	4	13-26993	BRACKET STUD LOCKWASHER, REAR	107	17
12-06300	BOLT (UPPER)	73	14	13-20993	BRACKET SCREW	5	26
12-68410	WASHER, CLAMP BRACKET	. •		13-26993	LOCKWASHER, REAR	Ū	
	BOLT (LOWER)	73	14		SUPPORT BRACKET		
12-68410	WASHER, MOUNTING				SCREW	5	28
10.00010	BRACKET BOLT	107	10	13-26993	LOCKWASHER, RUBBER	_	0.5
12-69342	WASHER, SWIVEL PIN - UPPER	69	4	13-26993	MOUNT LOCKWASHER, SOLENOID	5	35
12-69374	WASHER, UPPER AND	09	4	13-20993	TERMINAL (5/16")	23	35
12 0007 1	LOWER BUSHING			13-26993	LOCKWASHER, STARTER		00
	RETAINER (OUTER)	77	40		SOLENOID TERMINAL		
12-69380	WASHER, SWIVEL PIN -				(5/16")	103	31
	LOWER	69	10	13-26993	LOCKWASHER, SUPPORT	_	
12-70132	WASHER, WATER JACKET			12 26002	BRACKET SCREW	5	33
	COVER FASTENING SCREW	53	16	13-26993	WASHER, BOTTOM COVER ATTACHING SCREWS	45	15
12-70988	WASHER, THUMB SCREW .		3	13-26994	LOCKWASHER, RETAINER	40	13
12-71143A1	WASHER, THRUST -		Ü	.0 _000 .	SCREW	39	11
	BEARING CARRIER TO			13-26995	LOCKWASHER, FLOAT		
	GEAR HOUSING	97	65		BOWL COVER SCREW	35	14
12-76388	WASHER, TILT LOCK	<b></b>	055	13-26996	LOCKWAHSER, WIRING	0.4	_
12 26002	(STARBOAR SIDE ONLY)	75	25B	12 26006	HARNESS CLAMP SCREW	21	5
13-26992	LOCKWAHSER, COIL  MOUNTING BRACKET	15	3	13-26996	LOCKWASHER, IGNITION COIL TERMINAL (#10)	15	13
	MODITINO DIVIDILE	10	J		3312 121(Will V. (π10)		

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
13-26996	LOCKWASHER, RETAINING PLATE AND CAM SCREW	107	28	15-47248A1	SHIM, END CAP TO CRANKCASE (.002-3-5-10)	51	5
13-26996	LOCKWASHER, SOLENOID TERMINAL	25	2	15-55853	SHIM BALL BEARING TO DISTRIBUTOR HOUSING .	11	8
13-26996	LOCKWASHER, SOLENOID TERMINAL (#10)		32	15-57007A1	SHIM, ROLLER BEARING TO WATER PUMP BASE	85	11
13-26996	LOCKWASHER, STARTER SOLENOID TERMINAL			16-21085	STUD, ADJUSTING - CUT- OUT LIMIT SWITCH		
13-26996	(#10) LOCKWASHER, STRAP SCRW		29 21	16-30667	(15/16")	107	23
13-26996	LOCKWASHER, THROTTLE ACTUATOR PLATE	20	21	16-34378	HOUSING (3 1/8") STUD, DIRVE SHAFT	85	6
	FASTENING SCREW	17	31		HOUSING PLATE (2 5/16")	79	4
13-26996 13-27660	LOCKWASHER, THRU BOLT LOCKWASHER, HYDRAULIC	101	18	16-39937	STUD, CHOKE ROD SPRING TO CARBURETOR (7/8") .	27	33
13-27959	PUMP THRU BOLT WASHER, WAVE -	105	40	16-45282	STUD, MOUNTING BRACKET AND CLAMP BRACKET	107	16
	DISTRIBUTOR BALL BEARING BEARING TENSION	19	49	16-52898	STUD, CARBURETOR - CHOKE SHUTTER PIVOT (1 1/8")	27	26
13-29720	WASHER, WAVE - LINK ROD	63	23	16-55422	STUD, CONTROL PANEL TO		
13-37371	LOCKWASHER, SHIELD SCREW	3	8	16-56295	BAOT (2")	105	43
13-39107	LOCKWASHER, MOUNTING BRACKET SCREW	103	24		HOUSING TO GEAR HOUSING (2 11/16")	79	2
13-39107	LOCKWASHER, RETAINER TO TOP COWL SCREW	3	5	16-56297	STUD, WATER PUMP BASE AND BODY TO GEAR		
13-39954	WASHER, WAVE - THROTTLE CONTROL			16-57920	HOUSING (3 3/8") STUD, GEAR HOUSING TO	85	5
13-69150	LEVER SWIVEL WASHER, WAVE - TILT		15		DRIVE SHAFT HOUSING (2 1/16")	85	4
13-69150	LOCK WASHER, WAVE - TILT LOCK (STARBOARD SIDE		25	16-57921	STUD, GEAR HOUSING TO DRIVE SHAFT HOUSING (4")	85	3
14-20091	ONLY) SER GROUP #19 . TAB WASHER, BEARING		25	16-59625	STUD, CLAMP BRACKET (NOT USED WITH FULL	70	0
14-27960	LOCKING SCREW TAB WASHER, ADAPTOR		21	16-64280	POWER TRIM) STUD, CARBURATOR		
14-31210	CAP FASENING TAB WASHER, PROPELLER	19	48	16-64281	MOUNTING (1 3/16") STUD, CRANKCASE TO	43	4
14-52700	NUT TAB WASHER, GEAR	99	82		EXHA8UST EXTENSION PLATE (1 7/8")	43	5
15-20085A1	HOUSING COVER SHIM, END CAP TO		72	16-64282	STUD, CYLINDER BLOCK TO DRIVE SHAFT HSG. (4") -	40	
15-21148A1	CRANKCASE (.002-3-5-10) SHIM, BALL BEARING TO	51	11	17-20032	LONG SHAFT DOWEL PIN, CENTER MAIN	43	8
15-29955A1	SPACER	11	10	17-20032 17-23784	BEARINGDOWEL PIN, MAIN BEARING DOWEL PIN, DRIVE SHAFT	57 57	8 16
15-30278A1	20)SHIM, DRIVE SHAFT BALL	95	64	17-23784	HOUSING PLATE  DOWEL PIN, EXHAUST	67	17
10 00270/11	BRG. TO GEAR HSG. (.002-3-5-10)	85	11	17-25598	EXTENSION PLATE PIN, RAVERSE LOCK	65	6
15-30278A1	SHIM, WATER PUMP BASE TO GEAR HSG. (.002-3-5-				SPRING (NOT USED WITH FULL POWER TRIM)	69	9
15-30923A1	10)	85	11	17-26618	PIN, DOWEL - PULLEY TO FLYWHEEL	9	7
	RACE TO GEAR HSG. (.002-3-5-10)	95	55	17-27961	PIN, ECONOMIZER COLLAR - SPRING RETAINER	17	7

Part Number	Description	Pg.	Ref. No.	Part Number	Description	Pg.	Ref. No.
17-27962	PIN, ANCHOR SPRING - DISTRIBUTOR HOUSING .	17	3	21-56011A2 21-56011A2	CHECK VALVE ASSEMBLY . CHECK VALVE ASSEMBLY .	47 47	30 36
17-29077	ROLL PIN, TENSION SPRING TO KNOB	7	6	21-56011A2	CHECK VALVE ASSEMBLY, END CAP	51	8
17-29908	PIN, ROLL - FLANGE LOCATING		53	22-20781 22-20781	ELBOW, BALANCE HOSE ELBOW, BALANCE TUBE TO	47	39
17-30632	PIN, CROSS - RATCHET TO PROPELLER SHAFT		60	22-20931	MAIN BEARING SCRW TEE, BALANCE HOSE	47 49	32 41
17-35973	DOWEL PIN, WATER PUMP BASE TO WATER PUMP	55	00	22-25094	FITTING, GREASE - DISTRIBUTOR ADAPTOR	19	36
17-38311	BODY PIN, COIL SPRING	89	19	22-25094	FITTING, GREASE - ECONOMIZER COLLAR	17	8
17-39023	MOUNTING PIN, PUSH ROD TO	73	18	22-25885	ELBOW, TELL TALE HOSE TO EXHAUST COVER	61	16
17-46912	REVERSE LOCK DOWEL PIN, GEAR	81	18	22-29085	ELBOW, FUEL LINE TO CARBURETOR (45)	33	17
17-47175	HOUSING LOCATING PIN, LOCKING LEVER AND	85	2	22-30174	ELBOW, UPPER CARBURETOR STRAINER		
17-47246	COVER FASTENING  DOWEL PIN, STEPPED		27 12	22-30175	COVER (90) SLEEVE, CARBURETOR	33	11
17-49840A1	SWIVEL PIN AND ARM ASSEMBLY (LONG				STRAINER COVER ELBOW	33	12
17-49841A1	SHAFT) SWIVEL PIN AND ARM	69	14	22-30175	SLEEVE, CARBURETOR STRAINER COVER		
	ASSEMBLY (SHORT SHAFT) - YOKE IS			22-30177	RUT, TOP AND BOTTOM	33	12
17-49930A1	ATTACHED TILT LOCK PIN ASSEMBLY (NOT USED WIHT FULL	69	14	22-30177	PUMP FITTING  NUT, UPPER CARBURETOR  STRAINER COVER	33	23
17-54944	POWER TRIM) RIVET, SCREEEN	73	12	22-30468	ELBOW	33	13
17-58998	ATTACHING - LOUVERED PIN, TOLL - COWL LATCH	7	18	22-30400	PUMPPLUG, PIPE - BOTTOM	33	21
17-63442	LEVER TO HINGE PIN, MOUNTING TUBE	3 109	12 46	22-32802	PUMPPLUG, PIPE - CYLINDER	33	9
17-63779	PIN, DOWEL-CRANKCASE TO CYLINDER BLOCK		6	22-32802	BLOCK COVER PLUG, PIPE - EXHUAST	53	27
17-63779	PIN, DOWWEL-DYLINDER BLOCK TO MAIN BEARING		7	22-38609	MANIFOLD COVER PLUG, CONTROL VALVE	53	22
17-73593A1	SWIVEL PIN AND ARM ASSEMBLY (LONG			22-46008	(3/8-24") PLUG, CONTROL VALVE	103	16
17-73594A1	SHAFT)	71	14	22-63981	(1/2-20")ELBOW, FUEL LINE TO	103	17
	ASSEMBLY (SHORT SHAFT)	71	14	22-64704	ADAPTOR FITTING, ELBOW - LOWER	39	24
18-25191	COTTER PIN, PUSH ROD PIN	81	19	22-64704	CARBURETOR	39 39	31 14
18-36391	COTTER PIN, MOUNTING TUBE PIN	109	47	22-64704 22-64704	FITTING, PULSE LINE (90) . FITTING, PULSE LINE TO	39	18
18-45882	COTTER PIN, REVERSE LOCK TO SHAFT	75	30	22-64706	TRANSFER COVER (90) . FITTING, TEE - CENTER	39	22
18-47959 19-45907	COTTER PIN, TILT LOCK PLUG, FLYWHEEL PULLER THREADS	75 9	26 1	22-65348	CARBURETOR TEE, BLEED HOSE TO CYLINDER BLOCK -	39	30
19-48750	PLUG, GEAR HOUSING FLUSHING HOLE	91	49	22-65349	LOWER TEE, BLEED HOSE TO	47	34
19-64649	PLUG, PLASTIC - TRIM TAB SCREW HOLE	79	3		CYLINDER BLOCK - CENTER	47	33
21-30430A3 21-30430A7	CHECK VALVE ASSEMBLY . CHECK VALVE ASSEMBLY .	33 39	2 2	22-65350	FITTING, UPPER CYLINDER BLEED	47	28

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
22-65350A1	CHECK VALVE ASSEMBLY, BLEED HOSE	47	29	23-59624	SPACER, CLAMP BRACKET STUD	73	8
22-65350A2	CONNECTOR ASSEMBLY,			23-622381	SLEEVE, SPARK PLUG LEAD	73	
22-65670A1	BLEED HOSE - UPPER CONNECTOR ASSEMBLY,		35	23-69132	(7") BUSHING, REVERSE LOCK	11	28A
22-66328	BLEED HOSE - LOWER FITTING, TEE - UPPER	47	38	23-69341	PIVOT SHAFTBUSHING, SWIVEL	69	2
22-67892	CARBURETOR SCREW, DRAIN (MAGNETIC)	39	29		BRACKET	69	3
	QUANTITY IS 1	91	47	23-70412	SPACER, ROLLER BEARING TO WATER PUMP BASE .	85	11
22-69059	FITTING, GREASE - SWIVEL BRACKET	69	7	23-73203	SPACER, UPPER SHOCK		
22-74036	FITTING, GREASE	107	1A		BUSHING TO CLAMP BRACKET	77	37
22-74036	FITTING, GREASE - SWIVEL BRACKET	69	7	24-20099	SPRING, LINK ROD TO		0.4
22-74036	FITTING, GREASE - SWIVEL		7	24-23015	GUIDE BLOCK SCREW, UPPER CARB.	63	31
23-26600	BRACKET		7 18		FILTER SCREEN TO		
23-27132	BUSHING, NYLON -			04.00007	CARB. (1")		29
	EXHAUST EXTENSION			24-23067 24-24390	SPRING, ADAPTOR STEM . SPRING, TENSION -	41	35
00 00400	PLATE	65	2	24-24390	ADJUSTING STUD	107	22
23-28198	BUSHING, RUBBER - SHOCK ABSORBER (LOWER)	75	36	24-27944	SPRING, HORSESHOE -	107	~~
23-28199	SPACER, UPPER SHOCK	75	30		DISTRIBUTOR HOUSING .	17	4
20 20100	BUSHING TO CLAMP			24-28659	SPRING, COIL - SWIVEL		
	BRACKET-SERIAL.				BRACKET	73	17
	GROUP #18	77	37	24-28975	SPRING, GARTER -		
23-28688	SPACER, RUBBER - COIL				INTERNAL WIRING		
00 00004	SPRING POSITIONING	73	19		HARNESS	21	7
23-29804	SLEEVE, GUIDE - WATER	00	20	24-29821	SPRING, REVERSE LOCK	75	00
23-32171	INLET TUBE BUSHIG, RUBBER - SHOCK	89	36	24-30189	TENSION	75 33	28 27
20-02171	ABSORBER (UPPER)	75	35	24-30189	SPRING, ADAPTOR STEM . SPRING, ADAPTOR STEM .		35
23-32427	SPACER, CHOKE ROD			24-30622	SPRING, COMPRESS - CAM	00	00
	SPRING STUD	27	34		FOLLOWER	95	54
23-35977	GROMMET, RUBBER - LIFT			24-30772	SPRING, TENSION -		
	HOSE AND TRIM HOSE	109	43		FASTENING KNOB	7	5
23-37448	OIL SEAL, SWIVEL	00	_	24-30893	SRPING, RETAINING -		
23-45280	BRACKET	69	5		CROSS PIN	95	61
23-43200	- LOWER	107	5	24-35522	SPRING, TENSION - LOWER		
23-45281	BUSHING, RUBBER - SHOCK		Ū	04 45070	MOUNT CLAMP	81	35
	CYLINDER	107	6	24-45272	SPRING, TENSION - LIMIT SWITCH PLUNGER	107	15
23-45354	BUSHING, RUBBER - CUT-			24-48230	SPRING, CHOKE ROD	107	15
	OUT LIMIT SWITCH	107	30	24-40230	TENSION	27	32
23-45818	BUSHING, THROTTLE	47	00	24-57818	SPRING, UPPER FILTER		02
22 47250	CONTROL LEVER SCREW	17	20 51		SCREEN SCREW	27	30
23-47250 23-47803	SPACER, DRIVE PULLEY BUSHING, TILT LOCK	19 75	51 24	24-68434	SPRING, PULSE LINE		19
23-48674	SPACER, THROTTLE	75	24	25-20116	GROMMET, CHOKE ROD		18
25-40074	ACTUATOR PLATE			25-20415	"O" RING, ADAPTOR STEM .	33	28
	SCREW	17	32	25-20415	"O" RING, ADAPTOR STEM .	41	36
23-52933	SPACER, COIL BRACKET TO	••	<u></u>	25-21720	"O" RING, CONTROL VALVE		
	BOTTOM COWL	15	5		TO MANIFOLD PLATE		
23-53538	SPACER, ROTOR SHAFT	11	11		(1/2"O.D.)	103	12
23-53539	SLEEVE, ROTOR SHAFT	11	3	25-21720	"O" RING, HYDRAULIC		
23-55419A1	BUSHING ASSEMBLY, SHIFT	_		0=	PUMP	101	1
00.5077.	SHAFT	91	42	25-21720	"O" RING, HYDRAULIC		
23-56774	SPACER, COLLAR TO TOP	24	22		PUMP TO MANIFOLD	102	
	MOUNTING CAP	21	23		PLATE	103	

Part Number	Description	Pg.	Ref. No.	Part Number	Description	Pg.	Ref. No.
25-25439	"O" RING, SHIFT SHAFT	04	44	27-32438	GASKET, WATER PUMP	07	4.4
25-26547	BUSHING GROMMET, SPARK PLUG	91	41	27-33146	BASE TO GEAR HOUSING GASKET, WATER PUMP	87	14
	LEADS	13	29		BASE TO GEAR HOUSING	87	14
25-26547	GROMMETT, HIGH TENSION	44	40	27-45274	GASKET, INLET COVER	109	36
25-29976	CABLE	11	19	27-45275	GASKET, LIMIT SWITCH	407	00
25-29976	CARRIER	97	67	27-48164	COVER	107	33
25-30224	"O" RING, WATER PUMP	31	01	21-40104	FLANGE	31	36
	BASE	87	15	27-48164	GASKET, CARBURETOR	31	50
25-30271	RING, RUBBER -				FLANGE	37	33
	CENTRIFUGAL SLINGER			27-53862	GASKET, CRANKCASE TO		
	(DRIVE SHAFT)	89	35		CYLINDER BLOCK	43	2
25-32546	"O" RING, BEARING			27-55896	GASKET, DISTRIBUTOR CAP	11	24
	CARRIER (USE WITH A73800A1 ONLY)	99		27-60475	GASKET, WATER JACKET		
25-32546	"O" RING, END CAP		10	07.00470	COVER	51	14
25-33145	"O" RING, WATER PUMP	01	.0	27-60476	GASKET, CYLINDER BLOCK	<b>E</b> 2	17
	BASE	87	15	27-60476A73	TO BAFFLE PLATE GASKET SET (MOTOR	53	17
25-45016	"O" RING, SHOCK CYLINDER			21-00-10/13	OVERHAUL)	1	_
	BLEED SCREW	107	3	27-60476A74	GASKET SET (MOTOR	-	
25-45253	"O" RING, CONTROL VALVE				OVERHAUL)	1	-
	TO MANIFOLD PLATE	100	10	27-60476A75	GASKET SET (MOTOR		
25-45254	(5/8"O.D.)	103	13		OVERHAUL)	1	-
20-40204	TO MANIFOLD PLATE			27-60477	GASKET, BAFFLE PLATE TO		
	(3/4"O.D.)	103	11		EXHAUST MANIFOLD	<b>-</b> -2	40
25-45507	GROMMET, RUBBER - INLET			27-60945	COVER	53	19
	COVER	109	37	21-00943	SHAFT HSG. PLATE	65	11
25-47254	"O" RING	51	4	27-62362	GASKET, MEGAPHONE TO	00	• •
25-57806	GROMMET, PLASTIC - TRIM	70	C A		DRIVE SHAFT HOUSING		
25-62702	COVER SCREW "O" RING, TILT LOCK	79 75	6A 25C		PLATE	67	18
26-22734	OIL SEAL, SWIVEL	7.5	200	27-64173	GASKET, POWERHEAD TO		
	BRACKET (TILT LOCK)	75	25A	07.04475	EXTENSION PLATE	65	7
26-24590	OIL SEAL, SHIFT SHAFT			27-64175	GASKET, PLATE TO DRIVE	70	10
	HOUSING (LOWER)	91	43	27-64940	SHAFT HOUSING GASKET, CYLINDER BLOCK	79	13
26-29476	OIL SEAL, END CAP		3	21-04940	COVER	53	24
26-29476 26-31249	OIL SEAL, END CAP OIL SEAL, SHIFT SHAFT	51	9	27-64941	GASKET, TRANSFER	00	- '
20-31249	HOUSING (UPPER)	91	43		COVER	53	31
26-31489	OIL SEAL, WATER PUMP	0.1	10	27-66101	GASKET, POWERHEAD TO		
	BASE	89	17		EXTENSION PLATE	65	7
26-31507	OIL SEAL, WATER PUMP			27-66102	GASKET, PLATE TO DRIVE	0=	
	BASE	89	18	27 66225	SHAFT HSG. PLATE	65	11
26-38970	SEAL, RUBBER - WATER	00	00	27-66335	GASKET, PLATE TO DRIVE SHAT HOUSING	81	13
26-38970	INLET TUBE	89	26	27-69238	GASKET, POWERHEAD TO	01	13
20-30970	SEAL, RUBBER - WATER INTAKE TUBE (DRIVE			21 00200	EXTENSION PLATE	65	7
	SHAFT HSG.)	67	16	27-72142	GASKET, WATER JACKET		
26-60898	SEAL, DRIVE SHAFT	٠.	. 0		COVER	53	14
	HOUSING PLATE	65	14	28-29910	KEY, DISTRIBUTOR DRIVER	19	55
26-70608	OIL SEAL, STARBOARD			28-30281	KEY, LOCATING - BEARING		
	MOUNTING BRACKET	107	13		CARRIER	99	71
26-76868	OIL SEAL, BEARING	00	70	28-56654	KEY, IMPELLER DRIVE	89	28
27-32433	CARRIER	99	70	29-47270	BEARING, NEEDLE - PISTON PIN	59	30
Z1-0Z400	PUMP BASE TO FACE			29-52168	BEARNG, NEEDLE - OUTER	Jä	50
	PLATE	89	20	20 02 100	RACE	57	9

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
30-26379	BALL BEARING, DISTRIBUTOR HOUSING			32-63146 33-59599	PULSE LINE (3 1/4") SPARK PLUG (CHAMPION L-	39	20
30-31265	(LOWER)		9	33-68057	77V)	11	25
30-62567	GEAR		66 3	34-65312A1	76V)	11	25
30-63326	BEARING, BALL - DRIVE SHAFT	85	12	34-65319	MAIN BEARING REED STOP, MAIN BEARING	57	19
30-63742 31-30894A1	BEARING, BALL - LOWER TAPERED ROLLER BEARING	57	4	35-57819	REED VALVES	57	20
31-30895	ASSEMBLY	95	56	35-59072	FILTER - CARBURETOR	27 39	28 8
31-30956	FORWARD GEAR BEARING, ROLLER -	95	57	37-55901	DECAL, INSTRUCTION - HYDRAULIC PUMP	103	6
31-32898	BEARING CARRIER BEARING, ROLLER - DRIVE	97	69	37-60204 37-64309A73	DECAL SET	3	17 -
31-62596A1	SHAFTBEARING ASSEMBLY,	85	7	37-65601 37-66318A74	DECAL, TIMING - FLYWHEEL DECAL SET	3	17 -
31-69220	CRANKPIN ROLLER BEARING, DRIVE	57	27	37-70140A75 37-73291	DECAL SET  DECAL, TIMING - FLYWHEEL	1 3	- 17
32-31584A1	SHAFT	85	12	37-73891A76	DECAL SET(MERC 1500 LONG)	1	-
	CARBURETOR TO CARBURETOR (6 9/16")	33	18	37-74301A76 37-74301A77	DECAL SET(MERC 1500 XS) DECAL SET(MERC 1500	1	-
32-33154A1	FUEL LINE ASSEMBLY, PUMP TO CARBURETOR			37-74301A77	LONG) DECAL SET(MERC 1500XS)	1 1	-
32-33960	(14 1/8")	33	10	39-45155A12 39-45204A12	RING, PISTON (1/16" THICK) RING, PISTON (1/16" THICK)	57 59	25 
32-34395A1	BEARINGS (6 1/4") HOSE, BALANCE - MAIN	47	31	39-49839A12 39-64715A12	RING, PISTON (1/16" THICK) RING, PISTON (1/16" THICK)	59 57	 25
32-34395A1	BEARING (6 1/4") HOSE, DRIP TRAY TO	47	40	40-52035 43-26995	LOCK RING, PISTON PIN LOCKWASHER, FLOAT	57	24
	BOTTOM COWL (8")	61	5	43-66342	BOWL COVER SCREW FORWARD GEAR	29	12
32-34395A1	HOSE, TELL TALE - EXHAUST COVER TO	0.4	40	43-68015	ASSEMBLY REVERSE GEAR ASSEMBLY	95 95	58 63
32-45327	BOTTOM COWL (16") HOSE, TRIM - CYLINDER TO CONTROL VALVE (5') -	61	13	43-68347 43-68447	REVERSE GEAR ASSEMBLY FORWARD GEAR	95	63
32-45959	13/32" O.D	109	41	43-68548	ASSEMBLY	95	58
02 40000	CONTROL VALVE (5') - 17/32" O.D	109	12	44-52542	SHAFT SHAFT, PROPELLER	85 95	9 62
32-54936	HOSE, BLEED (22")	47	37	45-64388	DRIVE SHAFT (SHORT SHAFT)	85	8
32-54936	HOSE, BLEED (7 1/2", 6 1/2" AND 10")	47	27	45-64389	DRIVE SHAFT (LONG SHAFT)	85	8
32-55827A1	FUEL LINE ASS'Y, PUMP TO CARB. (9 1/2")	33	19	45-69250	DRIVE SHAFT (SHORT SHAFT)	85	8
32-55828A1	FUEL LINE ASS'Y, PUMP TO PUMP (13 3/4")	33	20	45-69251	DRIVE SHAFT (LONG SHAFT)	85	8
32-55829	FUEL LINE, ADAPTOR TO LOWER FUEL PUMP (15")	33	24	46-48747A1	WATER PUMP BASE ASSEMBLY	89	16
32-60897	TUBE, WATER INLET - LONG SHAFT	79	7	46-64141A1	WATER PUMP BODY ASSEMBLY	89	23
32-62864	TUBE, WATER INLET - SHORT SHAFT	79	7	46-69222A1	WATER PUMP BASE ASSEMBLY (WITH FLUSH		
32-63146	FUEL LINE, ADAPTOR TO FUEL PUMP (6 3/4")	39	23	46-73804A1	HOLE)	89	16
32-63146	FUEL LINE, CARBURETOR TO CARBURETOR (6 1/4")	39	32		ASSEMBLY (WITHOUT FLUSH HOLE)	89	16

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
47-65960 50-57465A1	IMPELLER, WATER PUMP . STARTER MOTOR	89	27	84-66054A2	CABLE ASSEMBLY, COIL TO SWITCH BOX	15	15
50-64975	ASSEMBLYSTARTER MOTOR	21	25	84-69207A1	CABLE ASSEMBLY, CAP TO COIL	11	18
50-72467	ASSEMBLY(PRESTOLITE) ATARTER MOTOR	21	25	84-69236	WIRING HARNESS, INTERNAL	21	1
52-34239	ASSEMBLY(BOSCH) RATCHET, SLIDING CLUTCH	21 95	25 59	84-69237	CABLE, WERIE - STARTER MOTOR TO SOLENOID	23	34
53-26406	RING, RETAINER - BALL BEARING TO	55	00	85-71006A1	PROTECTOR, SPARK PLUG LEAD	11	27
53-26933	DISTRIBUTOR HOUSING . RING, SNAP - OUTER RACE	11 57	12 11	85-76199	INSULATOR, STOP BRACKET ADJUSTING		
53-29641	"E" RING, RETAINING -			89-68258	SCREWSOLENOID, STARTER	19 21	44B 28
53-30726	SHIFT SHAFT RING, RETAINING - BALL	91	40	90-63293 225-2494A14	MERC 1500 PARTS LIST FLYWHEEL ASSEMBLY,		-
53-73591	BEARING	85	13	225-2494A14 225-2494A30	COMPLETE	9	4
54-20386	YOKE ATTACHING CLAMP, BALANCE TUBE TO	71	16A		COMPLETE	9	4
54-20387	ELBOW AND TEE CLAMP, BLEED HOSE TO	47	26	332-2854	BOOT, HIGH TENSION CABLE TO COIL	11	20
54-22627	CONNECTOR CLIP, FUEL LINE	47	25	332-2910A3 332-2983A5	RECTIFIER ASSEMBLY IGNITION COIL ASSEMBLY,	23	38
54-22627	ATTACHING	39	26	332-2986A25	COMPLETESWITCH BOX ASSEMBLY(	15	1
54-22627	CYLINDER BLOCK CLIP, STATOR/WIRING	33	14	332-4895A2	MERC1500XS) IGNITION COIL ASSEMBLY .	21 15	15 7
0 <del>1</del> -22021	HARNESS LEADS	0	1.4	392-2529	SPRING SET, BRUSH TENSION	101	16
54-22875	FASTENING (1/2") CLIP, WIRING HARNESS TO		14	392-2618 392-2623	CAN, VALVE BODY WASHER, THRUST -	101	3
54-24871	FRONT BRACKET (5/8") CLIP, STATOR LEAD		10	392-2936	ARMATUREVALVE BODY AND GEAR	101	10
54-46770	FASTENING (5/8") CLAMP, HARNESS		14	392-2937	ASSEMBLY SEAL, RESERVIOR TO	101	2
54-60768	FASTENING CLAMP, DISTRIBUTOR CAP	105	52	392-2938	VALVE BODY AND GEAR BOLT SET, THRU - PLATE	101	5
54-68424	TO DISTRIBUTOR HSG CLAMP, FUEL LINE	11	15	002 2000	AND FRAME TO RESERVOIR	101	17
	ATTACHING	39	21	392-2939	RESERVIOR ASSEMBLY	101	
54-76368	CLAMP, WIRING HARNESS TO BOTTOM COWL	21	3	392-2940	PLATE ASSEMBLY, COMMUTATOR END	101	14
55-28414	PIN, LOWER SHOCK MOUNTING - LONG			392-2941	BRUSH SET, COMMUTATOR END PLATE	101	15
55-28416	SHAFT PIN, UPPER SHOCK	75	31	392-2942	FIELD AND FRAME ASSEMBLY	101	12
55-58780A2	MOUNTING	73 75	16 34	392-2943	ARMATURE, FIELD AND		
55-65447	PIN, LOWER SHOCK MOUNTING (SHORT	75	04	392-2944	FRAMEBALL, COMMUTATOR END	101	11
62.25224.4	SHAFT)	75	31	393-1293A1	PLATEBRUSH AND SPRING	101	13
62-252341	GLUE, ADHESIVE - BLANKET FASTENING	7		393-3736A23	ASSEMBLY HOUSING ASSEMBLY,	11	
76-F66193	STUD, CYLINDER BLOCK TO DRIVE SHAFT HSG. (4		_	393-3736A23	DISTRIBUTOR HOUSING ASSEMBLY,	11	4
84-60466A1	3/16") CABLE ASSEMBLY	43 15	8 12	393-3836A1	DISTRIBUTOR CABLE ASSEMBLY, CAP TO	17	1
84-63212A2	SPARK PLUG LEAD			000 1010	COIL	11	18
	ASEMBLY #1, #2, #3, #4, #5 AND #6	11	26	393-4312 393-4313	ROTOR, DISTRIBUTOR DISC, ROTOR	11 11	14 13

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
393-4841A2	DISTRIIBUTOR CAP			852-6451A3	CYLINDER BLOCK AND		
000 1700	ASSEMBLY		22		CRANKCASE ASS'Y	40	
398-4793	STATOR, ALTERNATOR		11	050 0454 40	(MAERC 1500XS)	43	1
436-4842A3 535-3190A2	CRANKSHAFT ASSEMBLY . CENTER MAIN BEARING	57	1	852-6451A3	CYLINDER BLOCK AND CRANKCASE ASS'Y		
333-3130AZ	ASSEMBLY	57	7		(MERC 1500 XS)	51	1
535-5397A4	CENTER MAIN BEARING	-	•	1023-5070	COVER, CYLINDER BLOCK .		23
	ASSEMBLY	57	7	1134-3197A1	END CAP ASSEMBLY,		
540-5039A4	MAIN BEARING ASSEMBLY,				UPPER	51	2
E40 E000A4	VALVE TYPE	57	15	1148-4594A1	END CAP ASSEMBLY,	<b>-</b> 4	7
540-5266A4	MAIN BEARING ASSEMBLY, VALVE TYPE	57	15	1148-5410A1	LOWEREND CAP ASSEMBLY,	51	7
622-4850A3	CONNECTING ROD AND	31	10	1140-0410/11	LOWER	51	7
022 1000/10	CAP ASSEMBLY	57	26	1368-5038A1	CARBURETOR ASSEMBLY,	0.	•
745-6605A3	PISTON AND PISTON PIN				COMPLETE	25	9
	ASSEMBLY	57	23	1368-5038A1	CARURETOR ASSEMBLY		
745-6697A2	PISTON AND PISTON PIN			4000 5050444	(WMK-11)	29	1
852-5033A11	ASSSEMBLY CYLINDER BLOCK AND	59		1368-5259A11	CARBURETOR ASSEMBLY( LONG SHAFT)	35	1
002-0033A11	CRANKCASE ASS'Y	43	1	1368-5259A11	CARBURETOR ASSEMBLY,	33	ı
852-5033A11	CYLINDER BLOCK AND	.0	•	1000 02007111	COMPLETE	25	9
	CRANKCASE ASS'Y	51	1	1368-5259A16	CARBURETOR ASSEMBLY(		
852-5033A5	CYLINDER BLOCK AND				SHORT SHAFT)	35	1
050 500045	CRANCASE ASS'Y	51	1	1368-5259A16	CARBURETOR ASSEMBLY,		
852-5033A5	CYLINDER BLOCK AND CRANKCASE ASS'Y	12	1		COMPLETE(MERC 1500XS)	25	9
852-5264A5	CYLINDER BLOCK AND	43	ı	1368-5701A13	CARBURETOR ASSEMBLY(	25	9
002 020 17 10	CRANKCASE ASS'Y	43	1	1000 07017110	LONG SHAFT)	35	1
852-5264A5	CYLINDER BLOCK AND			1368-5701A13	CARBURETOR ASSEMBLY,		
	CRANKCASE ASS'Y	51	1		COMPLETE	25	9
852-5574A1	CYLINDER BLOCK AND	40		1368-5701A5	CARBURETOR ASSEMBLY(		
852-5574A1	CRANKCASE ASS'Y CYLINDER BLOCK AND	43	1	1368-5701A5	LONG SHAFT) CARBURETOR ASSEMBLY,	35	1
652-5574A1	CRANKCASE ASS'Y	51	1	1300-3701A3	COMPLETE	25	9
852-5595A3	CYLINDER BLOCK AND	0.	•	1395-4540	SCREW, BODY (IDLE TUBE)	29	23
	CRANKCASE ASS'Y			1395-4540	SCREW, BODY (IDLE TUBE)	35	20
	(MERC 1500XS)	43	1	1395-4541	SCREW, PLUG - MAIN FUEL		
852-5595A3	CYLINDER BLOCK AND			4005 4544	JET CHANNEL	29	28
	CRANKCASE ASS'Y (MERC 1500XS)	13	1	1395-4541	SCREW, PLUG - MAIN FUEL JET CHANNEL	37	28
852-5595A3	CYLINDER BLOCK AND	40	•	1395-4542	SCREW, PLUG - MAIN	31	20
	CRANKCASE ASS'Y				NOZZLE	29	32
	(MERC 1500XS)	51	1	1395-4542	SCREW, PLUG - MAIN		
852-5604A3	CYLINDER BLOCK AND			1005 15 10	NOZZLE	37	26
	CRANKCASE ASS'Y	42	4	1395-4543	SCREW, BODY CHANNEL		35
852-5604A3	(MERC 1500XS) CYLINDER BLOCK AND	43	1	1395-4543 1395-4543	SCREW, BODY CHANNEL SCREW, BODY CHANNEL		31 31
002-000 <del>1</del> /10	CRANKCASE ASS'Y			1395-4804	SCREW, FLOAT BOWL	31	31
	(MERC 1500XS)	51	1		COVER	35	13
852-6068A3	CYLINDER BLOCK AND			1395-4805	SCREEN, FILTER	35	15
	CRANKCASE ASS'Y			1395-4808	GASKET AND PAKCING SET		
050 0404 44	(MERC 1500XS)	51	1	4205 4000	(1 PER CARBURETOR)	37	
852-6191A1	CYLINDER BLOCK AND CRANKCASE ASS'Y	43	1	1395-4868	INLET NEEDLE, SEAT AND GASKET	35	6
852-6191A1	CYLINDER BLOCK AND	70	ı	1395-5107	REPAIR PARTS KIT (1 PER	55	U
	CRANKCASE ASS'Y	51	1		CARBURETOR)	31	
852-6431A1	CYLINDER BLOCK AND			1395-5108	SHUTTER, THROTTLE		25
050 640444	CRANKCASE ASS'Y	43	1	1395-5261	COVER, FLOAT BOWL	6-	•
852-6431A1	CYLINDER BLOCK AND	<b>5</b> 1	1	1205 5252	(SHORT SHAFT AND ) FLOAT ASSEMBLY	35 35	9 2
	CRANKCASE ASS'Y	51	1	1395-5353	I LOAT ASSEMBLT	33	2

			Ref.				Ref.
Part Number	Description	Pg.	No.	Part Number	Description	Pg.	No.
1395-5355	REPAIR PARTS KIT (1 PER CARBURETOR)-LONG			1573-4933A3	DRIVE SHAFT HOUSING ASSEMBLY (LONG		
120F F666	SHAFTSHUTTER, THROTTLE	37 35	 21	1572 522014	SHAFT)	79	1
1395-5666 1395-5672	REPAIR PARTS KIT (1 PER CARBURETOR)-SHORT	35	21	1573-5239A4	DRIVE SHAFT HOUSING ASSEMBLY (LONG SHAFT)	79	1
	SHAFT	37		1575-4971A5	DRIVE SHAFT HOUSING	13	'
1395-5680	COVER, FLOAT BOWL	35	10		ASSEMBLY (SHORT		
1395-5733	JET, BOWL VENT	35	11		SHAFT	79	1
1395-5734	HOSE, ECONOMIZER	35	12	1575-5240A4	DRIVE SHAFT HOUSING		
1395-6468	REPAIR PARTS KIT (1 PER				ASSEMBLY (SHORT	70	
	CARBURETOR)-LONG SHAFT	37		1622 402446	SHAFT)	79 83	1 1
1399-110A1	FLOAT ASSEMBLY	37 29	2	1623-4934A6 1623-4934A6	GEAR HOUSING ASS'Y	89	1
1399-3515	SCREW, IDLE ADJUSTMENT	29	27	1623-4934A6	GEAR HOUSING ASS'Y	93	1
1399-3515	SCREW, IDLE ADJUSTMENT	35	24	1623-4934A6	GEAR HOUSING ASS'Y	97	1
1399-3518	JET, MAIN FUEL (.082)	29	30	1623-4934A8	GEAR HOUSING ASS'Y,		
1399-3518	JET, MAIN FUEL (.082) -				COMP. (SHORT SHAFT) .	83	-
	STANDARD (SHORT			1623-4934A8	GEAR HOUSING ASS'Y,		
4200 2540	RAFT)	37	27	4000 400440	COMP. (SHORT SHAFT) .	87	-
1399-3519	JET, MAIN FUEL (.080) - STANDARD	20	30	1623-4934A8	GEAR HOUSING ASS'Y, COMP. (SHORT SHAFT) .	93	_
1399-3519	JET, MAIN FUEL (.080) -	29	30	1623-4934A8	GEAR HOUSING ASS'Y,	93	-
1000 0010	STANDARD (LONG			1020 4004710	COMP. (SHORT SHAFT) .	95	_
	SHAFT)	37	27	1623-5244A5	GEAR HOUSING ASS'Y,		
1399-3520	JET, MAIN FUEL (.0785)		30		COMP (SHORT SHAFT)	83	-
1399-3520	JET, MAIN FUEL (.0785)	37	27	1623-5244A5	GEAR HOUSING ASS'Y,		
1399-3523	GASKET AND PACKAGING				COMP. (SHORT SHAFT) .	87	-
	SET (1 PER	04		1623-5244A5	GEAR HOUSING ASS'Y,	00	
1399-3527	CARBURETOR) SHAFT, THROTTLE	31 29	 21	1600 504445	COMP. (SHORT SHAFT) . GEAR HOUSING ASS'Y,	93	-
1399-3527	SHAFT, THROTTLE	29 35	18	1623-5244A5	COMP. (SHORT SHAFT) .	95	_
1399-3796	JET, MAIN FUEL (.076)	29	30	1623-5244A6	GEAR HOUSING ASS'Y	83	1
1399-3796	JET, MAIN FUEL (.076)	37	27	1623-5244A6	GEAR HOUSING ASS'Y	89	1
1399-3938	SCREEN, FILTER	29	14	1623-5244A6	GEAR HOUSING ASS'Y	93	1
1399-4559	COVER, FLOAT BOWL	29	9	1623-5244A6	GEAR HOUSING ASS'Y	97	1
1399-4791	COVER, STRAINER	29	16	1623-5829A6	GEAR HOUSING ASS'Y,		
1399-97	LEVER, THROTTLE STOP	29 25	20	1600 500046	COMP. (SHORT SHAFT) .	83	-
1399-97 1440-5520A1	LEVER, THROTTLE STOP CLAMP BRACKET	33	16	1623-5829A6	GEAR HOUSING ASS'Y, COMP. (SHORT SHAFT) .	27	_
1440-3320A1	ASSEMBLY	73	1	1623-5829A6	GEAR HOUSING ASS'Y,	01	-
1440-5576A1	CLAMP BRACKET		•	1020 0020/10	COMP. (SHORT SHAFT) .	93	-
	ASSEMBLY	73	1	1623-5829A6	GEAR HOÙSING ASS'Y,		
1440-6044A2	CLAMP BRACKET				COMP. (SHORT SHAFT) .	97	-
	ASSEMBLY	73	1	1623-5829A8	GEAR HOUSING ASS'Y	85	1
1447-5596A3	SWIVEL BRACKET			1623-5829A8	GEAR HOUSING ASS'Y		1
	ASSEMBLY (LONG SHAFT)	60	1	1623-5829A8 1623-5829A8	GEAR HOUSING ASS'Y GEAR HOUSING ASS'Y		1 1
1447-6017A4	SWIVEL BRACKET	09		1623-60484	GEAR HOUSING ASS'Y,	91	'
1447 001774	ASSEMBLY (LONG			1020 00404	COMP. (MERC 1500XS)	93	_
	SHAFT)	69	1	1623-6048A3	GEAR HOUSING ASS'Y		
1453-5597A2	SWIVEL BRACKKET				(MERC 1500XS)	85	1
	ASSEMBLY (SHOR			1623-6048A3	GEAR HOUSING ASS'Y		
	SHAFT)	69	1		(MERC 1500XS)	89	1
1453-6019A2	SWIVEL BRACKET			1623-6048A3	GEAR HOUSING ASS'Y	0.5	,
	ASSEMBLY (SHORT SHAFT)	60	1	1623-6048A3	(MERC 1500XS) GEAR HOUSING ASS'Y	95	1
1482-6386A4	SWIVEL BRACKET	υ <del>υ</del>	1	1023*0040A3	(MERC 1500XS)	97	1
1102 0000/14	ASSEMBLY (LONG			1623-6048A4	GEAR HOUSING ASS'Y,	51	'
	SHAFT)	69	1		COMP. (MERC 1500XS)	83	-
	·				,		

			Ref.				Ref.
Part Number	Description	Pg.		Part Number	Description	Pg.	No.
1623-6048A4	GEAR HOUSING ASS'Y, COMP. (MERC 1500XS)	83	_	1655-7333A45	GEAR HOUSING ASS'Y, COMP. (MERC 1500		
1623-6048A4	GEAR HOUSING ASS'Y,			4055 7000 445	LONG)	97	-
1623-6048A4	COMP. (MERC 1500XS) GEAR HOUSING ASS'Y,		-	1655-7333A45	GEAR HOUSING ASS'Y, COMP. (MERC 1500 LONG)	97	_
1623-6048A4	COMP. (MERC 1500XS) GEAR HOUSING ASS'Y, COMP. (MERC 1500XS)		-	2113-2663A18	COWL, FRONT COVER ASSEMBLY		1
1623-6048A4	GEAR HOUSING ASS'Y,		-	2113-5631A4	COWL FRONT COVER ASSEMBLY		1
1623-6048A4	COMP. (MERC 1500XS) GEAR HOUSING ASS'Y,		-	2114-3806 2114-5999	COWL, TOP	3	1 1
1623-6053A5	COMP. (MERC 1500XS) GEAR HOUSING ASS'Y	97	-	2115-3919 2115-5269	COWL, BOTTOM	61	1 1
1623-6053A5	(MERC 1500 LONG) GEAR HOUSING ASS'Y	85	1	2115-6462	COWL, BOTTOM		1
1623-6053A5	(MERC 1500 LONG) GEAR HOUSING ASS'Y	89	1	2136-4660A17	WRAP AROUND COWL ASSEMBLY - LOUVERED	7	15
	(MERC 1500 LONG)	95	1	2136-4660A4	WRAP AROUND COWL ASSEMBLY - NON		
1623-6053A5	GEAR HOUSING ASS'Y (MERC 1500 LONG)	97	1	3323-2986A21	LOUVEREDSWITCH BOX ASSEMBLY(	7	11
1655-7333A45	GEAR HOSUING ASS'Y COMP. (LONG SHAFT)	83	_	4395-4868	MERC 1500 LONG) INLET NEEDLE, SEAT AND	21	15
1655-7333A45	GEAR HOUSING ASS'Y, COMP (MERC 1500 LONG)	83	_	4333-4000	GASKET	29	6
1655-7333A45	GEAR HOUSING ASS'Y,		-				
1655-7333A45	COMP. (LONG SHAFT) GEAR HOUSING ASS'Y,		-				
1655-7333A45	COMP. (LONG SHAFT) GEAR HOUSING ASS'Y,	83	-				
1655-7333A45	COMP. (LONG SHAFT) GEAR HOUSING ASS'Y,	87	-				
1655-7333A45	COMP. (LONG SHAFT) GEAR HOUSING ASS'Y,	87	-				
	COMP. (LONG SHAFT)	87	-				
1655-7333A45	GEAR HOUSING ASS'Y, COMP. (LONG SHAFT)	93	-				
1655-7333A45	GEAR HOUSING ASS'Y, COMP. (LONG SHAFT)	93	_				
1655-7333A45	GEAR HOUSING ASS'Y, COMP. (LONG SHAFT)		_				
1655-7333A45	GEAR HOUSING ASS'Y,		-				
1655-7333A45	COMP. (LONG SHAFT) GEAR HOUSING ASS'Y,	95	-				
1655-7333A45	COMP. (LONG SHAFT) GEAR HOUSING ASS'Y,	97	-				
1655-7333A45	COMP. (LONG SHAFT) GEAR HOUSING ASS'Y,	97	-				
	COMP. (MERC 1500 LONG)	83	_				
1655-7333A45	GEAR HOUSING ASS'Y, COMP. (MERC 1500						
1655-7333A45	LONG) GEAR HOUSING ASS'Y,	87	-				
	COMP. (MERC 1500 LONG)	89	_				
1655-7333A45	GEAR HOUSING ASS'Y, COMP. (MERC 1500						
	LONG)	93	-				